



## TPM1.2 set-up and FAQs

**Agile X**

Type B7-A234-..../.....

**ATEX / IECEx Zone 2**

**IECEx Zone 2**

**UL Class I Division 2**

Revision 0 / Status: 15th May 2019

**Reservation:** We reserve the right to make technical modifications. Changes, errors and misprints shall not justify any claim for damages.

**BARTEC** GmbH

Max-Eyth-Straße 16  
97980 Bad Mergentheim,  
GERMANY

Phone: +49 (0) 7931 597-0  
Fax: +49 (0) 7931 597-119

Support: [em-support@bartec.com](mailto:em-support@bartec.com)  
Download: <http://automation.bartec.de>  
Internet: [www.bartec.de](http://www.bartec.de)

## Table of contents

Table of contents.....	2
1. TPM1.2 .....	3

# 1. TPM1.2


TPM = Trusted Platform Module

The Agile X series support the TPM1.2 version.


In default setting is TPM1.2 deactivated.

## TPM1.2 – activation:

1. Start or restart the device and enter BIOS.  
Press "DEL"/"ENTF" key in start screen with BARTEC logo.
2. Go to "Advanced" and select "Trusted Computing"

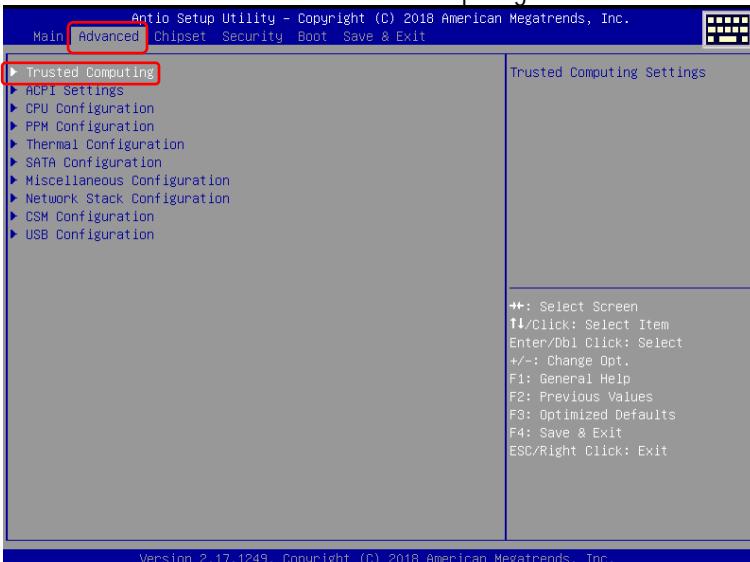


3. Go to "Configuration" and "Enable" the "Security Device Support" option.  
Default => "Security Device Support" = Disabled

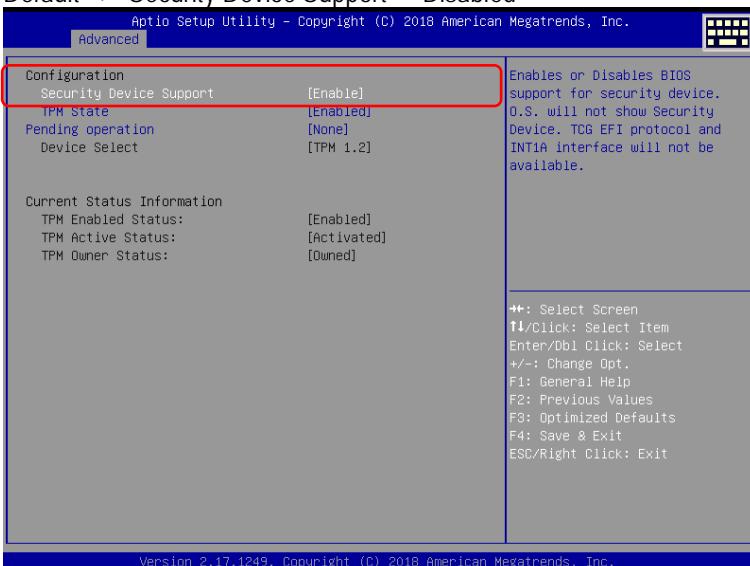

4. Select "Save & Exit" to leave BIOS.

Device restart new and load TPM1.2.

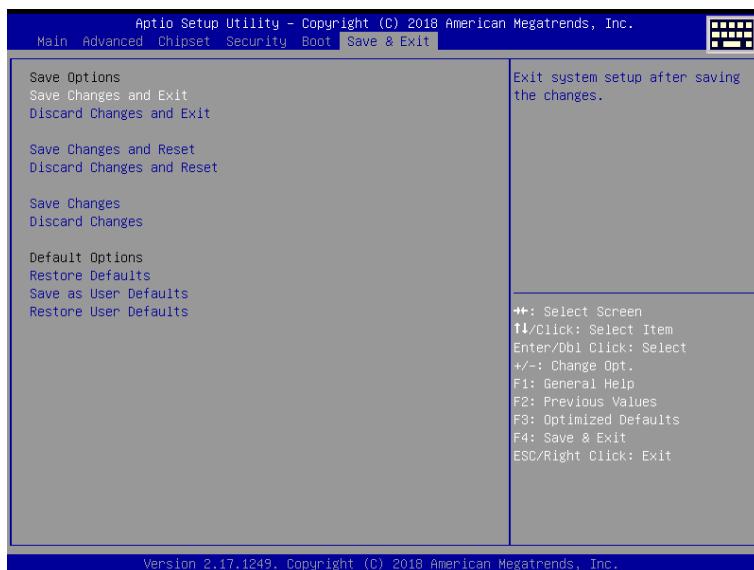

5. Check in "Device Manager" that TPM1.2 is now activated and available.

