

BCS 3608^{EX}-IS
17-A1S4-1HP0

HMI
with Interfaces

HMI
Ex i Ex e

USB-SPP RS232
USB (HID or SPP)
USB-SPP RS232 RS422 RS485

Supply module Ex i for BCS 3608^{EX}-IS
17-A1Z0-0025

Connecting cable
1.9 m 17-A1Z0-0015
4.5 m 17-A1Z0-0016
2.7 m 17-A1Z0-0017

Universal supply module for BCS 3608^{EX}-IS
17-A1Z0-0018

ACCESSORIES

Leather holster
17-A1Z0-0024



Special tool for lock nut
G7-A0Z0-0031



PROGRAMMING

via Zebra
123Scan Utility
(USB supported only)



Programming cable (optional)

1.9 m USB

IS 17-A1Z0-0020

12 V

 
1.9 m USB

NI B7-A2Z0-0046

Zebra 123Scan Utility
www.zebra.com

CUSTOMER SOLUTION

available interfaces
- USB-SPP (virtual COM)
- RS232
- RS422
- RS485

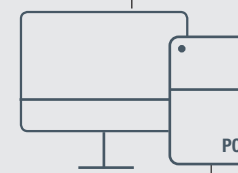

HMI
Ex e USB*

HMI
with Interfaces

BCS 3608^{EX}-NI
B7-A2S4-1HP0
B7-A2S4-1ER0

USB-SPP RS232 RS422 RS485
USB (HID or SPP)

HMI limiting cable*

4.5 m USB
B7-A2Z0-0054

1.9 m USB
B7-A2Z0-0041

Connecting cable

1.9 m

B7-A2Z0-0037

4.5 m

B7-A2Z0-0038

2.7 m

B7-A2Z0-0039

Universal supply module for BCS 3608^{EX}-NI
B7-A2Z0-0042

COMMUNICATION + LOADING
Only with Bluetooth

Connecting cable for Zone 1/Div. 1

RS232, 1.9 m	17-A1Z0-0026
RS232, 4.5 m	17-A1Z0-0027
USB, 2 m, ext. 12 V	17-A1Z0-0020

Connecting cable for Zone 2/Div. 2

RS232, 2.0 m	G7-A0Z0-0014
RS232, 4.6 m	G7-A0Z0-0015
RS232, 2.8 m	G7-A0Z0-0016
USB, 2 m, ext. 12 V	G7-A0Z0-0018



Base station

IS 17-A1Z0-0014

NI G7-A0Z0-0010



4-slot battery charger

IS 17-A1Z0-0013

 
NI G7-A0Z0-0013

Universal supply module for BCS 3678^{EX}-NI
B7-A2Z0-0043



BCS 3678^{EX}-NI
B7-A2S4-2HP1
B7-A2S4-2ER1

SMART USB Device Bluetooth
17-71VZ-A020/0000





Bluetooth-enabled device, e. g. **Agile S NI**



Battery
B7-A2Z0-0036



  Universal supply module for BCS 3678^{EX}-IS
17-A1Z0-0019



Supply module Ex i for BCS 3678^{EX}-IS
17-A1Z0-0028

SMART USB Device Bluetooth
17-71VZ-A020/0000



Bluetooth-enabled device, e. g. **Agile X IS**



BCS 3678^{EX}-IS
17-A1S4-2HP1



Battery
17-A1Z0-0012