
TC70x/TC75x

Touch Computer



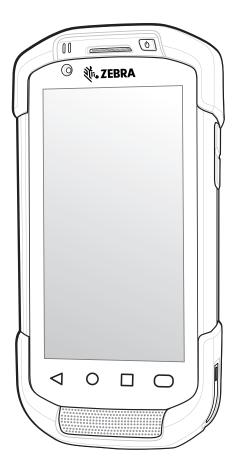

Integrator Guide for Android ™ 8.1 Oreo

Copyright

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corporation, registered in many jurisdictions worldwide. Google, Android, Google Play and other marks are trademarks of Google LLC; Oreo is a trademark of Mondelez International, Inc. group. All other trademarks are the property of their respective owners. ©2019 Zebra Technologies Corporation and/or its affiliates. All rights reserved.

COPYRIGHTS & TRADEMARKS: For complete copyright and trademark information, go to www.zebra.com/copyright.

WARRANTY: For complete warranty information, go to www.zebra.com/warranty.

END USER LICENSE AGREEMENT: For complete EULA information, go to www.zebra.com/eula.

Terms of Use

Proprietary Statement

This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries ("Zebra Technologies"). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

· Product Improvements

Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

· Liability Disclaimer

Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

Limitation of Liability

In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Revision History

Changes to the original guide are listed below:

| Change | Date | Description |
|-----------|---------|---|
| -01 Rev A | 10/2018 | Initial release. |
| -02 Rev A | 12/2018 | Add WWAN information. |
| -03 Rev A | 7/2019 | Add note warning against user modification of the device, particularly in the battery well. |

| | 2 |
|--|----------------------------------|
| Terms of Use | 2 |
| Revision History | 2 |
| About This Guide | 12 |
| Introduction | 12 |
| Documentation Set | 12 |
| Configurations | 13 |
| Software Versions | 13 |
| Chapter Descriptions | 14 |
| Notational Conventions | 14 |
| Related Documents | 14 |
| Service Information | 15 |
| Provide Documentation Feedback | 15 |
| Getting Started | 46 |
| Setting Started | 10 |
| Introduction | |
| • | 16 |
| Introduction | 16 16 |
| Introduction | 16 16 16 |
| Introduction | 16 16 16 17 |
| Introduction Setup Installing the SIM Card Installing a microSD Card | 16 16 16 17 |
| Introduction Setup Installing the SIM Card Installing a microSD Card Installing the Hand Strap and Battery | 16 16 17 18 20 |
| Introduction Setup Installing the SIM Card Installing a microSD Card Installing the Hand Strap and Battery Installing the Battery | 16 16 17 18 20 |
| Introduction Setup Installing the SIM Card Installing a microSD Card Installing the Hand Strap and Battery Installing the Battery Charging the Battery | 16 16 17 18 20 20 |
| Introduction Setup Installing the SIM Card Installing a microSD Card Installing the Hand Strap and Battery Installing the Battery Charging the Battery Charging Indicators | 16161718202021 |
| Introduction Setup Installing the SIM Card Installing a microSD Card Installing the Hand Strap and Battery Installing the Battery Charging the Battery Charging Indicators Replacing the Battery | 16161718202121 |
| Introduction Setup Installing the SIM Card Installing a microSD Card Installing the Hand Strap and Battery Installing the Battery Charging the Battery Charging Indicators Replacing the Battery Replacing the SIM Card | |
| Introduction Setup Installing the SIM Card Installing a microSD Card Installing the Hand Strap and Battery Installing the Battery Charging the Battery Charging Indicators Replacing the SIM Card Replacing the microSD Card | |
| Introduction Setup Installing the SIM Card Installing a microSD Card Installing the Hand Strap and Battery Installing the Battery Charging the Battery Charging Indicators Replacing the Battery Replacing the SIM Card Resetting the Device | |

| Accessories | 29 |
|--|------|
| Introduction | 29 |
| Accessories | 29 |
| 2-Slot Charge Only Cradle | 31 |
| Setup | 32 |
| Charging the Device | |
| Charging the Spare Battery | 33 |
| Battery Charging | |
| Main Battery Charging | |
| Spare Battery Charging | |
| Charging Temperature | 35 |
| 2-Slot USB/Ethernet Cradle | 35 |
| Setup | 36 |
| Charging the Device | 37 |
| Charging the Spare Battery | 38 |
| Battery Charging | 38 |
| Main Battery Charging | 38 |
| Spare Battery Charging | |
| Charging Temperature | |
| USB/Ethernet Communication | |
| Ethernet LED Indicators | |
| Ethernet Settings | |
| Configuring Ethernet Proxy Settings | |
| Configuring Ethernet Static IP Address5-Slot Charge Only Cradle | |
| • | |
| Setup | |
| Charging the Device | |
| Battery Charging | |
| Main Battery Charging | |
| Charging Temperature | |
| Installing the Four Slot Battery Charger | |
| Removing the 4-Slot Battery Charger | |
| 5-Slot Ethernet Cradle | |
| Setup | |
| Daisy-chaining Ethernet Cradles | |
| Ethernet Settings | |
| Configuring Ethernet Proxy Settings Configuring Ethernet Static IP Address | |
| LED Indicators | |
| Charging the Device | |
| Battery Charging | |
| Main Battery Charging | |
| Spare Battery Charging | |
| Spare Battery Charging | . 01 |

| Charging Temperature | 58 |
|---|----|
| Establishing Ethernet Connection | 58 |
| Installing the 4-Slot Battery Charger | 58 |
| Removing the 4-Slot Battery Charger | 63 |
| 4-Slot Battery Charger | 63 |
| Setup | 64 |
| Charging Spare Batteries | 64 |
| Battery Charging | 65 |
| Spare Battery Charging | 65 |
| Charging Temperature | 65 |
| Trigger Handle | 66 |
| Installing the Attachment Plate to Trigger Handle | 66 |
| Installing the Trigger Handle Plate | 66 |
| Inserting the Device into the Trigger Handle | 68 |
| Removing the Device from the Trigger Handle | 70 |
| Hand Strap Replacement | 71 |
| | |
| Settings | 75 |
| Introduction | |
| WWAN Configuration | |
| Default SIM Slot Configuration | |
| WLAN Configuration | |
| Configuring a Secure Wi-Fi Network | |
| | |
| Manually Adding a Wi-Fi Network | |
| Configuring for a Proxy Server | |
| Configuring the Device to Use a Static IP Address | |
| Wi-Fi Preferences | |
| Additional Wi-Fi Settings | |
| Wi-Fi Direct | |
| WPS Pin Fata | |
| WPS Pin Entry | |
| Setting Screen Lock | |
| Setting Screen Lock Using PIN | |
| Setting Screen Unlock Using Password | |
| Setting Screen Unlock Using Pattern | |
| Showing Passwords | |
| Remapping a Button | |
| Accounts | |
| Language Usage | |
| Changing the Language Setting | |
| Adding Words to the Dictionary | 88 |

| Keyboard Settings | 89 |
|---|-------|
| PTT Express Configuration | 89 |
| RxLogger | 89 |
| RxLogger Configuration | 89 |
| RxLogger Settings | 90 |
| ANR Module | 90 |
| Kernel Module | 90 |
| Logcat Module | 91 |
| LTS Module | |
| Qxdm Module | |
| Ramoops Module | |
| Resource Module | |
| Snapshot Module | |
| TCPDump Module | |
| Tombstone Module | |
| Configuration File | |
| Enabling Logging | |
| Disabling Logging | |
| Extracting Log Files | |
| RxLogger Utility | |
| App View | |
| Backup | 96 |
| Archive Data | 96 |
| Overlay View | 96 |
| Initiating the Main Chat Head | 97 |
| Removing the Main Chat Head | 97 |
| Viewing Logs | |
| Removing a Sub Chat Head Icon | |
| Backing Up In Overlay View | |
| About Phone | 98 |
| USB Communication | |
| Introduction | |
| Transferring Files with a Host Computer via USB | |
| Transferring Files | |
| Transferring Photos | . 101 |
| Disconnect from the Host Computer | 101 |
| DataWedge | . 102 |
| Introduction | |
| Basic Scanning | |
| Barcode Capture with Imager | |
| | |

| Profiles | 103 |
|---|------------|
| Profile0 | 104 |
| Plug-ins | 104 |
| Input Plug-ins | 104 |
| Process Plug-ins | 104 |
| - | 104 |
| | 105 |
| | 106 |
| | 106 |
| - | 106 |
| Creating a New Profile | |
| | |
| Profile Configuration | |
| 9 FF | 108 |
| | 110 |
| - • · · · • · · · · · · · · · · · · · · | 111 |
| | 112 |
| Scanner Selection | |
| | 112 |
| 3 | 112 |
| | 113 |
| | 115 |
| | 115 |
| | 123 |
| | 125 |
| | 126 |
| | 127 127 |
| · · · · · · · · · · · · · · · · · · · | 127 |
| r | 128 |
| · | 129 |
| | _ |
| T | |
| | 131 132 |
| · | 133 |
| | 133 |
| | 134 |
| · · · · · · · · · · · · · · · · · · · | 136 |
| | 136 |
| | 136 |
| • | 136 |
| • | 138 |
| o | 139 |
| | 139 |
| • | 140 |

| | Deleting an Action | 141 |
|-----|---|------------|
| | ADF Example | 141 |
| Dat | aWedge Settings | 144 |
| | Importing a Configuration File | 145 |
| | Exporting a Configuration File | 145 |
| | Importing a Profile File | 145 |
| | Exporting a Profile | 146 |
| | Restoring DataWedge | 146 |
| Cor | nfiguration and Profile File Management | 146 |
| | Enterprise Folder | 146 |
| | Auto Import | 147 |
| Pro | gramming Notes | 147 |
| | Overriding Trigger Key in an Application | 147 |
| | Capture Data and Taking a Photo in the Same Application | |
| | Disable DataWedge on Device | |
| | DataWedge APIs | 148 |
| | Reporting | 148 |
| | Soft Scan Trigger | 148 |
| | Parameters | |
| | Function Prototype | 149 |
| | Scanner Input Plugin | 149 |
| | Function Prototype | 149 |
| | Parameters | |
| | Return Values | 149 |
| | Example | 150 |
| | Comments | 150 |
| | Enumerate Scanners | 150 |
| | Function Prototype | 150 |
| | Parameters | 151 |
| | Return Values | 151 152 |
| | Example Comments | 152 |
| | Set Default Profile | 153 |
| | Default Profile Recap | 153 |
| | Usage Scenario | 153 |
| | Function Prototype | 153 |
| | Parameters | 153 |
| | Return Values | 153 |
| | Example | 154 |
| | Comments | 154 |
| | Reset Default Profile | 154 |
| | Function Prototype | 155 |
| | Parameters | 155 |
| | Return Values | 155 |

| Example | 155 |
|--|-----|
| Comments | 155 |
| Switch To Profile | |
| Profiles Recap | |
| Usage Scenario | |
| Function Prototype | |
| | 156 |
| Return Values | |
| Example | |
| Comments Notes | |
| Application Deployment | 159 |
| Introduction | 159 |
| Security | 159 |
| Secure Certificates | |
| Installing a Secure Certificate | |
| Configuring Credential Storage Settings | |
| Development Tools | |
| Android Application Development | |
| Development Workstation | |
| Target Device | |
| EMDK for Android | |
| StageNow | |
| ADB USB Setup | |
| Enabling USB Debugging | |
| Application Installation | |
| Installing Applications Using the USB Connection | |
| Installing Applications Using the Android Debug Bridge | |
| Installing Applications Using a microSD Card | |
| | |
| Uninstalling an Application | |
| Performing a System Update | |
| Downloading the System Update Package | |
| Using microSD Card | |
| Using ADB | |
| | 169 |
| Performing an Enterprise Reset | |
| Downloading the Enterprise Reset Package | 170 |
| Using microSD Card | 170 |
| Using ADB | 170 |
| Performing a Factory Reset | 171 |
| Downloading the Factory Reset Package | 171 |

| Using microSD Card | 172 |
|--|-----|
| Using ADB | 172 |
| Storage | 173 |
| Random Access Memory | 173 |
| Internal Storage | 174 |
| External Storage | 175 |
| Formatting a microSD Card or USB Drive as Portable Storage | |
| Formatting a microSD Card as Internal Memory | |
| Enterprise Folder | |
| App Management | |
| Viewing App Details | |
| Managing Downloads | 180 |
| Technical Specifications | 182 |
| Introduction | |
| TC70x/TC75x | |
| SE4750-SR Decode Distances | |
| I/O Connector Pin-Outs | |
| 2-Slot Charge Only Cradle Technical Specifications | |
| 2-Slot USB/Ethernet Cradle Technical Specifications | |
| 5-Slot Charge Only Cradle Technical Specifications | |
| 5-Slot Ethernet Cradle Technical Specifications | |
| 4-Slot Battery Charger Technical Specifications | |
| Charge Only Vehicle Cradle Technical Specifications | |
| Trigger Handle Technical Specifications | |
| Charging Cable Cup Technical Specifications | |
| Snap-On USB Cable Technical Specifications | |
| Snap-On Serial Cable Technical Specifications | |
| DEX Cable Technical Specifications | 191 |
| Maintenance and Troubleshooting | |
| Introduction | |
| Maintaining the Device | |
| Battery Safety Guidelines | |
| Cleaning Instructions | |
| Approved Cleanser Active Ingredients | |
| Harmful Ingredients | |
| Device Cleaning Instructions | |
| Special Cleaning Notes | |
| Cleaning Materials Required | 194 |

| | Cleaning Frequency | 194 |
|----|---|-----|
| | Cleaning the Device | 194 |
| | Housing | 194 |
| | Display | |
| | Camera and Exit Window | 195 |
| | Cleaning Battery Connectors | 195 |
| | Cleaning Cradle Connectors | 195 |
| | Troubleshooting | 196 |
| | TC70x/TC75x | 196 |
| | 2-Slot Charge Only Cradle | 198 |
| | 2-Slot USB/Ethernet Cradle | 199 |
| | 5-Slot Charge Only Cradle Troubleshooting | 200 |
| | 5-Slot Ethernet Cradle Troubleshooting | 201 |
| | 4-Slot Battery Charger Troubleshooting | 201 |
| | | |
| nd | ΕX | 203 |

About This Guide

Introduction

This guide provides information about using the TC70x and TC75x touch computers and accessories.



NOTE: Screens and windows pictured in this guide are samples and can differ from actual screens.

Documentation Set

The documentation set provides information for specific user needs, and includes:

- TC70x/TC75x Quick Start Guide for Android Version 6.0.1 describes how to get the device up and running.
- TC70x/TC75x User Guide for Android Version 8.1 describes how to use the device.
- TC70x/TC75x Integrator Guide for Android Version 8.1 describes how to set up the device and accessories.

Configurations

This guide covers the following configurations:

| Configuration | Radios | Display | Memory | Data Capture Options | Operating System |
|---------------|--|---|--|--|---------------------|
| TC700K | WLAN: 802.11 a/b/g/n/d/h/i/r WPAN: Bluetooth v4.0 Low Energy | 4.7" High Definition (1280 x 720) LCD | 2 GB RAM/16 GB Flash | 2D imager, camera, or integrated NFC | Android 8.1 |
| TC75EK | WWAN: HSPA+/LTE/ CDMA WLAN: 802.11 a/b/g/n/d/h/i/r WPAN: Bluetooth v4.0 Low Energy | 4.7" High Definition (1280 x 720) LCD | 2 GB RAM/16 GB Flash (SLC High Reliability Flash) | 2D imager, camera, or integrated NFC | Android 8.1 |
| TC75FK | WWAN: HSPA+/LTE WLAN: 802.11 a/b/g/n/d/h/i/r WPAN: Bluetooth v4.0 Low Energy | 4.7" High Definition (1280 x 720) LCD | 2 GB RAM/16 GB Flash (SLC High Reliability Flash) | 2D imager, camera and integrated NFC | Android 8.1 |
| TC75GK | WWAN: HSPA+/LTE WLAN: 802.11 a/b/g/n/d/h/i/r WPAN: Bluetooth v4.0 Low Energy | 4.7" High Definition (1280 x 720) LCD | 2 GB RAM/16 GB Flash (SLC High Reliability Flash) | 2D imager, camera and integrated NFC | Android 8.1 |

Software Versions

To determine the current software versions:

- 1. Swipe down from the Status bar to open the Quick Settings bar.
- 2. Touch **☆** > System.
- 3. Touch About phone.
- 4. Scroll to view the following information:
 - Model
 - Android version
 - Kernel version
 - Build number.

To determine the device serial number, touch **About phone > Status**.

Serial number

Chapter Descriptions

Topics covered in this guide are as follows:

- Getting Started provides information on getting the device up and running for the first time.
- Accessories describes the available accessories and how to use them with the device.
- USB Communication describes how to connect the device to a host computer using USB.
- · DataWedge describes how to use and configure the DataWedge application.
- · Settings provides the settings for configuring the device.
- · Application Deployment provides information for developing and managing applications.
- Maintenance and Troubleshooting includes instructions on cleaning and storing the device, and provides troubleshooting solutions for potential problems during device operation.
- Technical Specifications provides the technical specifications for the device.

Notational Conventions

The following conventions are used in this document:

- Bold text is used to highlight the following:
 - · Dialog box, window and screen names
 - · Drop-down list and list box names
 - · Check box and radio button names
 - · Icons on a screen
 - Key names on a keypad
 - Button names on a screen.
- Bullets (•) indicate:
 - · Action items
 - · Lists of alternatives
 - · Lists of required steps that are not necessarily sequential.
- Sequential lists (for example, those that describe step-by-step procedures) appear as numbered lists.

Related Documents

- TC70x/TC75x Quick Start Guide for Android Version 6.0.1, p/n MN-002879-xx.
- TC70x Regulatory Guide, p/n MN-002960-xx.
- TC75x Regulatory Guide, p/n MN-002880-xx.
- TC70x/TC75x User Guide for Android Version 8.1, p/n MN-002881-xx.

For the latest version of this guide and all guides, go to: www.zebra.com/support

About This Guide

Service Information

If you have a problem with your equipment, contact Customer Support for your region. Contact information is available at: www.zebra.com/support.

When contacting support, please have the following information available:

- Serial number of the unit (found on manufacturing label)
- Model number or product name (found on manufacturing label)
- · Software type and version number
- IMEI number.

Customer Support responds to calls by email or telephone within the time limits set forth in support agreements.

If the problem cannot be solved by Customer Support, you may need to return the equipment for servicing and will be given specific directions. We are not responsible for any damages incurred during shipment if the approved shipping container is not used. Shipping the units improperly can possibly void the warranty. Remove the SIM card and/or microSD card from the device before shipping for service.

If the device was purchased from a business partner, contact that business partner for support.

Provide Documentation Feedback

If you have comments, questions, or suggestions about this guide, send an email to EVM-Techdocs@zebra.com.

Getting Started

Introduction

This chapter provides information for getting the device up and running for the first time.

Setup

Perform this procedure to start using the device for the first time.

- Install a SIM card (TC75x only).
- Install a micro secure digital (SD) card (optional).
- · Install hand strap (optional).
- · Install the battery.
- · Charge the device.
- · Power on the device.

Installing the SIM Card



NOTE: TC75x only.


NOTE: The TC75x may contain one mini SIM slot and two nano SIM slots. If using a micro SIM card, a third-party SIM adapter is required. By default, use a nano SIM card in slot 1.



CAUTION: Follow proper electrostatic discharge (ESD) precautions to avoid damaging the SIM card. Proper ESD precautions include, but not limited to, working on an ESD mat and ensuring that the user is properly grounded.

1. Remove access cover.

Figure 1 TC75x SIM Slot Locations

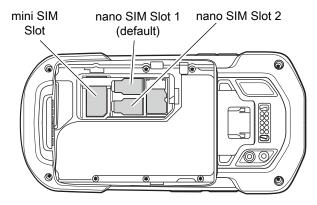

2. Insert a SIM card into the SIM slot with the cut edge toward the middle of the device and the contacts facing down.

Figure 2 nano SIM Card Installation


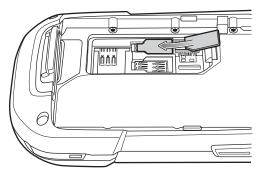


Figure 3 Mini SIM Card Installation

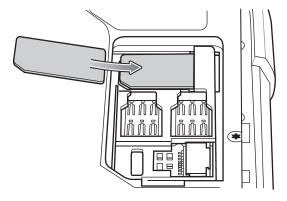

3. Ensure that the SIM card is seated properly.

Installing a microSD Card


The microSD card slot provides secondary non-volatile storage. The slot is located under the battery pack. Refer to the documentation provided with the card for more information, and follow the manufacturer's recommendations for use.



CAUTION: Follow proper electrostatic discharge (ESD) precautions to avoid damaging the microSD card. Proper ESD precautions include, but are not limited to, working on an ESD mat and ensuring that the operator is properly grounded.


- 1. Remove the hand strap, if installed.
- 2. Lift the access door.

Figure 4 Lift Access Door

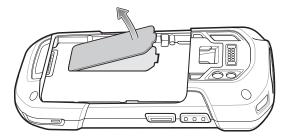

3. Insert the microSD card into the card holder door ensuring that the card slides into the holding tabs on each side of the door.

Figure 5 Insert microSD Card in Holder

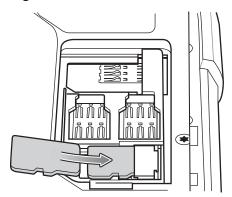

4. Re-install the access door.

Installing the Hand Strap and Battery




NOTE: User modification of the device, particularly in the battery well, such as labels, asset tags, engravings, stickers, etc., may compromise the intended performance of the device or accessories. Performance levels such as sealing (Ingress Protection (IP)), impact performance (drop and tumble), functionality, temperature resistance, etc. could be effected. DO NOT put any labels, asset tags, engravings, stickers, etc. in the battery well.



NOTE: Installation of the hand strap is optional. Skip this section if not installing the hand strap.


1. Remove the hand strap filler from the hand strap slot. Store the hand strap filler in a safe place for future replacement.

Figure 6 Remove Filler

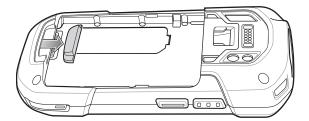


2. Insert the hand strap plate into the hand strap slot.

Figure 7 Insert Hand Strap

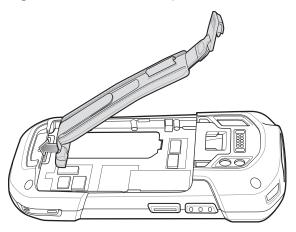


3. Insert the battery, bottom first, into the battery compartment in the back of the device.

Figure 8 Insert Bottom of Battery into Battery Compartment

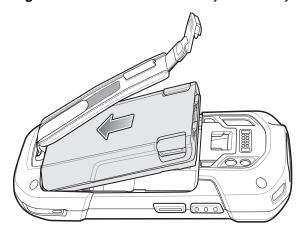


4. Press the battery down into the battery compartment until the battery release latches snap into place.

Figure 9 Press Down on Battery

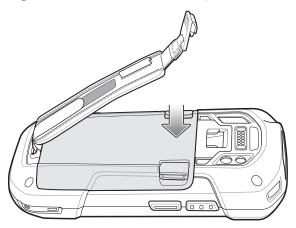

5. Place hand strap clip into hand strap mounting slot and pull down until it snaps into place.

Figure 10 Secure Hand Strap Clip

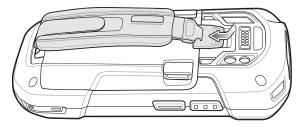


Installing the Battery



NOTE: User modification of the device, particularly in the battery well, such as labels, asset tags, engravings, stickers, etc., may compromise the intended performance of the device or accessories. Performance levels such as sealing (Ingress Protection (IP)), impact performance (drop and tumble), functionality, temperature resistance, etc. could be effected. DO NOT put any labels, asset tags, engravings, stickers, etc. in the battery well.


1. Insert the battery, bottom first, into the battery compartment in the back of the device.

Figure 11 Insert Bottom of Battery into Battery Compartment

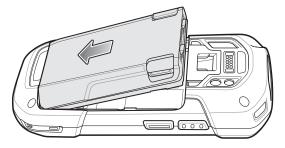

2. Press the battery down into the battery compartment until the battery release latches snap into place.

Figure 12 Press Down on Battery



Charging the Battery

Before using the device for the first time, charge the main battery until the green Charging/Notification light emitting diode (LED) remains lit. To charge the device, use a cable or a cradle with the appropriate power supply. For information about the accessories available for the device, see Accessories for more information.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

Charge batteries in temperatures from 0°C to 40°C (32°F to 104°F). The device or accessory always performs battery charging in a safe and intelligent manner. At higher temperatures (approximately +37°C (+98°F)) the device or accessory may, for small periods of time, alternately enable and disable battery charging to keep the

battery at acceptable temperatures. The device or accessory indicates when charging is disabled due to abnormal temperatures via its LED.

To charge the main battery:

- 1. Connect the charging accessory to the appropriate power source.
- Insert the device into a cradle or attach to a cable. The device turns on and begins charging. The Charging/Notification LED blinks amber while charging, then turns solid green when fully charged.

Charging Indicators

Table 1 Charging/Notification LED Charging Indicators

| State | Indication |
|---|---|
| Off | The device is not charging. The device is not inserted correctly in the cradle or connected to a power source. Charger/cradle is not powered. |
| Slow Blinking Amber (1 blink every 4 seconds) | The device is charging. |
| Solid Green | Charging complete. |
| Fast Blinking Amber (2 blinks/second) | Charging error: |
| | Temperature is too low or too high. |
| | Charging has gone on too long without completion (typically eight hours). |
| Slow Blinking Red (1 blink every 4 seconds) | The device is charging but the battery is at end of useful life. |
| Solid Red | Charging complete but the battery is at end of useful life. |
| Fast Blinking Red (2 blinks/second) | Charging error but the battery is at end of useful life. |
| | Temperature is too low or too high. |
| | Charging has gone on too long without completion (typically eight hours). |

Replacing the Battery



NOTE: User modification of the device, particularly in the battery well, such as labels, asset tags, engravings, stickers, etc., may compromise the intended performance of the device or accessories. Performance levels such as sealing (Ingress Protection (IP)), impact performance (drop and tumble), functionality, temperature resistance, etc. could be effected. DO NOT put any labels, asset tags, engravings, stickers, etc. in the battery well.




CAUTION: Do not add or remove SIM or microSD card during battery replacement.

- 1. Remove any accessory attached to the device.
- 2. Press the Power button until the menu appears.
- 3. Touch Battery Swap.
- 4. Follow the on-screen instructions.


- 5. Wait for the LED to turn off.
- 6. If hand strap is attached, slide the hand strap clip up toward the top of the device and then lift.

Figure 13 Remove Hand Strap Clip

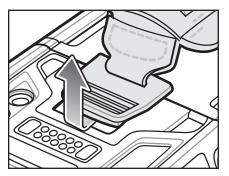


7. Press the two battery latches in.

Figure 14 Press Battery Latches

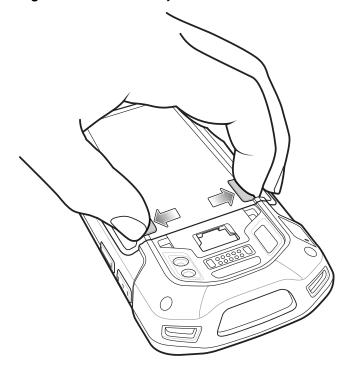

8. Lift the battery from the device.

Figure 15 Lift the Battery

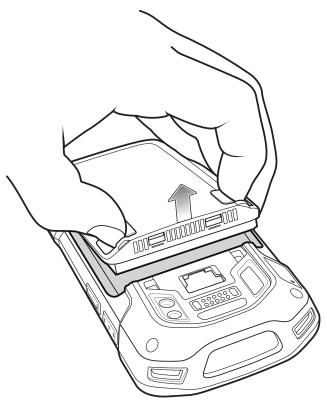



CAUTION: Replace the battery within two minutes. After two minutes the device reboots and data may be lost.

- 9. Insert the replacement battery, bottom first, into the battery compartment in the back of the device.
- 10. Press the battery down until the battery release latch snaps into place.
- 11. Replace the hand strap, if required.
- 12. Press and hold the Power button to turn on the device.



NOTE: After replacing the battery, wait 15 minutes before using Battery Swap again.

Replacing the SIM Card




NOTE: SIM replacement applies to TC75x only.

To replace the SIM card:

- 1. Press and hold the Power button until the menu appears.
- 2. Touch Power off.
- 3. Touch OK.


4. If hand strap is attached, slide the hand strap clip up toward the top of the device and then lift.

Figure 16 Remove Hand Strap Clip

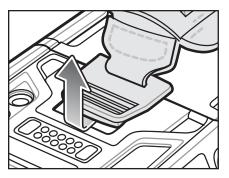

- 5. Press the two battery latches in.
- 6. Lift the battery from the device.
- 7. Lift the access door.

Figure 17 Remove Access Door

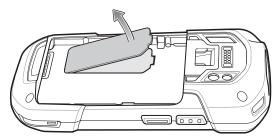

8. Remove card from holder.

Figure 18 Remove Mini SIM Card


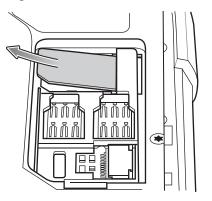


Figure 19 Remove Nano SIM Card

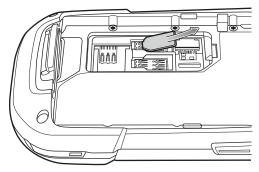

9. Insert the replacement card.

Figure 20 Insert Mini SIM Card



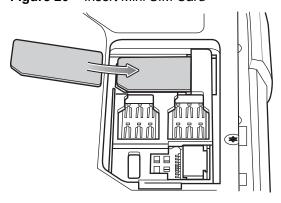


Figure 21 Insert Nano SIM Card

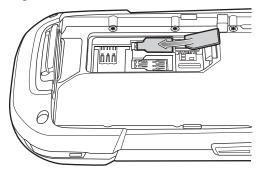

10. Replace the access door.

Figure 22 Replace Access Door

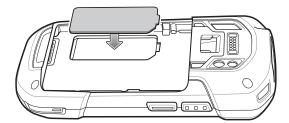


- 11. Press the access door down and ensure that it is properly seated.
- 12. Insert the battery, bottom first, into the battery compartment in the back of the device.
- 13. Press the battery down until the battery release latch snaps into place.
- 14. Replace the hand strap, if required.
- 15. Press and hold the Power button to turn on the device.

Replacing the microSD Card

To replace the microSD card:

- 1. Press the Power button until the menu appears.
- 2. Touch Power off.
- 3. Touch OK.
- 4. If hand strap is attached, slide the hand strap clip up toward the top of the device and then lift.


Figure 23 Remove Hand Strap Clip

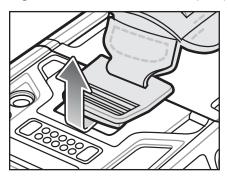

- 5. Press the two battery latches in.
- 6. Lift the battery from the device.


7. Lift the access door.

Figure 24 Remove Access Door

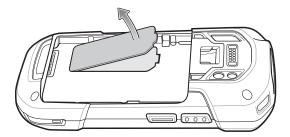

- 8. Remove microSD card from holder.
- 9. Press the access door down and ensure that it is properly seated.
- 10. Insert the replacement microSD card.
- 11. Replace the access door.

Figure 25 Replace Access Door

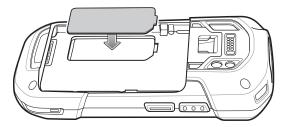

- 12. Insert the battery, bottom first, into the battery compartment in the back of the device.
- 13. Press the battery down until the battery release latch snaps into place.
- 14. Replace the hand strap, if required.
- 15. Press and hold the Power button to turn on the device.

Resetting the Device

The reset functions include the following:

- Soft reset
- Hard reset
- · Enterprise reset
- Factory reset

Performing a Soft Reset

Perform a soft reset if applications stop working.

- 1. Press and hold the Power button until the menu appears.
- 2. Touch Restart.

The device reboots.

Performing a Hard Reset



CAUTION: Performing a hard reset with a microSD card installed in the device may cause damage or data corruption to the microSD card. All un-saved data is lost after performing a hard reset.

Perform a hard reset if the device stops responding.

- 1. Simultaneously press the Power, Scan and Volume Up buttons for at least four seconds.
- 2. When the screen turns off, release the buttons. The device reboots.

Accessories

Introduction

This chapter provides information for using the accessories for the device.

Accessories

This table lists the accessories available for the device.

Table 2 Accessories

| Accessory | Part Number | Description | |
|--------------------------------------|--------------------|--|--|
| Cradles | | | |
| 2-Slot Charge Only Cradle | CRD-TC7X-SE2CPP-01 | Provides device and spare battery charging. Use with power supply, p/n PWRS-14000-148R. | |
| 2-Slot USB/Ethernet Cradle | CRD-TC7X-SE2EPP-01 | Provides device and spare battery charging and USB communication with a host computer and Ethernet communication with a network. Use with power supply, p/n PWRS-14000-148R. | |
| 5-Slot Charge Only Cradle | CRD-TC7X-SE5C1-01 | Charges up to five devices. Use with power supply, p/n PWRS-14000-241R and DC line cord, p/n 50-16002-029R. Can accommodate one 4-Slot Battery Charger using the Battery Adapter Cup. | |
| 5-Slot Ethernet Cradle | CRD-TC7X-SE5EU1-01 | Provides device charging and provides Ethernet communication for up to five devices. Use with power supply, p/n PWRS-14000-241R and DC line cord, p/n 50-16002-029R. Can accommodate one 4-Slot Battery Charger using the Battery Adapter Cup. | |
| Cradle Mount | BRKT-SCRD-SMRK-01 | Mounts the 5-Slot Charge Only Cradle, 5-Slot Ethernet Cradle, and 4-Slot Battery Charger to a wall or rack. | |
| Batteries and Chargers | | | |
| 4,620 mAh PowerPrecision+ battery | BTRY-TC7X-46MPP-01 | Replacement battery (single pack). | |
| | BTRY-TC7X-46MPP-10 | Replacement battery (10–pack). | |
| 4-Slot Spare Battery Charger | SAC-TC7X-4BTYPP-01 | Charges up to four battery packs. Use with power supply, p/n PWRS-14000-148R. | |

Accessories

 Table 2
 Accessories (Continued)

| Accessory | Part Number | Description | | |
|--|--------------------|--|--|--|
| Battery Charger Adapter Cup | CUP-SE-BTYADP1-01 | Allows for one 4-Slot Battery Charger to be charged and docked on the left most slot of the 5-Slot cradles (maximum one per cradle). | | |
| Vehicle Solutions | | | | |
| Charging Cable Cup | CHG-TC7X-CLA1-01 | Provides power to the device from a cigarette lighter socket. | | |
| Charge Only Vehicle Cradle | CRD-TC7X-CVCD1-01 | Charges and securely holds the device. Requires power cable CHG-AUTO-CLA1-01 or CHG-AUTOHWIRE1-01, sold separately. | | |
| Cigarette Light Adapter Auto Charge Cable | CHG-AUTO-CLA1-01 | Provides power to the Vehicle Cradle from a cigarette lighter socket. | | |
| Hard-wire Auto Charge Cable | CHG-AUTO-HWIRE1-01 | Provides power to the Vehicle Cradle from the vehicle's power panel. | | |
| RAM Mount | RAM-B-166U | Provides window mounting option for the Vehicle Cradle. RAM Twist Lock Suction Cup with Double Socket Arm and Diamond Base Adapter. Overall Length: 6.75". | | |
| RAM Mount Base | RAM-B-238U | RAM 2.43" x 1.31" Diamond Ball base with 1" ball. | | |
| Charge and Communication Cables | | | | |
| Charging Cable Cup | CHG-TC7X-CBL1-01 | Provides power to the device. Use with power supply, p/n PWRS-14000-249R, sold separately. | | |
| Snap-On USB Cable | CBL-TC7X-CBL1-01 | Provides power to the device and USB communication with a host computer. Use with power supply, p/n PWRS-14000-249R, sold separately. | | |
| Snap-On Serial Cable | CBL-TC7X-SERL1-01 | Provides power and serial communication with a host computer. Use with power supply, p/n PWRS-14000-249R, sold separately. | | |
| Snap-On DEX Cable | CBL-TC7X-DEX1-01 | Provides electronic data exchange with devices such as vending machines. | | |
| Audio Accessories | | | | |
| Premium Headset | RCH51 | Premium Rugged headset. | | |
| 3.5 mm Audio Adapter | ADP-TC7X-AUD35-01 | Snaps onto the device and provides audio to a wired headset with 3.5 mm plug. | | |
| 3.5 mm Headset | HDST-35MM-PTVP-01 | Use for PTT and VoIP calls. | | |
| 3.5 mm Quick Disconnect | ADP-35M-QDCBL1-01 | Provides connection to the 3.5 mm Headset. | | |
| Adapter Cable | | | | |
| Scanning | | | | |
| Trigger Handle | TRG-TC7X-SNP1-01 | Adds gun-style handle with a scanner trigger for comfortable and productive scanning. | | |
| Carrying Solutions | | | | |
| Soft Holster | SG-TC7X-HLSTR1-01 | TC7X soft holster. | | |

 Table 2
 Accessories (Continued)


| Accessory | Part Number | Description | | |
|--------------------------|--------------------|---|--|--|
| Rigid Holster | SG-TC7X-RHLSTR1-01 | TC7X rigid holster. | | |
| Hand Strap | SG-TC7X-HSTRP1-03 | Replacement hand strap with hand strap mounting clip (3–pack). | | |
| Stylus and Coiled Tether | SG-TC7X-STYLUS-03 | TC7X stylus with coiled tether (3-pack). | | |
| Power Supplies | | | | |
| Power Supply | PWRS-14000-249R | Provides power to the device using the Snap-On USB Cable, Snap-on Serial Cable or Charging Cable Cup. Requires AC line cord. | | |
| Power Supply | PWRS-14000-148R | Provides power to the 2–Slot cradles and 4-Slot Spare Battery Charger. Requires AC line cord. | | |
| Power Supply | PWRS-14000-241R | Provides power to the 5-Slot Charge Only cradle and the 5-Slot Ethernet Cradle. Requires DC Line Cord, p/n 50–16002–029R and country specific three wire grounded AC line cord sold separately. | | |
| DC Line Cord | 50-16002-029R | Provides power from the power supply to the 5-Slot Charge Only Cradle and 5-Slot Ethernet Cradle. | | |

2-Slot Charge Only Cradle

The 2-Slot Charge Only Cradle:


- Provides 5 VDC power for operating the device.
- Charges the device's battery.
- Charges a spare battery.

Figure 26 2–Slot Charge Only Cradle

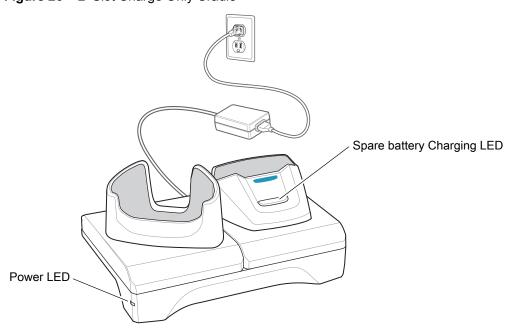

Setup


Figure 27 2–Slot Charge Only Cradle

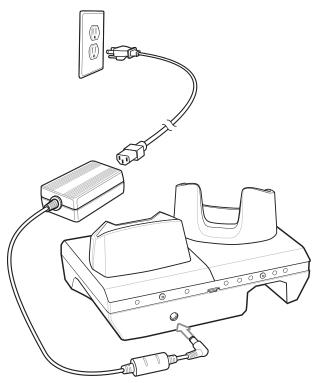

Charging the Device

1. Insert the device into the slot to begin charging.

Figure 28 Battery Charging

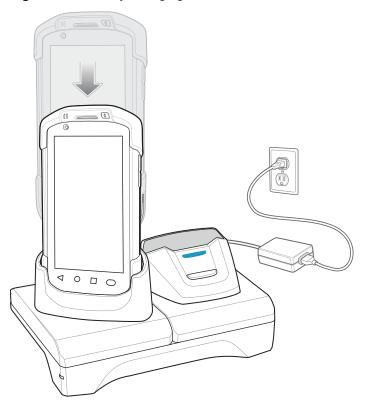


2. Ensure the device is seated properly.

Charging the Spare Battery

1. Insert the battery into the right slot to begin charging.

Figure 29 Spare Battery Charging

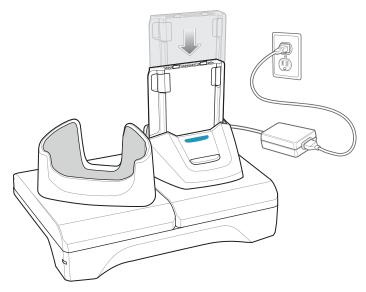

2. Ensure the battery is seated properly.

Battery Charging

Main Battery Charging

The device's Charging/Notification LED indicates the status of the battery charging in the device.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

Spare Battery Charging

The Spare battery Charging LED on the cup indicates the status of the spare battery charging.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

 Table 3
 Spare Battery Charging LED Indicators

| LED | Indication |
|---------------------|---|
| Slow Blinking Amber | Spare battery is charging. |
| Solid Green | Charging complete. |
| Fast Blinking Amber | Error in charging; check placement of spare battery. |
| Slow Blinking Red | Spare battery is charging and battery is at the end of useful life. |
| Solid Red | Charging complete and battery is at the end of useful life. |
| Fast Blinking Red | Error in charging; check placement of spare battery and battery is at the end of useful life. |
| Off | No spare battery in slot; spare battery not placed correctly; cradle is not powered. |

Charging Temperature

Charge batteries in temperatures from 0 °C to 40 °C (32 °F to 104 °F). The device or cradle always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37 °C (+98 °F)) the device or cradle may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device and cradle indicates when charging is disabled due to abnormal temperatures via its LED.

2-Slot USB/Ethernet Cradle


The 2-Slot USB/Ethernet Cradle:

- Provides 5.0 VDC power for operating the device.
- Charges the device's battery.
- · Charges a spare battery.
- · Connects the device to an Ethernet network.
- · Provides communication to a host computer using a USB cable.




NOTE: Remove all attachments on the device, except the hand strap, before place onto the cradle.

Figure 30 2-Slot USB/Ethernet Cradle

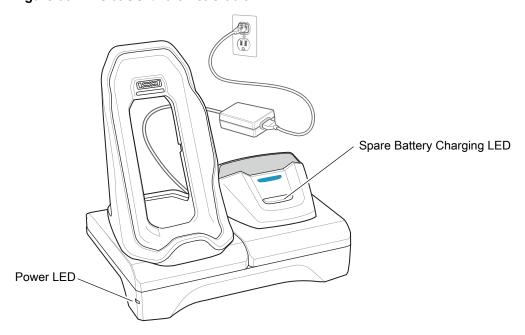

Setup

Figure 31 2–Slot USB/Ethernet Cradle

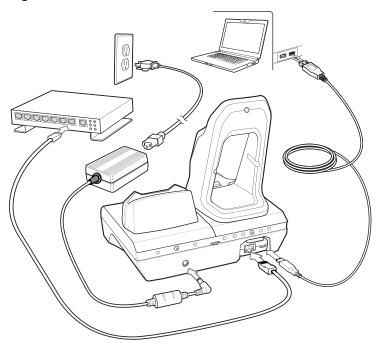

Charging the Device

1. Place the bottom of the device into the base.

Figure 32 Battery Charging




- 2. Rotate the top of the device until the connector on the back of the device mates with the connector on the cradle.
- 3. Ensure the device is connected properly. The charging Charging/Notification LED on the device begins blinking amber indicating that the device is charging.

Charging the Spare Battery

1. Insert the battery into the right slot to begin charging.

Figure 33 Spare Battery Charging

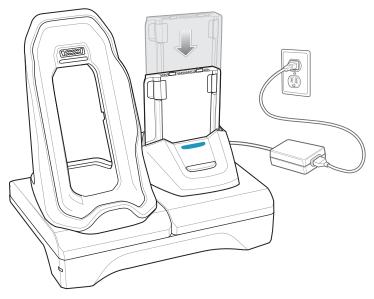

2. Ensure the battery is seated properly.

Battery Charging

Main Battery Charging

The device's Charging/Notification LED indicates the status of the battery charging in the device.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

Spare Battery Charging

The Spare battery Charging LED on the cup indicates the status of the spare battery charging.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

 Table 4
 Spare Battery Charging LED Indicators

| LED | Indication |
|---------------------|---|
| Slow Blinking Amber | Spare battery is charging. |
| Solid Green | Charging complete. |
| Fast Blinking Amber | Error in charging; check placement of spare battery. |
| Slow Blinking Red | Spare battery is charging and battery is at the end of useful life. |

 Table 4
 Spare Battery Charging LED Indicators (Continued)

| LED | Indication |
|-------------------|---|
| Solid Red | Charging complete and battery is at the end of useful life. |
| Fast Blinking Red | Error in charging; check placement of spare battery and battery is at the end of useful life. |
| Off | No spare battery in slot; spare battery not placed correctly; cradle is not powered. |

Charging Temperature

Charge batteries in temperatures from 0 °C to 40 °C (32 °F to 104 °F). The device or cradle always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37 °C (+98 °F)) the device or cradle may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device and cradle indicates when charging is disabled due to abnormal temperatures via its LED.

USB/Ethernet Communication

The 2–Slot USB/Ethernet Cradle provides both Ethernet communication with a network and USB communication with a host computer. Prior to using the cradle for Ethernet or USB communication. Ensure that the switch on the USB/Ethernet module is set properly.

Turn the cradle over to view the module.

Figure 34 2-Slot USB/Ethernet Cradle Module Switch



For Ethernet communication, slide the switch to the ## position.

For USB communication, slide the switch to the $\sqrt[q]{}$ position.

Place the switch in the center position **O** to disable communications.

Ethernet LED Indicators

There are two LEDs on the USB/Ethernet Module RJ-45 connector. The green LED lights to indicate that the transfer rate is 100 Mbps. When the LED is not lit the transfer rate is 10 Mbps. The yellow LED blinks to indicate activity, or stays lit to indicate that a link is established. When it is not lit it indicates that there is no link.

Figure 35 LED Indicators




 Table 5
 USB/Ethernet Module LED Data Rate Indicators

| Data Rate | (1) Amber LED | (2) Green LED |
|-----------|---------------|---------------|
| 100 Mbps | On/Blink | On |
| 10 Mbps | On/Blink | Off |

Ethernet Settings

The following settings can be configured when using Ethernet communication:

- Proxy Settings
- Static IP.


Configuring Ethernet Proxy Settings

The device includes Ethernet cradle drivers. After inserting the device, configure the Ethernet connection:

- 1. Swipe down with two fingers from the status bar to open the quick access panel and then touch ...
- 2. Touch Network & Internet.
- 3. Touch Ethernet.
- 4. Place the device into the Ethernet cradle slot.
- 5. Slide the switch to the **ON** position.
- 6. Touch and hold Eth0 until the menu appears.
- 7. Touch Modify Proxy.

8. Touch the **Proxy** drop-down list and select **Manual**.

Figure 36 Ethernet Proxy Settings

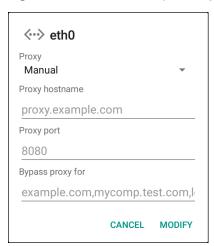

- 9. In the **Proxy hostname** field, enter the proxy server address.
- 10. In the **Proxy port** field, enter the proxy server port number.



NOTE: When entering proxy addresses in the Bypass proxy for field, do not use spaces or carriage returns between addresses.

- 11. In the **Bypass proxy for** text box, enter addresses for web sites that do not require to go through the proxy server. Use the separator "|" between addresses.
- 12. Touch MODIFY.
- 13. Touch **(**).


Configuring Ethernet Static IP Address

The device includes Ethernet cradle drivers. After inserting the device, configure the Ethernet connection:

- 1. Swipe down with two fingers from the status bar to open the quick access panel and then touch ...
- 2. Touch Network & Internet.
- 3. Touch Ethernet.
- 4. Place the device into the Ethernet cradle slot.
- 5. Slide the switch to the **ON** position.
- 6. Touch Eth0.
- 7. Touch Disconnect.
- 8. Touch Eth0.

9. Touch and hold the IP settings drop-down list and select **Static**.

Figure 37 Static IP Settings

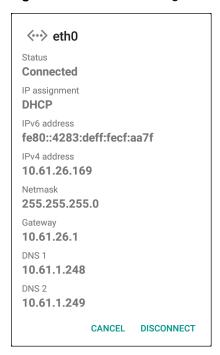

10. In the IP address field, enter the proxy server address.

- 11. If required, in the **Gateway** field, enter a gateway address for the device.
- 12. If required, in the Netmask field, enter the network mask address
- 13. If required, in the **DNS address** fields, enter a Domain Name System (DNS) addresses.
- 14. Touch CONNECT.
- 15. Touch ().


5-Slot Charge Only Cradle

The 5-Slot Charge Only Cradle:

- Provides 5 VDC power for operating the device.
- Simultaneously charges up to five devices and up to four devices and on 4-Slot Battery Charger using the Battery Charger Adapter. See the TC70x/TC75x Integrator Guide for information on installing the 4-Slot Battery Charger onto the cradle.


• Consists of a cradle base and cups that can be configured for various charging requirements.

Figure 38 5-Slot Charge Only Cradle

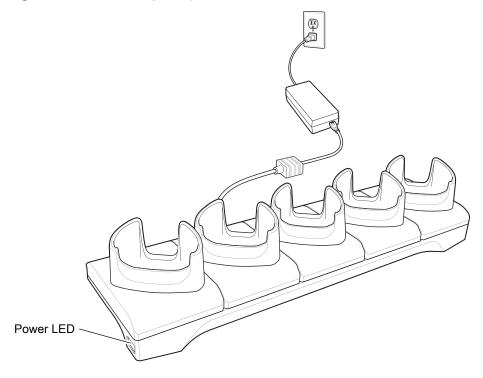

Setup

Figure 39 5-Slot Charge Only Cradle

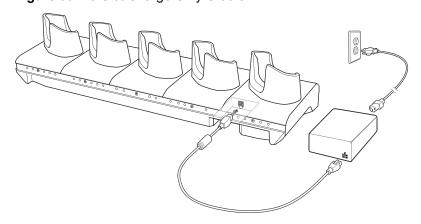

Charging the Device

1. Insert the device into a slot to begin charging.

Figure 40 Battery Charging


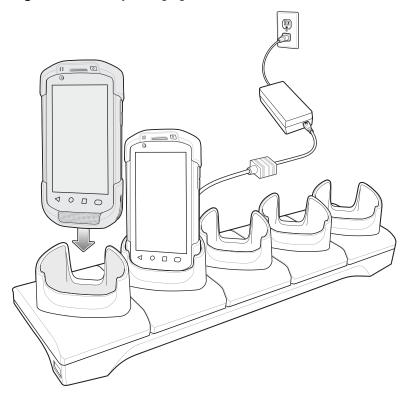


Figure 41 5-Slot Charge Only Cradle with Four Slot Battery Charger

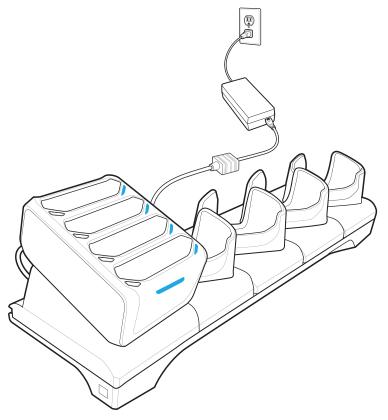

2. Ensure the device is seated properly.

Battery Charging

Main Battery Charging

The device's Charging/Notification LED indicates the status of the battery charging in the device.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

Charging Temperature

Charge batteries in temperatures from 0 °C to 40 °C (32 °F to 104 °F). The device always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37 °C (+98 °F)) the device may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device indicates when charging is disabled due to abnormal temperatures via its LED.


Installing the Four Slot Battery Charger



NOTE: The Battery Charger must be installed in the first slot only.


1. Remove power from the cradle.

Figure 42 Remove Power from Cradle

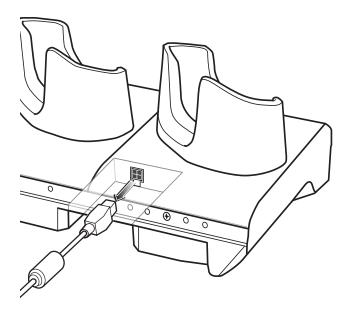


2. Using a Phillips screwdriver, remove the screw securing the cup to the cradle base.

Figure 43 Remove Screw

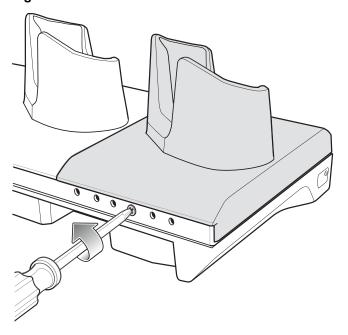


3. Slide the cup to the front of the cradle.

Figure 44 Remove Cup

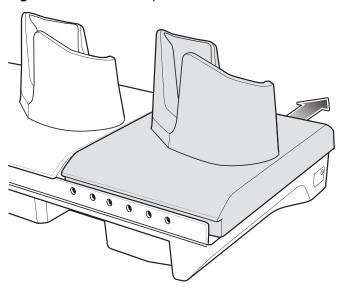

- 4. Carefully lift the cup up to expose the cup power cable.
- 5. Disconnect the cup power cable.

Figure 45 Disconnect Cup Power Cable

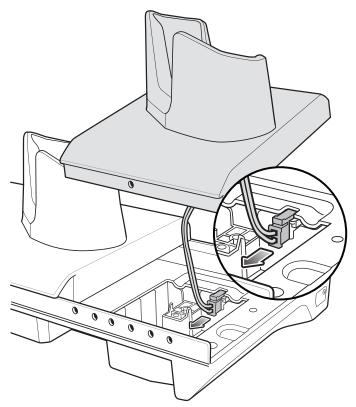




NOTE: Place power cable into adapter to avoid pinching cable.


6. Connect the Battery Adapter power cable to the connector on the cradle.

Figure 46 Connect Adapter Power Cable

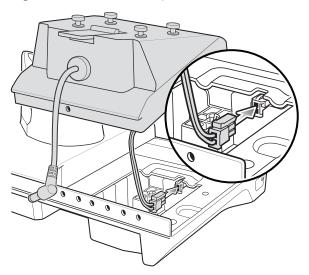


7. Place adapter onto cradle base and slide toward rear of cradle.

Figure 47 Install Adapter

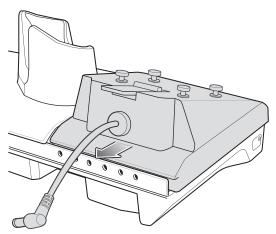


8. Using a Phillips screwdriver, secure adapter to cradle base with screw.

Figure 48 Secure adapter to Cradle

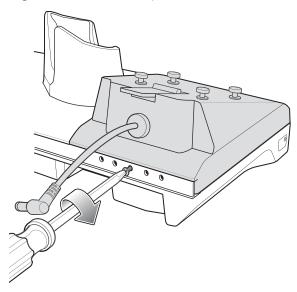

9. Align mounting holes on the bottom of the Four Slot Battery Charger with the stubs on the Battery Adapter.


Figure 49 Install Four Slot Battery Charger

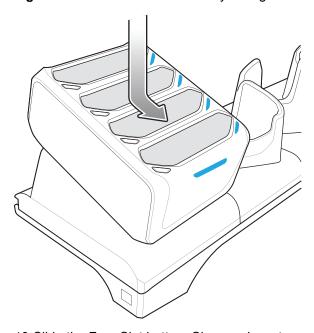

10. Slide the Four Slot battery Charger down toward the front of the cradle.

11. Connect the output power plug into the power port on the Four Slot Battery Charger.


Figure 50 Connect Output Power Plug

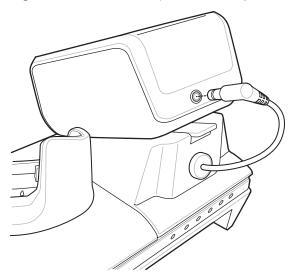

Removing the 4-Slot Battery Charger

- 1. Disconnect the output power plug from the 4-Slot Battery Charger.
- 2. At the back of the cup, press down on the release latch.

Figure 51 Press Release Latch

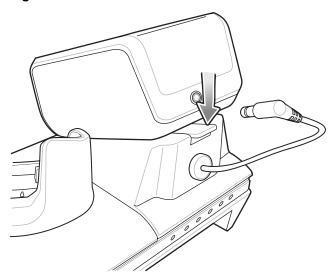

- 3. Slide the 4-Slot Battery Charger toward the front of the cradle.
- 4. Lift the 4-Slot off the cradle cup.

5-Slot Ethernet Cradle




CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines on page 192.

The 5-Slot Ethernet Cradle:

- Provides 5.0 VDC power for operating the device.
- Connects the device (up to five) to an Ethernet network.
- Simultaneously charges up to five devices or up to four devices and one 4-Slot Battery Charger using the Battery Charger Adapter.


Figure 52 5-Slot Ethernet Cradle

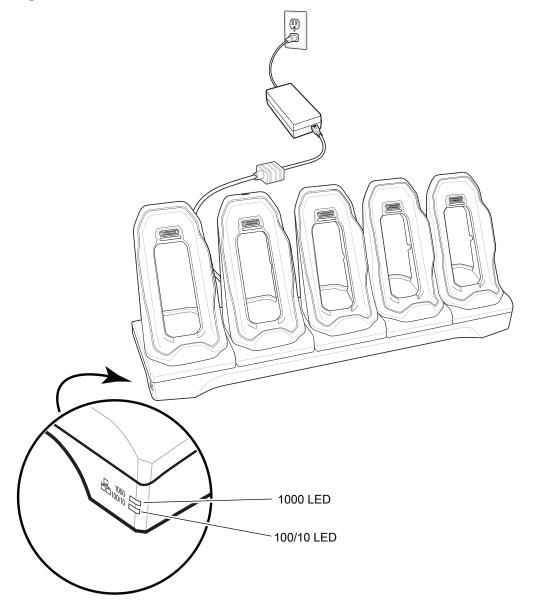

Setup

Connect the 5-Slot Ethernet cradle to a power source.

Figure 53 5-Slot Ethernet Cradle Setup

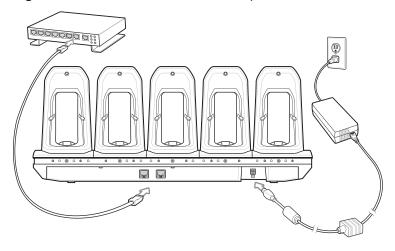

Daisy-chaining Ethernet Cradles


Daisy-chain up to ten 5-Slot Ethernet cradles to connect several cradles to an Ethernet network. Use either a straight or crossover cable. Daisy-chaining should not be attempted when the main Ethernet connection to the first cradle is 10 Mbps as throughput issues will almost certainly result.

To daisy-chain 5-Slot Ethernet cradles:

- 1. Connect power to each 5-Slot Ethernet cradle.
- 2. Connect an Ethernet cable to the one of the ports on the back of the first cradle and to the Ethernet switch.

Connect the other end of the Ethernet cable to one of the ports of the back of the second 5-Slot Ethernet cradle.

Figure 54 Daisy-chaining 5-Slot Ethernet Cradles

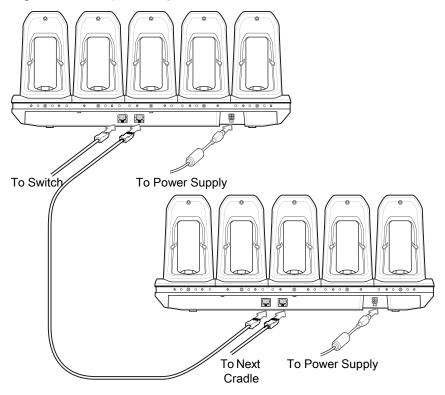

4. Connect additional cradles as described in step 2 and 3.

Ethernet Settings

The following settings can be configured when using Ethernet communication:

- Proxy Settings
- · Static IP.


Configuring Ethernet Proxy Settings

The device includes Ethernet cradle drivers. After inserting the device, configure the Ethernet connection:

- 1. Swipe down with two fingers from the status bar to open the quick access panel and then touch ...
- 2. Touch Network & Internet.
- 3. Touch Ethernet.
- 4. Place the device into the Ethernet cradle slot.
- 5. Slide the switch to the **ON** position.
- 6. Touch and hold **Eth0** until the menu appears.
- 7. Touch Modify Proxy.

8. Touch the **Proxy** drop-down list and select **Manual**.

Figure 55 Ethernet Proxy Settings

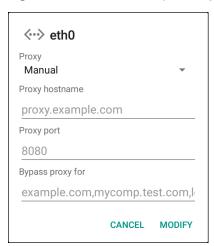

- 9. In the **Proxy hostname** field, enter the proxy server address.
- 10. In the **Proxy port** field, enter the proxy server port number.



NOTE: When entering proxy addresses in the Bypass proxy for field, do not use spaces or carriage returns between addresses.

- 11. In the **Bypass proxy for** text box, enter addresses for web sites that do not require to go through the proxy server. Use the separator "|" between addresses.
- 12. Touch MODIFY.
- 13. Touch **(**).


Configuring Ethernet Static IP Address

The device includes Ethernet cradle drivers. After inserting the device, configure the Ethernet connection:

- 1. Swipe down with two fingers from the status bar to open the guick access panel and then touch ...
- 2. Touch Network & Internet.
- 3. Touch Ethernet.
- 4. Place the device into the Ethernet cradle slot.
- 5. Slide the switch to the **ON** position.
- 6. Touch Eth0.
- 7. Touch Disconnect.
- 8. Touch Eth0.

9. Touch and hold the IP settings drop-down list and select Static.

Figure 56 Static IP Settings

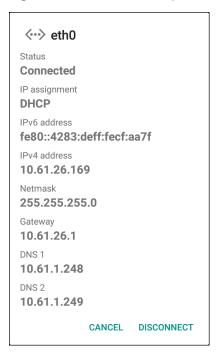

- 10. In the **IP** address field, enter the proxy server address.
- 11. If required, in the **Gateway** field, enter a gateway address for the device.
- 12. If required, in the Netmask field, enter the network mask address
- 13. If required, in the **DNS address** fields, enter a Domain Name System (DNS) addresses.
- 14. Touch CONNECT.
- 15. Touch O.

LED Indicators

There are two green LEDs on the side of the cradle. These green LEDs light and blink to indicate the data transfer rate.


Table 6 LED Data Rate Indicators

| Data Rate | 1000 LED | 100/10 LED |
|-----------|----------|------------|
| 1 Gbps | On/Blink | Off |
| 100 Mbps | Off | On/Blink |
| 10 Mbps | Off | On/Blink |

Charging the Device


1. Insert the device into a slot to begin charging.

Figure 57 Battery Charging

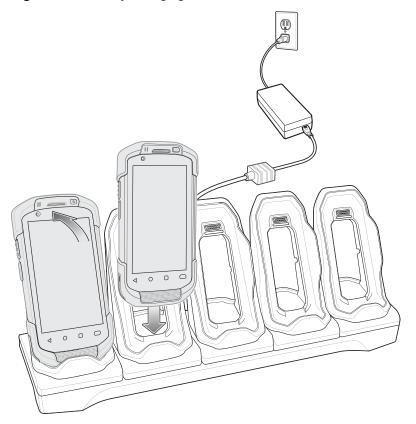

2. Ensure the device is seated properly.

Figure 58 5-Slot Ethernet Cradle with 4-Slot Battery Charger

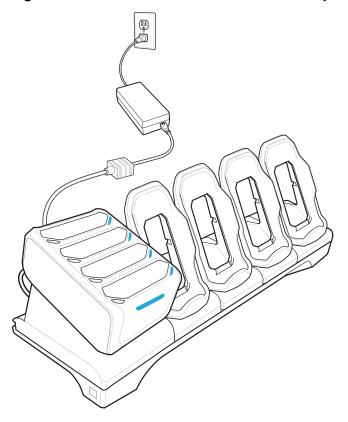

Battery Charging

Main Battery Charging

The device's Charging/Notification LED indicates the status of the battery charging in the device.

The 4,620 mAh battery fully charges in less than sixfive hours at room temperature.

Spare Battery Charging

The Spare battery Charging LED on the cup indicates the status of the spare battery charging.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

 Table 7
 Spare Battery Charging LED Indicators

| LED | Indication |
|---------------------|---|
| Slow Blinking Amber | Spare battery is charging. |
| Solid Green | Charging complete. |
| Fast Blinking Amber | Error in charging; check placement of spare battery. |
| Slow Blinking Red | Spare battery is charging and battery is at the end of useful life. |

 Table 7
 Spare Battery Charging LED Indicators (Continued)

| LED | Indication |
|-------------------|---|
| Solid Red | Charging complete and battery is at the end of useful life. |
| Fast Blinking Red | Error in charging; check placement of spare battery and battery is at the end of useful life. |
| Off | No spare battery in slot; spare battery not placed correctly; cradle is not powered. |

Charging Temperature

Charge batteries in temperatures from 0 °C to 40 °C (32 °F to 104 °F). The device or cradle always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37 °C (+98 °F)) the device or cradle may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device and cradle indicates when charging is disabled due to abnormal temperatures via its LED.

Establishing Ethernet Connection

- 1. Swipe down with two fingers from the status bar to open the quick access panel and then touch ...
- 2. Touch Network & Internet.
- 3. Touch Ethernet.
- 4. Insert the device into a slot.
- 5. Slide the Ethernet switch to the **ON** position. The **<··>** icon appears in the Status bar.
- 6. Touch Eth0 to view Ethernet connection details.


Installing the 4-Slot Battery Charger



NOTE: The Battery Charger must be installed in the first slot only.


1. Remove power from the cradle.

Figure 59 Remove Power from Cradle

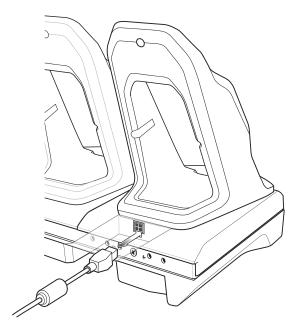


2. Using a Phillips screwdriver, remove the screw securing the cup to the cradle base.

Figure 60 Remove Screw

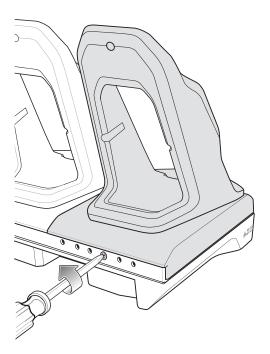


3. Slide the cup to the front of the cradle.

Figure 61 Remove Cup

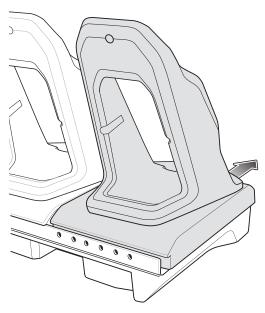

- 4. Carefully lift the cup up to expose the cup power cable.
- 5. Disconnect the cup power cable and USB cable.

Figure 62 Disconnect Cup Cables

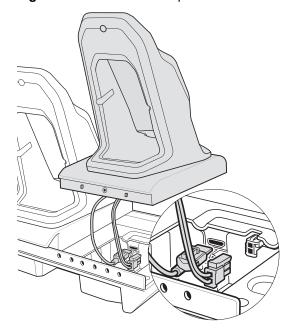




NOTE: Place power cable into adapter to avoid pinching cable.


6. Connect the Battery Adapter power cable to the connector on the cradle.

Figure 63 Connect Adapter Power Cable

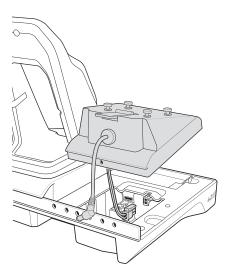


7. Place adapter onto cradle base and slide toward rear of cradle.

Figure 64 Install Adapter

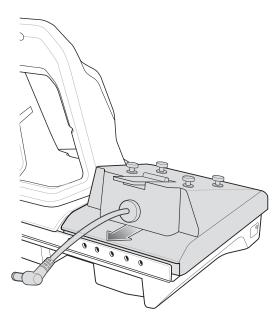


8. Using a Phillips screwdriver, secure adapter to cradle base with screw.

Figure 65 Secure adapter to Cradle

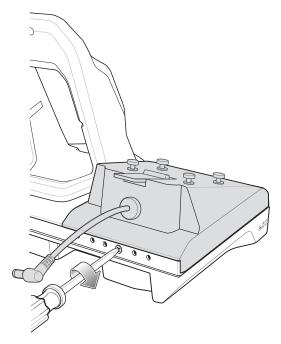


9. Align mounting holes on the bottom of the 4-Slot Battery Charger with the stubs on the Battery Adapter.

Figure 66 Install 4-Slot Battery Charger

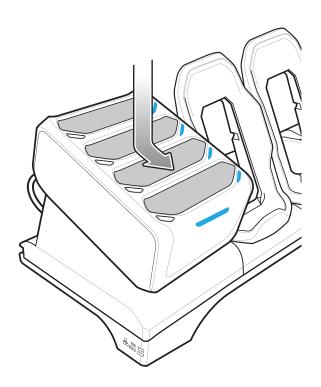

- 10. Slide the 4-Slot battery Charger down toward the front of the cradle.
- 11. Connect the output power plug into the power port on the 4-Slot Battery Charger.


Figure 67 Connect Adapter Power Cable

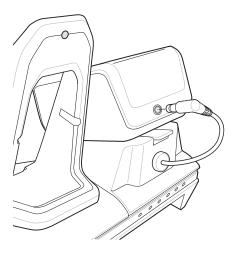

Removing the 4-Slot Battery Charger

- 1. Disconnect the output power plug from the 4-Slot Battery Charger.
- 2. At the back of the cup, press down on the release latch.

Figure 68 Press Release Latch

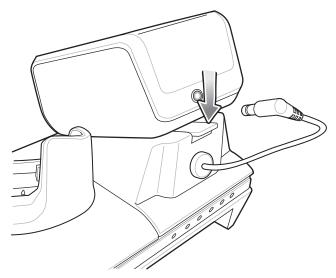


- 3. Slide the 4-Slot Battery Charger toward the front of the cradle.
- 4. Lift the 4-Slot off the cradle cup.

4-Slot Battery Charger

This section describes how to use the 4-Slot Battery Charger to charge up to four device batteries.

Setup


Figure 69 Four Slot Battery Charger Power Setup

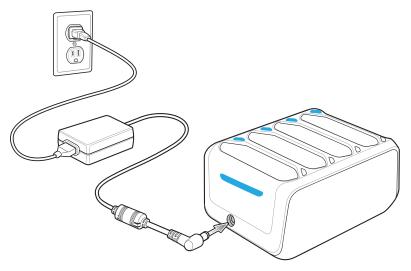

Charging Spare Batteries

- 1. Connect the charger to a power source.
- 2. Insert the battery into a battery charging well and gently press down on the battery to ensure proper contact.

Figure 70 Four Slot Battery Charger

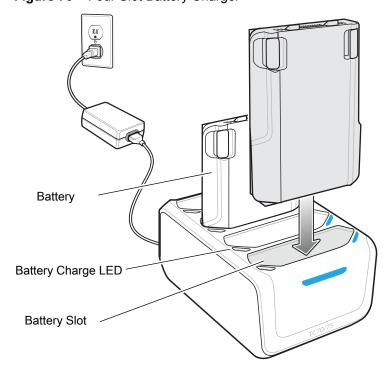

Battery Charging

Spare Battery Charging

Each Battery Charging LED indicates the status of the battery charging in each slot. The table below describes the Battery Charging LED status.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

Table 8 Battery LED Charging Indicators

| LED | Indication |
|---------------------|---|
| Slow Blinking Amber | Spare battery is charging. |
| Solid Green | Charging complete. |
| Fast Blinking Amber | Error in charging; check placement of spare battery. |
| Slow Blinking Red | Spare battery is charging and battery is at the end of useful life. |
| Solid Red | Charging complete and battery is at the end of useful life. |
| Fast Blinking Red | Error in charging; check placement of spare battery and battery is at the end of useful life. |
| Off | No spare battery in slot; spare battery not placed correctly; cradle is not powered. |


Charging Temperature

Charge batteries in temperatures from 0 °C to 40 °C (32 °F to 104 °F). The battery charger always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37 °C (+98 °F)) the battery charger may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The battery charger indicates when charging is disabled due to abnormal temperatures via its LED.

Trigger Handle

The Trigger Handle adds a gun-style handle with a scanning trigger to the device. It increases comfort when using the device in scan-intensive applications for extended periods of time.

Figure 71 Trigger Handle

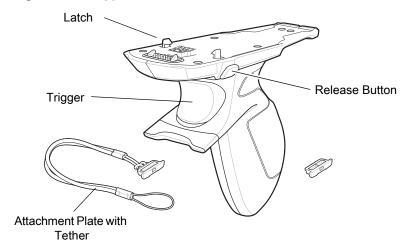


Installing the Attachment Plate to Trigger Handle

To install the attachment plate to the Trigger Handle:

- 1. Insert the loop end of the tether into the slot on the bottom of the handle.
- 2. Feed the attachment plate through the loop.

Figure 72 Install Attachment Plate to Handle

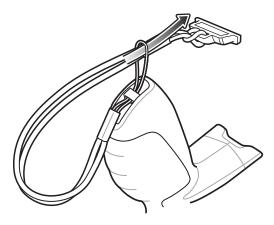


3. Pull the attachment plate until the loop tightens on the tether.

Installing the Trigger Handle Plate

- 1. Press and hold the **Power** button until the menu appears.
- 2. Touch Power off.


- 3. Touch OK.
- 4. Press in the two battery latches.
- 5. Lift the battery from the device.
- 6. Remove the hand strap filler plate from the hand strap slot. Store the hand strap filler plate in a safe place for future replacement.

Figure 73 Remove Hand Strap Plate

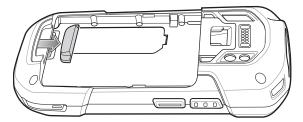

7. Insert the attachment plate into the hand strap slot.

Figure 74 Insert Trigger Handle Plate

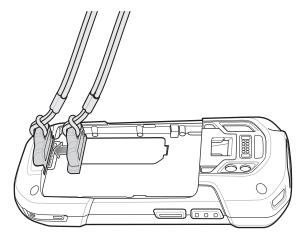

- 8. Insert the battery, bottom first, into the battery compartment in the back of the device.
- 9. Rotate the top of the battery into the battery compartment.
- 10. Press the battery down into the battery compartment until the battery release latches snap into place.

Inserting the Device into the Trigger Handle

1. Align the back of the Trigger handle with the Trigger Mounting Plate.

Figure 75 Connect Device to Trigger Handle



2. Press the two release latches.

3. Rotate the device down and press down until it snaps into place.


Figure 76 Rotate Device onto Trigger Handle



Removing the Device from the Trigger Handle

1. Press both Trigger Handle release latches.

Figure 77 Press Release Latches

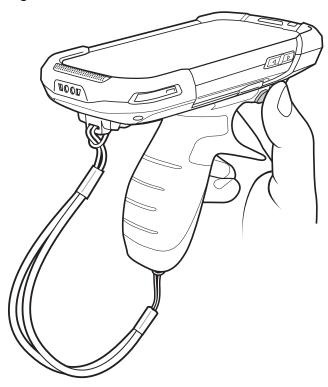

2. Rotate the device up and remove from the Trigger handle.

3. Rotate the device down and press down until it snaps into place.

Figure 78 Rotate Device onto Trigger Handle




Hand Strap Replacement



CAUTION: Close all running applications prior to replacing the hand strap.


- 1. Press and hold the **Power** button until the menu appears.
- 2. Touch Power Off.
- 3. Touch OK.
- 4. Remove the hand strap clip from the hand strap mounting slot.

Figure 79 Remove Hand Strap Clip

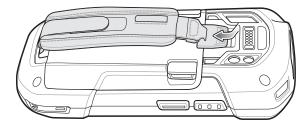


5. Press the two battery latches in.

Figure 80 Press Battery Latches

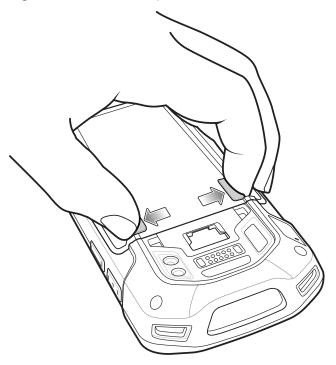

6. Lift the battery from the device.


Figure 81 Lift the Battery

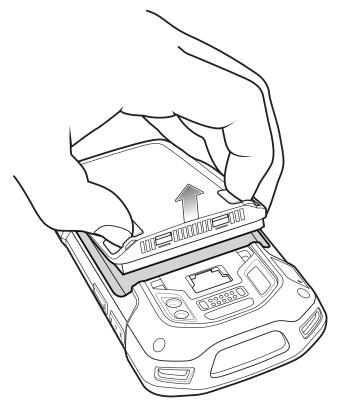

7. Remove the battery.


- 8. Remove the hand strap plate from the hand strap slot.
- 9. Insert the replacement hand strap plate into the hand strap slot.

Figure 82 Insert Hand Strap

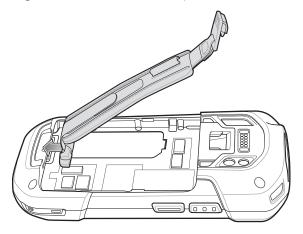


10. Insert the battery, bottom first, into the battery compartment.

Figure 83 Insert Bottom of Battery into Battery Compartment

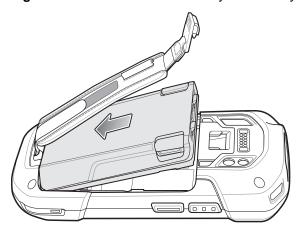

- 11. Rotate the top of the battery into the battery compartment.
- 12. Press the battery down into the battery compartment until the battery release latches snap into place.


Figure 84 Press Down on Battery

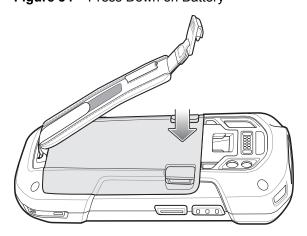

Accessories

13. Place hand strap clip into hand strap mounting slot and pull down until it snaps into place.

Figure 85 Secure Hand Strap Clip

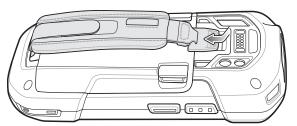

Settings

Introduction

This chapter describes settings available for configuring the device.

WWAN Configuration


There are some WWAN configuration options that can be configured by the system administrator.

- Default SIM slot
- · Network type
- · Band preference.

Default SIM Slot Configuration

The device contains three SIM slots that can be used for installing up to three SIM cards. A system administrator can set the default SIM slot for the device.

Figure 86 TC75x SIM Slot

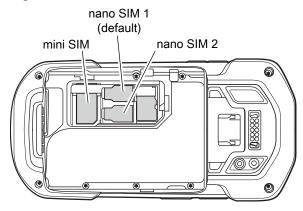


To set the default SIM slot:

- 1. Swipe down from the Status bar to open the Quick Access panel and then touch ...
- 2. Touch System > About phone > SW components.
- 3. Touch WWAN five times. The message Turn ON SIM Slot UI appears.

5. Touch Network & Internet > Mobile network > Advanced > SIM socket selection.

Figure 87 SIM Selection Dialog Box

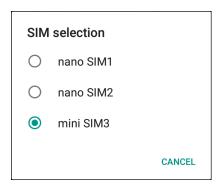

6. Select the SIM slot to set as default.

WLAN Configuration

This section provides information on configuring Wi-Fi settings.

Configuring a Secure Wi-Fi Network

To set up a Wi-Fi network:

- 1. Swipe down from the Status bar to open the Quick Access panel, and then touch \$\pi\$.
- 2. Touch Network & Internet > Wi-Fi.
- 3. Slide the switch to the **ON** position.
- 4. The device searches for WLANs in the area and lists them on the screen.
- 5. Scroll through the list and select the desired WLAN network.

6. Touch the desired network. If the network security is **Open**, the device automatically connects to the network. For all other network security a dialog box appears.

Figure 88 WLAN WEP Network Security Dialog Box


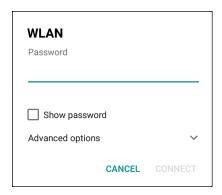


Figure 89 WLAN 802.11 EAP Network Security Dialog Box



7. If the network security is **WEP** or **WPA/WPS2 PSK**, enter the required password and then touch **Connect**.

- 8. If the network security is 802.1x EAP:
 - Touch the EAP method drop-down list and select PEAP, TLS, TTLS, or LEAP.
 - Touch the Phase 2 authentication drop-down list and select an authentication method.
 - If required, touch CA certificate and select a Certification Authority (CA) certificate. Note: Certificates
 are installed using the Security settings.
 - If required, touch **User certificate** and select a user certificate. Note: User certificates are installed using the Location & security settings.
 - If required, in the Identity text box, enter the username credentials.
 - If desired, in the Anonymous identity text box, enter an anonymous identity username.
 - If required, in the Password text box, enter the password for then given identity.

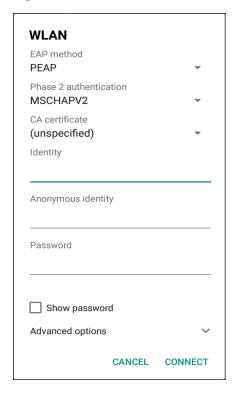

NOTE: By default, the network Proxy is set to **None** and the IP settings is set to **DHCP**. See Configuring for a Proxy Server for setting connection to a proxy server and see Configuring the Device to Use a Static IP Address for setting the device to use a static IP address.

9. Touch Connect.

10. Touch O.

Manually Adding a Wi-Fi Network

Manually add a Wi-Fi network if the network does not broadcast its name (SSID) or add a Wi-Fi network when out of range.

- 1. Swipe down from the Status bar to open the Quick Access panel, and then touch \$\frac{\pi}{2}\$.
- 2. Touch Network & Internet > Wi-Fi.
- 3. Slide the Wi-Fi switch to the **On** position.
- Scroll to the bottom of the list and select Add network.
- 5. In the **Network name** text box, enter the name of the Wi-Fi network.
- 6. In the **Security** drop-down list, set the type of security to:
 - None
 - WEP
 - WPA/WPA2 PSK
 - 802.1x EAP.
- 7. If the network security is **None**, touch **Save**.
- 8. If the network security is WEP or WPA/WPA2 PSK, enter the required password, and then touch Save.

- 9. If the network security is 802.1x EAP:
 - Touch the EAP method drop-down list and select PEAP, TLS, TTLS, or LEAP.
 - Touch the Phase 2 authentication drop-down list and select an authentication method.
 - If required, touch CA certificate and select a Certification Authority (CA) certificate. Note: Certificates
 are installed using the Security settings.
 - If required, touch **User certificate** and select a user certificate. Note: User certificates are installed using the **Security** settings.
 - If required, in the Identity text box, enter the username credentials.
 - If desired, in the **Anonymous** identity text box, enter an anonymous identity username.
 - If required, in the Password text box, enter the password for the given identity.



NOTE: By default, the network Proxy is set to **None** and the IP settings is set to **DHCP**. See Configuring for a Proxy Server for setting connection to a proxy server and see Configuring the Device to Use a Static IP Address for setting the device to use a static IP address.

- 10. Touch **Save**. To connect to the saved network, touch and hold on the saved network and select **Connect to network**.
- 11. Touch ().

Configuring for a Proxy Server

A proxy server is a server that acts as an intermediary for requests from clients seeking resources from other servers. A client connects to the proxy server and requests some service, such as a file, connection, web page, or other resource, available from a different server. The proxy server evaluates the request according to its filtering rules. For example, it may filter traffic by IP address or protocol. If the request is validated by the filter, the proxy provides the resource by connecting to the relevant server and requesting the service on behalf of the client.


It is important for enterprise customers to be able to set up secure computing environments within their companies, making proxy configuration essential. Proxy configuration acts as a security barrier ensuring that the proxy server monitors all traffic between the Internet and the intranet. This is normally an integral part of security enforcement in corporate firewalls within intranets.

To configure the device for a proxy server:

- 1. Swipe down from the Status bar to open the Quick Access panel, and then touch 🌣.
- 2. Touch Network & Internet > Wi-Fi.
- 3. Slide the Wi-Fi switch to the **On** position.
- 4. In the network dialog box, select and touch a network.
- 5. Touch Advanced options.

6. Touch Proxy and select Manual.

Figure 90 Proxy Settings

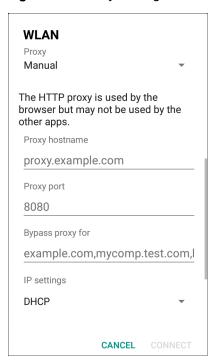

- 7. In the **Proxy hostname** text box, enter the address of the proxy server.
- 8. In the **Proxy port** text box, enter the port number for the proxy server.
- 9. In the **Bypass proxy for** text box, enter addresses for web sites that are not required to go through the proxy server. Use a comma "," between addresses. Do not use spaces or carriage returns between addresses.
- 10. Touch Connect.
- 11. Touch **(**).

Configuring the Device to Use a Static IP Address


By default, the device is configured to use Dynamic Host Configuration Protocol (DHCP) to assign an Internet protocol (IP) address when connecting to a wireless network.

To configure the device to connect to a network using a static IP address:

- 1. Swipe down from the Status bar to open the Quick Access panel, and then touch 🌣.
- Touch Network & Internet > Wi-Fi.
- 3. Slide the Wi-Fi switch to the **On** position.
- 4. In the network dialog box, select and touch a network.
- Touch Advanced options.

6. Touch IP settings and select Static.

Figure 91 Static IP Settings

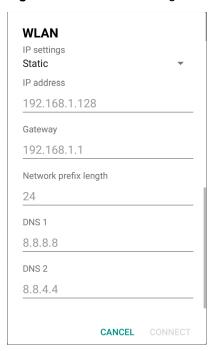

- 7. In the IP address text box, enter an IP address for the device.
- 8. If required, in the **Gateway** text box, enter a gateway address for the device.
- 9. If required, in the **Network prefix length** text box, enter the prefix length.
- 10. If required, in the **DNS 1** text box, enter a Domain Name System (DNS) address.
- 11. If required, in the **DNS 2** text box, enter a DNS address.
- 12. Touch Connect.
- 13. Touch ().

Wi-Fi Preferences

Use the **Wi-Fi preferences** to configure advanced Wi-Fi settings. From the Wi-Fi screen scroll down to the bottom of the screen and touch **Wi-Fi preferences**.

- Open network notification When enabled, notifies the user when an open network is available.
- Advanced Touch to expand options.
 - Additional settings See Additional Settings.
 - Install Certificates Touch to install certificates.
 - Network rating provider Disabled (AOSP devices). To help determine what constitutes a good Wi-Fi
 network, Android supports external Network rating providers that provide information about the quality of

open Wi-Fi networks. Select one of the providers listed or **None**. If none are available or selected, the Connect to open networks feature is disabled.

- Wi-Fi Direct Displays a list of devices available for a direct Wi-Fi connection.
- WPS Push Button Touch to connect to a network using Wi-Fi Protected Setup (WPS) push button method.
- WPS Pin Entry Touch to connect to a network using Wi-Fi Protected Setup (WPS) pin entry method.
- MAC address Displays the Media Access Control (MAC) address of the device when connecting to Wi-Fi networks.
- IP address Displays the IP address of the device when connecting to Wi-Fi networks.

Additional Wi-Fi Settings



NOTE: Additional Wi-Fi settings are for the device, not for a specific wireless network.

Use the **Additional Settings** to configure additional Wi-Fi settings. To view the additional Wi-Fi settings, scroll to the bottom of the **Wi-Fi** screen and touch **Wi-Fi** Preferences > **Advanced** > **Additional settings**.

Regulatory

- **Country Selection** Displays the acquired country code if 802.11d is enabled, else it displays the currently selected country code.
- Region code Displays the current region code.

Band and Channel Selection

- Wi-Fi frequency band Set the frequency band to: Auto (default), 5 GHz only or 2.4 GHz only.
- Available channels (2.4 GHz) Touch to display the Available channels menu. Select specific channels and touch OK.
- Available channels (5 GHz) Touch to display the Available channels menu. Select specific channels and touch OK.

Logging

- Advanced Logging Touch to enable advanced logging or change the log directory.
- · Wireless logs Use to capture Wi-Fi log files.
 - **Fusion Logger** Touch to open the **Fusion Logger** application. This application maintains a history of high level WLAN events which helps to understand the status of connectivity.
 - **Fusion Status** Touch to display live status of WLAN state. Also provides information about the device and connected profile.

About

• Version - Displays the current Fusion information.


Wi-Fi Direct

Wi-Fi Direct devices can connect to each other without having to go through an access point. Wi-Fi Direct devices establish their own ad-hoc network when required, letting you see which devices are available and choose which one you want to connect to.

1. Swipe down from the status bar and then touch ...

2. Touch **Wi-Fi > Wi-Fi preferences > Advanced > Wi-Fi Direct**. The device begins searching for another Wi-Fi Direct device.

Figure 92 Wi-Fi Direct Screen

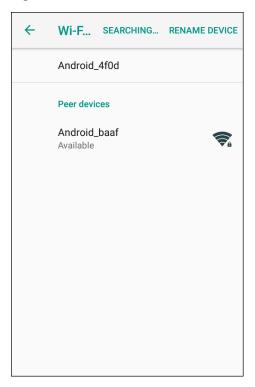

- 3. Under **Peer devices**, touch the other device name.
- 4. On the other device, select Accept.
- 5. **Connected** appears on the device. On both devices, in their respective Wi-Fi Direct screens, the other device name appears in the list.

WPS Push Button

Wi-Fi Protected Setup (WPS) is a feature allowing devices to easily connect to Wi-Fi access points without typing a long password.

To use a wireless router WPS button:

- 1. On the device, swipe down from the status bar and then touch ...
- 2. Touch Wi-Fi > Wi-Fi preferences > Advanced > WPS Push Button. A dialog box displays.

Figure 93 WPS Setup Dialog Box



3. On the wireless router, locate the WPS button. The device connects to the wireless router.

WPS Pin Entry

Wi-Fi Protected Setup (WPS) is a feature allowing devices to easily connect to Wi-Fi access points without typing a long password.

To use a PIN to connect to a wireless router:

- 1. Log in to the router.
- 2. Go to the Add WPS Client screen. Refer to the wireless router user documentation specific information.
- 3. On the device, swipe down from the status bar, and then touch .
- 4. Touch **Wi-Fi > Wi-Fi preferences > Advanced > WPS Pin Entry**. A dialog box displays with an Pin number.

Figure 94 Pin Entry Dialog Box



On the router, enter the Pin number. The device connects to the wireless router.

Setting Screen Lock

Use the **Device security** settings to set preferences for locking the screen.

- 1. Swipe down from the Status bar to open the Quick Access panel, and then touch 🌣.
- 2. Touch Security & location.



NOTE: Options vary depending upon the policy of some apps, such as email.

- Screen lock Touch to configure the device to require a slide, pattern, PIN, or password to unlock the screen.
 - None Disable screen unlock security.
 - Swipe Slide the lock icon to unlock the screen.
 - Pattern Draw a pattern to unlock screen. See Setting Screen Unlock Using Pattern for more information.
 - PIN Enter a numeric PIN to unlock screen. See Setting Screen Lock Using PIN for more information.
 - Password Enter a password to unlock screen. See Setting Screen Unlock Using Password for more information.

Lock the screen to protect access to data on the device. Some email accounts require locking the screen. The Locking feature functions differently in Single-user versus Multiple-user mode.

When locked, a slide, pattern, PIN or password is required to unlock the device. Press the Power button to lock the screen. The device also locks after a pre-defined time-out.

Press and release the Power button to wake the device. The Lock screen displays.


Slide the screen up to unlock. If the Pattern screen unlock feature is enabled, the Pattern screen appears instead of the Lock screen.

If the PIN or Password screen unlock feature is enabled, enter the PIN or password after unlocking the screen.

Setting Screen Lock Using PIN

- 1. Swipe down from the Status bar to open the Quick Access panel, and then touch 🌣.
- 2. Touch Security & location.
- 3. Touch Screen lock.
- 4. Touch PIN.
- 5. To require a PIN upon device start up select **Yes**, or select **No** not to require a PIN.

Figure 95 PIN Screen

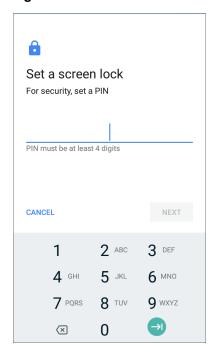


- 6. Touch in the text field.
- 7. Enter a PIN (4 numbers), and then touch Next.
- 8. Re-enter PIN and then touch Next.
- 9. Select the type of notifications that appear when the screen is locked and then touch **Done**.
- 10. Touch O. The next time the device goes into suspend mode a PIN is required upon waking.

Setting Screen Unlock Using Password

- 1. Swipe down from the Status bar to open the Quick Access panel, and then touch 🌣.
- 2. Touch Security & location.
- 3. Touch Screen lock.
- 4. Touch Password.
- 5. To require a password upon device start up select **Yes**, or select **No** not to require a password.
- 6. Touch in the text field.
- 7. Enter a password (between 4 and 16 characters), and then touch Next.

Figure 96 Password Screen

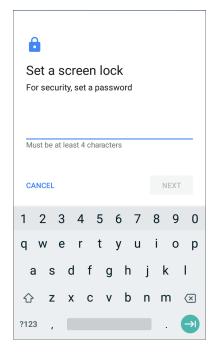


- 8. Re-enter the password and then touch Next.
- 9. Select the type of notifications that appear when the screen is locked and then touch **Done**.
- 10. Touch O. The next time the device goes into suspend mode a password is required upon waking.

Setting Screen Unlock Using Pattern

- 1. Swipe down from the Status bar to open the Quick Access panel, and then touch 🌣.
- 2. Touch Security & location.
- 3. Touch Screen lock.
- 4. Touch Pattern.

5. To require a pattern upon device start up select Yes, or select No not to require a pattern.

Figure 97 Choose Your Pattern Screen

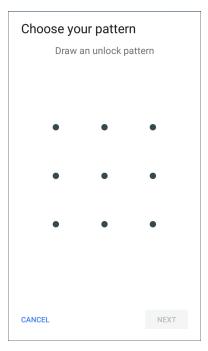

- 6. Draw a pattern connecting at least four dots.
- 7. Touch Continue.
- 8. Re-draw the pattern.
- 9. Touch Confirm.
- 10. Select the type of notifications that appear when the screen is locked, and then touch **Done**.
- 11. Touch O. The next time the device goes into suspend mode a pattern is required upon waking.

Showing Passwords

To set the device to briefly show password characters as the user types:

- 1. Swipe down from the Status bar to open the Quick Access panel and then touch 🌣.
- 2. Touch Security & location.
- 3. Slide the **Show passwords** switch to the ON position.

Remapping a Button

Buttons on the device can be programmed to perform different functions or as shortcuts to installed apps.



NOTE: It is not recommended to remap the scan button.

- Swipe down from the Status bar to open the Quick Access panel and then touch .
- 2. Touch **Key Programmer**. A list of programmable buttons displays.

- 3. Select the button to remap.
- Touch the BUTTON REMAPPING tab or the SHORTCUT tab that lists the available functions and applications.
- 5. Touch a function or application shortcut to map to the button.



NOTE: If you select an application shortcut, the application icon appears next to the button on the Key Programmer screen.

- 6. Touch O.
- If remapping the Back, Home, Search, or Menu button, perform a Soft Reset. See the device User Guide for Android 8.1 Oreo.

Accounts

Use the **Accounts** settings to add, remove, and manage accounts. Use these settings to control how applications send, receive, and sync data on their own schedules, and whether applications can synchronize user data automatically.

Applications may also have their own settings to control how they synchronize data; see the documentation for those applications for details.

Language Usage

Use the Language & input settings to change the device's language, including words added to the dictionary.

Changing the Language Setting

- 1. Swipe down from the Status bar to open the Quick Access panel and then touch 🌣.
- 2. Touch System > Languages & input.
- 3. Touch Languages. A list of available languages displays.
- 4. If the desired language is not listed, touch **Add a language** and select a language from the list.
- Touch and hold to the right of the desired language, then drag it to the top of the list.
- 6. The operating system text changes to the selected language.

Adding Words to the Dictionary

- Swipe down from the Status bar to open the Quick Access panel and then touch .
- 2. Touch System > Languages & input > Advanced > Personal dictionary.
- 3. If prompted, select the language where this word or phase is stored.
- 4. Touch + to add a new word or phrase to the dictionary.
- 5. Enter the word or phrase.
- 6. In the **Shortcut** text box, enter a shortcut for the word or phrase.

7. Touch O.

Keyboard Settings

Use the **Languages & input** settings to configure the on-screen keyboards. The device contains the following keyboard settings:

- · Android Keyboard AOSP devices only
- · Enterprise Keyboard
- Gboard GMS devices only.


PTT Express Configuration

Refer to the PTT Express User Guide at www.zebra.com/support for information on configuring the PTT Express Client application.

RxLogger

RxLogger is a comprehensive diagnostic tool that provides application and system metrics, allows for the creation of custom plug-ins, and diagnoses device and application issues. RxLogger logs the following information: CPU load, memory load, memory snapshots, battery consumption, power states, wireless logging, cellular logging, TCP dumps, Bluetooth logging, GPS logging, logcat, FTP push/pull, ANR dumps, etc. All generated logs and files are saved onto flash storage on the device (internal or external).

Figure 98 RxLogger

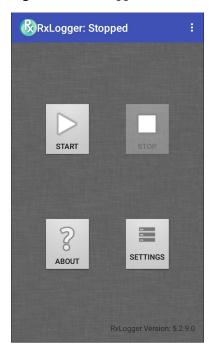


RxLogger Configuration

RxLogger is built with an extensible plug-in architecture and comes packaged with a number of plug-ins already built-in. The included plug-ins are described below.

To open the configuration screen, from the RxLogger home screen touch Settings.

Figure 99 RxLogger Configuration Screen

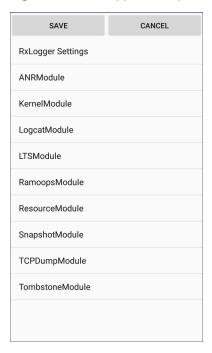

RxLogger Settings

The RxLogger Settings module provides additional RxLogger settings.

- Enable notifications Select to allow RxLogger notifications in the Status bar and Notification panel.
- Enable debug logs Select to enable debug logs.

ANR Module

Application Not Responsive (ANR) indicates that a running application's UI thread is not responding for a specified time period. RxLogger is able to detect this condition and trigger a copy of the call stack trace of the unresponsive application into the log directory. The event is also indicated in the high level CSV log.

- Enable Module Enables logging for this module.
- Log path Specifies the default log path to store the ANR log files.
- Collect Historic ANRs Collects ANR trace files from the system.

Kernel Module

The Kernel Module captures kmsg from the system.

- Enable Module Enables logging for this kernel module.
- Log path Specifies the high level log path for storage of all kernel logs. This setting applies globally to all kernel buffers.
- **Kernel Log filename** Specifies the base log filename for this kernel buffer. The current file count is appended to this name.
- Max Kernel log file size Specifies the maximum size, in megabytes, of an individual log file.
- Kernel Log interval Sets the interval, in seconds, on which to flush the log buffer to the file.

Settings

- Kernel Log file count Specifies the number of log files to keep and rotate through. Each log file is subject
 to the max log size option.
- Enable System Timestamp in Kernel Log Enables system timestamps in kernel logs.
- System Timestamp Interval Sets the interval, in seconds, between system timestamps.
- Enable Logcat Integration override Enables logcat integration overrides.

Logcat Module

Logcat is an essential debugging tool on Android devices. RxLogger provides the ability to record data from all four of the available logcat buffers. The Logcat plug-in can collect data from multiple logcat buffers provided by the system, which are the main, event, radio, and system buffers. Each of the settings are available for each buffer independently unless otherwise noted.

- Enable Module Enables logging for this module.
- Log path Specifies the high level log path for storage of all logcat logs. This setting applies globally to all logcat buffers.
- Enable main logcat Enables logging for this logcat buffer.
 - Main Log interval (sec) Sets the interval, in seconds, on which to flush the log buffer to the file.
 - **Main Log filename** Specifies the base log filename for this logcat buffer. The current file count is appended to this name.
 - Main Log file count Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
 - Main log file size (MB) Specifies the maximum size, in megabytes, of an individual log file.
 - Main log filter Custom logcat filter to run on the main buffer.
- Enable event logcat Enables event logging for this logcat buffer.
 - Event log interval (sec) Sets the interval, in seconds, on which to flush the log buffer to the file.
 - **Event log filename** Specifies the base log filename for this logical buffer. The current file count is appended to this name.
 - Event log file count Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
 - Event log file size (MB) Specifies the maximum size, in kilobytes, of an individual log file.
 - Event log filter Custom logcat filter to run on the event buffer.
- Enable radio logcat Enables logging for this logcat buffer.
 - Radio log interval (sec) Sets the interval, in seconds, on which to flush the log buffer to the file.
 - Radio log filename Specifies the base log filename for this logical buffer. The current file count is appended to this name.
 - Radio log file count Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
 - Radio log file size (MB) Specifies the maximum size, in kilobytes, of an individual log file.
 - Radio log filter -Custom logcat filter to run on the radio buffer.

- Enable system logcat Enables logging for this logcat buffer.
 - System log interval (sec) Sets the interval, in seconds, on which to flush the log buffer to the file.
 - System log filename Specifies the base log filename for this logical buffer. The current file count is appended to this name.
 - **System log file count** Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
 - System log file size (MB) Specifies the maximum size, in kilobytes, of an individual log file.
 - System log filter Custom logcat filter to run on the system buffer.
- Enable crash logcat- Enables logging for this crash logcat buffer.
 - Crash log interval (sec) Sets the interval, in seconds, on which to flush the log buffer to the file.
 - **Crash log filename** Specifies the base log filename for this logical buffer. The current file count is appended to this name.
 - Crash log file count Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
 - Crash log file size (MB) Specifies the maximum size, in megabytes, of an individual log file.
 - Crash log filter Custom logcat filter to run on the crash buffer.
- Enable combined logcat Enables logging for this logcat buffer.
 - Enable main buffer Enable or disable the addition of the main buffer into the combined logical file.
 - Enable event buffer Enable or disable the addition of the event buffer into the combined logcat file.
 - Enable radio buffer Enable or disable the addition of the radio buffer into the combined logical file.
 - Enable system buffer Enable or disable the addition of the system buffer into the combined logical file.
 - Enable crash buffer Enable or disable the addition of the crash buffer into the combined logical file.
 - Combine log interval (sec) Sets the interval, in seconds, on which to flush the log buffer to the file.
 - **Combined log filename** Specifies the base log filename for this logcat buffer. The current file count is appended to this name.
 - **Combined log file count** Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
 - Combined log file size (MB) Specifies the maximum size, in megabytes, of an individual log file.
 - · Combined log filter Custom logcat filter to run on the combined buffer.

LTS Module

The LTS (Long Term Storage) Module captures data over a long duration of time without losing any data. Whenever a file is done being written, LTS saves it as a GZ file in an organized path for later use.

- Enable Module Enables logging for this module.
- **Storage Directory** Specifies the high level log path for storage of all logcat logs. This setting applies globally to all logcat buffers.

Qxdm Module

The Ramoops Module captures Qualcomm Modem Logs from the device.

- Enable Module Enables logging for this module.
- Log path Specifies the storage path for Qxdm files.
- Qxdm Log Size Specifies the maximum size, in kilobytes, of an individual log file.
- Qxdm test sets to keep Specifies the number of test sets to keep. One test set is a start and stop.

- Choose Log Filter Select which filter Qxdm uses to process logs.
- Path for User Defined Filter Specifies the path to a user-defined configuration file.

Ramoops Module

The Ramoops Module captures the last kmsg from the device.

- Enable Module Enables logging for this module.
- Log path Specifies the high level log path for storage of all ramoops logs. This setting applies globally to all Ramoops buffers.
- Base filename Specifies the base log filename for this kernal buffer. The current file count is appended to this name.
- Ramoops file count Specifies the number of log files to keep and rotate through. Each log file is subject to the log size option.

Resource Module

The Resource Module captures device information and system statistics at specified intervals. The data is used to determine the health of the device over a period of time.

- Enable Module Enables logging for this module.
- Log Path Specifies the high level log path for storage of all resource logs. This setting applies globally to all resource buffers.
- Resource Log interval Sets the interval, in seconds, on which to flush the log buffer to the file.
- · Resource Log file size Specifies the maximum size, in megabytes, of an individual log file.
- **Resource Log file count** Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
- Power Enables or disables the collection of Battery statistics.
- System Resource- Enables or disables the collection of System Resource information.
- Network Enables or disables the collection of Network status.
- Bluetooth Enables or disables the collection of Bluetooth information.
- Light Enables or disables the collection of ambient light level.
- Heater Not supported.

Snapshot Module

The Snapshot Module collects detailed device statistics at an interval to see detailed device information.

- Enable Module Enables logging for this module.
- Log Path Specifies the base path to use to store the snapshot files
- Log filename Specifies the base filename for all the snapshot files. The current file count is appended to this name.
- Log Interval (sec) Specifies the interval, in seconds, on which to invoke a detailed snapshot.
- Snapshot file count The maximum number of Snapshot files to keep at any one time.
- Top Enables or disables the running of the top command for data collection.
- CPU Info Enables detailed per process CPU logging in the snapshot.
- Memory Info Enables logging of detailed per process memory usage in the snapshot.
- Battery Info Enables logging of detailed power information including battery life, on time, charging, and wake locks.

Settings

- Wake Locks Enables or disables the collection of the sys/fs wake_lock information.
- Time in State Enables or disables the collection of the sys/fs cpufreg for each core.
- Processes Enables dumping the complete process list in the snapshot.
- Threads Enables dumping all processes and their threads in the snapshot.
- **Properties** Enables dumping of all system properties on the device. This includes build/version information as well as state information.
- Interfaces Enables or disables the running of the netcfg command for data collection.
- IP Routing Table Enables or disables the collection of the net route for data collection.
- Connectivity Enables or disables the running of the dumpsys connectivity command for data collection.
- Wifi Enables or disables the running of the dumpsys wifi command for data collection.
- File systems Enables dumping of the available volumes on the file system and the free storage space for each.
- **Usage stats** Enables dumping of detailed usage information for each package on the device. This includes the number of starts and duration of each run.

TCPDump Module

The TCPDump Module captures TCP data that happens over the device's networks.

- Enable Module Enables logging for this module.
- Log path Specifies the location to store the TCPDump output log files.
- Base filename Specifies the base filename to use when storing the TCPDump files. The index number of the current log file is appended to the filename.
- Tcpdump file size (MB) Specifies the maximum file size, in megabytes, for each log file created.
- Tcpdump file count Specifies the number of log files to cycle through when storing the network traces.

Tombstone Module

The Tombstone Module collects tombstone (Linux Native Crashes) logs from the device.

- Enable Module Enables logging for this module.
- Log path Specifies the location to store the Tombstone output log files.
- Collect Historic tombstones Collects new and existing tombstone files.

Configuration File

RxLogger configuration can be set using an XML file. The <code>config.xml</code> configuration file is located on the microSD card in the <code>RxLogger\config</code> folder. Copy the file from the device to a host computer using a USB connection. Edit the configuration file and then replace the XML file on the device. There is no need to stop and restart the RxLogger service since the file change is automatically detected.

Enabling Logging

To enable logging:

- 1. Swipe the screen up and select .
- 2. Touch Start.
- 3. Touch O.

Disabling Logging

To disable logging:

- 1. Swipe the screen up and select 🕲.
- 2. Touch Stop.
- 3. Touch O.

Extracting Log Files

- 1. Connect the device to a host computer using an USB connection.
- 2. Using a file explorer, navigate to the RxLogger folder.
- 3. Copy the file from the device to the host computer.
- 4. Disconnect the device from the host computer.


RxLogger Utility

RxLogger Utility is a data monitoring application for viewing logs in the device while RxLogger is running. Logs and RxLogger Utility features are accessed in the App View or the Overlay View.

App View

In App View, the user views logs in the RxLogger Utility.

Figure 100 App View

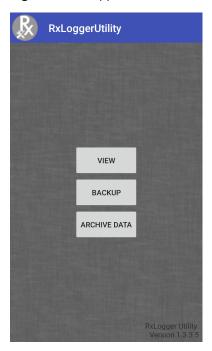


Backup

RxLogger Utility allows the user to make a zip file of the RxLogger folder in the device, which by default contains all the RxLogger logs stored in the device.

To save the backup data, touch **BACKUP > Yes**.


Figure 101 Backup Message

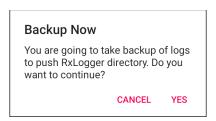

Archive Data

View all the RxLogger logs stored in the default RxLogger directory. Logs viewed in the Archive window are not live.

Figure 102 Archive

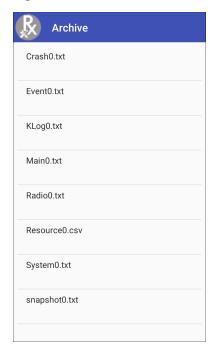

To view the log files, touch ARCHIVE DATA and then touch a log file.

Overlay View

Use Overlay View to display RxLogger information while using other apps or on the home screen. Overlay View is accessed using the Main Chat Head.

Initiating the Main Chat Head

To initiate the Main Chat Head:

- 1. Open RxLogger.
- 2. Touch : > Toggle Chat Head. The Main Chat Head icon appears on the screen.
- 3. Touch and drag the Main Chat head icon to move it around the screen.

Removing the Main Chat Head

To remove the Main Chat Head icon:


- 1. Touch and drag the icon. A circle with an X appears.
- 2. Move the icon over the circle and then release.

Viewing Logs

To view logs:

1. Touch the Main Chat Head icon. The Overlay View screen appears.

Figure 103 Overlay View Screen

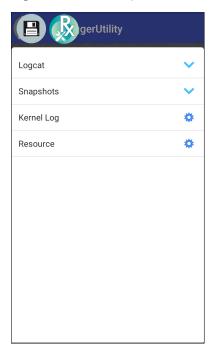

- 2. Touch a log to open it. The user can open many logs with each displaying a new sub Chat Head.
- 3. If necessary, scroll left or right to view additional Sub Chat Head icons.

4. Touch a Sub Chat Head to display the log contents.

Figure 104 Log File



Removing a Sub Chat Head Icon

To remove a sub chat Head icon, press and hold the icon until it disappears.

Backing Up In Overlay View

RxLogger Utility allows the user to make a zip file of the RxLogger folder in the device, which by default contains all the RxLogger logs stored in the device.

The Backup icon is always available in Overlay View.

- 1. Touch . The Backup dialog box appears.
- Touch Yes to create the back up.

About Phone

Use About phone settings to view information about the device. Swipe down from the Status bar to open the Quick Access panel and then touch 🌣 > System > About phone.

- Status Touch to display the following:
 - Battery status Indicates if the battery is charging (on AC power) or discharging (on battery power).
 - · Battery level Indicates the battery charge level.
 - · SIM Status Touch to display SIM status (WWAN only).
 - Network Indicates the current network carrier.
 - Signal strength Indicates the radio signal strength.
 - Mobile network type Indicates the mobile network type.
 - Operator info Indicates operator information.

Settings

- Service state Indicates the state of service.
- Roaming Indicates if the device is roaming outside the network.
- Mobile network state Indicates the mobile network state.
- IMS Registration State Indicates the IP Multimedia Subsystem status.
- My phone number Displays the phone number associated with the device.
- IMEI Displays the IMEI number for the device.
- IMEI SV Displays the IMEI SV number for the device.
- ICCID Displays the ICCID number for the device.
- IMEI Information Displays the IMEI information for the device (WWAN only).
 - IMEI Displays the IMEI number for the device.
 - IMEI SV Displays the IMEI SV number for the device.
- IP address Displays the IP address of the device.
- Wi-Fi MAC address Displays the Wi-Fi radio MAC address.
- Ethernet MAC address Displays the Ethernet driver MAC address.
- Bluetooth address Displays the Bluetooth radio Bluetooth address.
- Serial number Displays the serial number of the device.
- MSM serial number Displays the serial number of the MSM.
- **Up time** Displays the time that the device has been running since being turned on.
- Battery Information Displays information about the battery.
- SW components Lists filenames and versions for various software on the device.
- Legal information Opens a screen to view legal information about the software included on the device.
- · Model Displays the devices model number.
- Android version Displays the operating system version.
- Android security patch level Displays the security patch level date.
- Baseband version Displays WAN radio firmware version (WWAN only).
- Kernel version Displays the kernel version.
- **Build Fingerprint** Defines Device Manufacturer, Model, Android version and Build version together in one location.
- Build number Displays the software build number.

USB Communication

Introduction

This chapter provides information for transferring files between the device and a host computer.

Transferring Files with a Host Computer via USB

Connect the device to a host computer using a USB cable or a USB cradle to transfer files between the device and the host computer.

When connecting the device to a host computer, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.

Transferring Files



NOTE: Use Transfer files to copy files between the device (internal memory or microSD card) and the host computer.

- 1. Connect a USB cable to the device or place the device into a USB cradle.
- 2. Pull down the Notification panel and touch **USB charging this device**. By default, **Charge this device** is selected.

Figure 105 Use USB to Dialog Box



- 3. Touch Transfer files.
- 4. On the host computer, open a file explorer application.
- 5. Locate the **device** as a portable device.

- 6. Open the SD card or the Internal storage folder.
- 7. Copy files to and from the device or delete files as required.

Transferring Photos

To transfer photos using Photo Transfer Protocol:



NOTE: Use Photo Transfer Protocol (PTP) to copy photos from either the microSD card or internal memory to the host computer.

- 1. Connect USB cable to the device or place the device into a USB cradle. See Accessories for setup information.
- 2. Pull down the Notification panel and touch USB charging this device.
- 3. Touch Transfer photos (PTP).
- 4. On the host computer, open a file explorer application.
- 5. Open the **SD card** or the **Internal storage** folder.
- 6. Copy or delete photos as required.

Disconnect from the Host Computer

To disconnect the device from the host computer:



CAUTION: Carefully follow the host computer's instructions to unmount the microSD card and disconnect USB devices correctly to avoid losing information.

- 1. On the host computer, unmount the device.
- 2. Remove the USB cable from the device or remove the device from the cradle.

DataWedge

Introduction

This chapter applies to DataWedge on Android devices. DataWedge is an application that reads data, processes the data and sends the data to an application.

Basic Scanning

Scanning can be performed using the following:

Imager


Barcode Capture with Imager

To capture barcode data:

- 1. Ensure that an application is open on the device and a text field is in focus (text cursor in text field).
- 2. Point the top of the device at a barcode.
- Press and hold the Scan button or Trigger.
 The red laser aiming pattern turns on to assist in aiming.
- 4. Ensure the barcode is within the area formed by the cross-hairs in the aiming pattern. The aiming dot is used for increased visibility in bright lighting conditions.

The Scan LEDs light green and a beep sounds, by default, to indicate the barcode was decoded successfully. Note that when the device is in Pick List Mode, the device does not decode the barcode until the center of the crosshair touches the barcode.

Figure 106 Data Capture

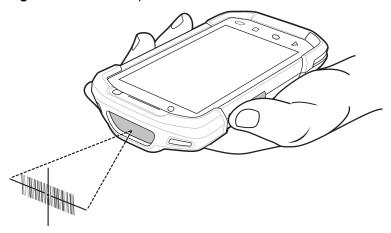

- 5. Release the scan button or Trigger.
- 6. The barcode content data appears in the text field.

Profiles

DataWedge is based on profiles and plug-ins. A profile contains information on how DataWedge should behave with different applications.

Profile information consists of:

- · Associated application
- · Data Capture Plus configurations
- Input plug-in configurations
- Output plug-in configurations
- · Process plug-in configurations.

Using profiles, each application can have a specific DataWedge configuration. For example, each user application can have a profile which outputs scanned data in the required format when that application comes to the foreground. DataWedge can be configured to process the same set of captured data differently based on the requirements of each application.

DataWedge includes the following pre-configured profiles which support specific built-in applications:

- Visible profiles:
 - **Profile0** created automatically the first time DataWedge runs. Generic profile used when there are no user created profiles associated with an application.
 - Launcher enables scanning when the Launcher is in foreground.
 - DWDemo provides support for the DWDemo application.

Some Zebra applications are capable of capturing data by scanning. DataWedge is pre-loaded with private and hidden profiles for this purpose. There is no option to modify the private profiles.

Profile0

Profile0 can be edited but cannot be associated with an application. That is, **DataWedge** allows manipulation of plug-in settings for **Profile0** but it does not allow assignment of a foreground application. This configuration allows **DataWedge** to send output data to any foreground application other than applications associated with user-defined profiles when **Profile0** is enabled.

Profile0 can be disabled to allow **DataWedge** to only send output data to those applications which are associated in user-defined profiles. For example, create a profile associating a specific application, disable **Profile0** and then scan. **DataWedge** only sends data to the application specified in the user-created profile. This adds additional security to **DataWedge** enabling the sending of data only to specified applications.

Plug-ins

A plug-in is a software module utilized in DataWedge to extend its functionality to encompass technologies such as barcode scanning. The plug-ins can be categorized into three types based on their operations:

- · Input Plug-ins
- · Output Plug-ins
- · Process Plug-ins.

Input Plug-ins

An Input Plug-in supports an input device, such as a barcode scanner contained in, or attached to the device. **DataWedge** contains base plug-ins for these input devices.

Barcode Scanner Input Plug-in – The Barcode Scanner Input Plug-in is responsible for reading data from the integrated barcode scanner and supports different types of barcode readers including laser, imager and internal camera. Raw data read from the barcode scanner can be processed or formatted using Process Plug-ins as required. **DataWedge** has built-in feedback functionality for the barcode scanner to issue user alerts. The feedback settings can be configured according to user requirement.

Process Plug-ins

Process Plug-ins are used in **DataWedge** to manipulate the received data according to the requirement, before sending to the foreground application via the Output Plug-in.

- Basic Data Formatting Process Plug-in The Basic Data Formatting Plug-in allows DataWedge to add a prefix and/or a suffix to the captured data before passing it to an Output Plug-in.
- Advanced Data Formatting Process Plug-in The Advanced Data Formatting Plug-in allows
 DataWedge to apply rules (actions to be performed based on defined criteria) to the data received via an input plug-in before passing it to an Output Plug-in.

Output Plug-ins

Output Plug-ins are responsible for sending the data from Input Plug-ins to a foreground application on the device.

• **Keystroke Output Plug-in** – The Keystroke Output Plug-in collects and sends data received from the Input Plug-in to the foreground applications by emulating keystrokes.

DataWedge

- Intent Output Plug-in The Intent Output Plug-in collects and sends data received from the Input Plug-ins to foreground applications using the Android Intent mechanism.
- IP Output Plug-in The IP Output Plug-in collects and sends data received from the Input Plug-ins to a host computer via a network connection. Captured data can be sent over an IP network to a specified IP address and port using either TCP or UDP transport protocols.


Profiles Screen

To launch DataWedge, swipe up from the bottom of the screen and touch **...**. By default, the following profiles appear:

- Profile0
- Launcher
- DWDemo

Profile0 is the default profile and is used when no other profile can be applied.

Figure 107 DataWedge Profiles Screen

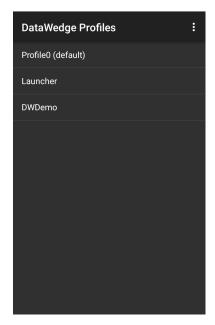

Profile names are color coded. Enabled profiles are white and disabled profiles are gray.

To configure a profile touch the profile name.

Profile Context Menu

Touch and hold a profile to open a context menu that allows additional actions to be performed on the selected profile.

Figure 108 Profile Context Menu




The profile context menu allows the profile to be edited (same as just tapping on a profile), renamed or deleted.

Options Menu

Touch to open the options menu.

Figure 109 DataWedge Options Menu



The menu provides options to create a new profile, access to general DataWedge settings and DataWedge version information.

Disabling DataWedge

- 1. Swipe up from the bottom of the screen and touch **...**.
- 2. Touch .
- 3. Touch Settings.
- 4. Touch DataWedge enabled.

The blue check disappears from the checkbox indicating that DataWedge is disabled.


Creating a New Profile

To create a new profile:

- 1. Swipe up from the bottom of the screen and touch **...**.
- 2. Touch .

- 3. Touch New profile.
- In the New profile dialog box, enter a name for the new profile. It is recommended that profile names be unique and made up of only alpha-numeric characters (A-Z, a-z, 0-9).

Figure 110 New Profile Name Dialog Box

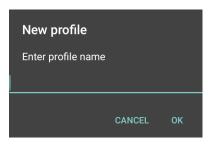


5. Touch OK.

The new profile name appears in the DataWedge profile screen.

Profile Configuration

To configure the Profile0 or a user-created profile, touch the profile name.

Figure 111 Profile Configuration Screen

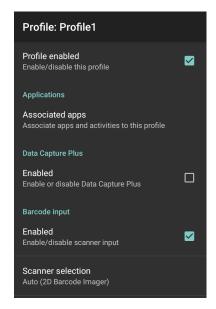

The configuration screen lists the following sections:

- Profile enabled
- · Applications
- Data Capture Plus (DCP)
- · Barcode Input
- SimulScan Input
- Keystroke output
- Intent Output

· IP Output.

Associating Applications

Use Applications option to associate applications with this profile. User created profiles should be associated with one or more applications and its activities.

1. Touch **Associated apps**. A list of applications/activities associated with the profile displays. Initially the list does not contain any applications/activities.


Figure 112 Associated Apps Screen



2. Touch :.


3. Touch New app/activity.

Figure 113 Select Application Menu

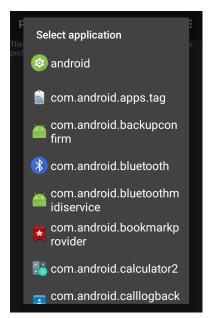

- 4. In the **Select application** screen, select the desired application from the list.
- 5. In the **Select activity** menu, selecting the activity adds that application/activity combination to the associated application list for that profile. Selecting * as the activity results in all activities within that application being associated to the profile. During operation, DataWedge tries to match the specific application/activity combinations with the foreground application/activity before trying to match the general application/* combinations.
- 6. Touch **◁**.


Figure 114 Selected Application/Activity

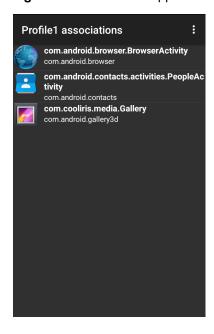

Data Capture Plus


Data Capture Plus (DCP) is a DataWedge feature that enables the user to initiate data capture by touching a designated part of the screen. A variable screen overlay acts like a scan button.

Figure 115 Minimized Data Capture Panel

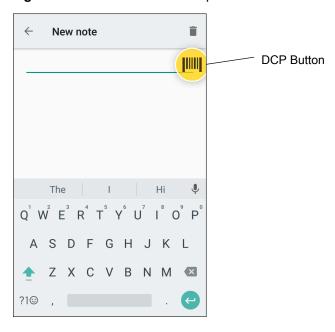

The DataWedge profile configuration screen allows the user to configure how the DCP appears on the screen once the particular profile is enabled. The DCP is hidden by default. Enabling DCP option displays seven additional configuration parameters.

Figure 116 Data Capture Panel Settings

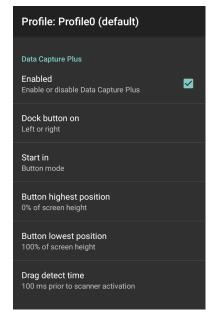

• Enable - Select to enable Data Capture Plus (default - disabled).

- Dock button on Select position of the button.
 - Left or right Allows user to place the button on either the right or left edge of the screen.
 - Left only Places the button on left edge of the screen.
 - Right only Places the button on the right edge of the screen.
- Start in Select the initial DCP state.
 - Fullscreen mode DCP covers the whole screen.
 - Button mode DCP displays as a circular button on the screen and can be switched to fullscreen mode.
 - Button only mode DCP displays as a circular button on the screen and cannot be switched to fullscreen mode.
- **Button highest position** Select the top of the range the user is allowed to move the DCP, given as a percent of the screen height (default 0).
- **Button lowest position** Select the bottom of the range the user is allowed to move the DCP, given as a percent of the screen height (default 100).
- **Drag detect time** Select the time in milliseconds that the scanner waits before activating scanner. This allows the user to drag the button without initiating scanner (default 100 ms, maximum 1000 ms).



NOTE: The DCP does not appear if the scanner is disabled in the profile even though the Enabled option is set.

In Button mode, the user can place DCP in full screen mode by dragging the button over **Fullscreen mode**. The overlay covers the screen.

Figure 117 Maximized DCP



Swipe down to return to button mode.

Barcode Input

Use the Barcode Input options to configure the Barcode Scanner Input Plug-in for the profile.

Enabled

Enables or disables this plug-in. A check in the checkbox indicates that the plug-in is enabled.

Scanner Selection

Configures which scanning device to use for barcode data capture when the profile is active. For Bluetooth scanners, if the device was not previously paired, a pairing barcode displays prior to automatic connection.

- Auto The software automatically determines the best scanning device.
- Camera Scanner Scanning is performed with the rear-facing camera.
- 2D Barcode Imager Scanning is performed using the 2D Imager.
- Bluetooth Scanner Scanning is performed using the optional Bluetooth scanner.
- RS6000 Bluetooth Scanner Scanning is performed using the RS6000 Bluetooth scanner.
- DS3678 Bluetooth Scanner Scanning is performed using the DS3678 Bluetooth scanner.
- LI3678 Bluetooth Scanner Scanning is performed using the DS3678 Bluetooth scanner.

Auto Switch to Default on Event

This feature configures DataWedge to select an external scanner as the default scanning device immediately upon connection and revert to a built-in scanner when the external scanner is disconnected. External scanners include those connecting by Bluetooth, serial cable or snap-on module. Disabled by default. This is only available when **Scanner Selection** is set to **Auto**.

This helps reduce scanning workflow interruptions when a Bluetooth scanner is introduced and/or it becomes disconnected due to losing power or moving out of range.

- Disabled No scanner switching occurs when an external scanner is connected or disconnected (default).
- On connect Selects the external scanner as the default scanning device immediately upon connection.
- On disconnect Reverts to a built-in scanner based on its position in an internally managed scanner list (which varies by host device). This is usually the scanner most recently used prior to the external connection (see notes below).
- On connect/disconnect Selects an external scanner as the default scanning device immediately upon connection. Upon disconnection, reverts to the scanner set as the default prior to the external connection.



NOTE: The system selects the default scanner based on the connection state and the scanner's position in an internally managed scanner list. If the newly connected scanner is lower in the scanner list than the one currently selected as the default scanner, the newly connected scanner becomes the default scanner.

On devices with only one built-in scanner or imager, **On disconnect** reverts to that built-in scanner or imager.

Configure Scanner Settings

Select Configure Scanner Settings to set the following:

- · Select scanner to set parameters
- Decoders
- Decoder params
- UPC/EAN params
- Reader params
- Scan params
- UDI params

- · Multibarcode params
- · Keep enabled on suspend

Decoders

Configures which barcode decoders are enabled or disabled. For best performance disable all unnecessary decoders.

Touch **Decoders**. The **Barcode input** screen appears. A check in the checkbox indicates that the decoder is enabled. By default the most commonly used decoders are enabled (shown below with an asterisk). The supported decoders are:



NOTE: DataWedge supports the decoders listed below but not all are validated on this device.

Table 9 Supported Decoders

| Decoders | Internal Imager SE4750-SR & SE4850-ER | RS507/RS507X | RS6000 | DS2278 | DS3678 | LI3678 |
|----------------------|--|--------------|--------|--------|--------|--------|
| Australian Postal | 0 | 0 | 0 | 0 | 0 | |
| Aztec | Х | Х | Х | Χ | Χ | |
| Canadian Postal | 0 | | 0 | | | |
| Chinese 2 of 5 | 0 | 0 | 0 | 0 | 0 | 0 |
| Codabar | Х | Х | Х | Х | Х | Х |
| Code 11 | 0 | 0 | 0 | 0 | 0 | 0 |
| Code 128 | Χ | Χ | Χ | Χ | Χ | Χ |
| Code 39 | Х | Х | Х | Х | Х | Х |
| Code 93 | 0 | 0 | 0 | 0 | 0 | 0 |
| Composite AB | 0 | 0 | 0 | 0 | 0 | |
| Composite C | 0 | 0 | 0 | 0 | 0 | |
| Discrete 2 of 5 | 0 | 0 | 0 | 0 | 0 | 0 |
| Datamatrix | Х | Х | Х | Х | Х | |
| Dutch Postal | 0 | 0 | 0 | 0 | 0 | |
| DotCode | Х | 0 | 0 | 0 | 0 | 0 |
| EAN13 | Х | Х | Х | Х | Х | Х |
| EAN8 | Х | Х | Х | Х | Х | Х |
| GS1 DataBar | Х | Х | Х | Х | Х | Х |

 Table 9
 Supported Decoders (Continued)

| Decoders | Internal Imager SE4750-SR & SE4850-ER | RS507/RS507X | RS6000 | DS2278 | DS3678 | Ll3678 |
|-------------------------|--|--------------|--------|--------|--------|--------|
| GS1 DataBar Expanded | X | X | X | Χ | Х | Х |
| GS1 DataBar Limited | 0 | 0 | 0 | 0 | 0 | 0 |
| GS1 Datamatrix | 0 | - | 0 | 0 | 0 | |
| GS1 QRCode | 0 | | 0 | 0 | 0 | |
| HAN XIN | 0 | | 0 | 0 | 0 | |
| Interleaved 2 of 5 | 0 | 0 | 0 | 0 | 0 | 0 |
| Japanese Postal | 0 | 0 | 0 | 0 | 0 | |
| Korean 3 of 5 | 0 | 0 | 0 | 0 | 0 | 0 |
| MAIL MARK | Х | | Х | Χ | Х | |
| Matrix 2 of 5 | 0 | 0 | 0 | 0 | 0 | 0 |
| Maxicode | X | Χ | Χ | Χ | Χ | |
| MicroPDF | 0 | 0 | 0 | 0 | 0 | |
| MicroQR | 0 | 0 | 0 | 0 | 0 | |
| MSI | 0 | 0 | 0 | 0 | 0 | 0 |
| PDF417 | Χ | Χ | Χ | Χ | Χ | |
| QR Code | Χ | Χ | Χ | Χ | Χ | |
| Decoder Signature | 0 | 0 | 0 | 0 | | |
| TLC 39 | 0 | 0 | 0 | 0 | 0 | 0 |
| Trioptic 39 | 0 | 0 | 0 | 0 | 0 | 0 |
| UK Postal | 0 | 0 | 0 | 0 | 0 | |
| UPCA | Х | Х | Χ | Х | Х | Х |
| UPCE0 | Х | Χ | Χ | Χ | Х | Х |
| UPCE1 | 0 | 0 | 0 | 0 | 0 | 0 |
| US4state | 0 | 0 | 0 | 0 | 0 | |

 Table 9
 Supported Decoders (Continued)

| Decoders | Internal Imager SE4750-SR & SE4850-ER | RS507/RS507X | RS6000 | DS2278 | DS3678 | L13678 |
|---------------|--|--------------|--------|--------|--------|--------|
| US4state FICS | 0 | 0 | 0 | 0 | 0 | |
| US Planet | 0 | 0 | 0 | 0 | 0 | |
| US Postnet | 0 | 0 | 0 | 0 | 0 | |

Touch

to return to the previous screen.

Decoder Params

Use **Decode Params** to configure individual decoder parameters.



NOTE: Not all parameter options are available with all scanners. See the DataWedge app on each device for the available scanners and parameter options.

NOTE:

Codabar

- **CLSI Editing** Enable this parameter to strip the start and stop characters and insert a space after the first, fifth, and tenth characters of a 14-character Codabar symbol. Enable this feature if the host system requires this data format (default disabled).
- Length1 Use to set decode lengths (default 6). See Decode Lengths for more information.
- Length2 Use to set decode lengths (default 55). See Decode Lengths for more information.
- NOTIS Editing Enable this parameter to strip the start and stop characters from a decoded Codabar symbol. Enable this feature if the host system requires this data format (default - disabled).
- **Redundancy** Sets the reader to read the barcode twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default enabled).

Code 11

- Length1 Use to set decode lengths (default 4). See Decode Lengths for more information.
- Length2 Use to set decode lengths (default 55). See Decode Lengths for more information.
- **Redundancy** Sets the reader to read the barcode twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default enabled).
- Report Check Digit Transmit Code 11 data with or without the check digit. A check in the checkbox indicates to send Code 11 data with check digit (default disabled).

- Verify Check Digit Check the integrity of all Code 11 symbols to verify that the data complies with the specified check digit algorithm. This selects the check digit mechanism for the decoded Code 11 barcode.
 - · No Check Digit Do not verify check digit.
 - 1 Check Digit Barcode contains one check digit (default).
 - 2 Check Digits Barcode contains two check digits.

Code128

- Code128 Reduced Quiet Zone Enables decoding of margin-less Code 128 barcodes (default disabled).
- Ignore Code128 FCN4 When enabled, and a Code 128 barcode has an embedded FNC4 character, it will be removed from the data and the following characters will not be changed. When the feature is disabled, the FNC4 character will not be transmitted but the following character will have 128 added to it (default disabled).
- Check ISBT Table The ISBT specification includes a table that lists several types of ISBT barcodes that are commonly used in pairs. If ISBT128 Concat Mode is set, enable Check ISBT Table to concatenate only those pairs found in this table. Other types of ISBT codes are not concatenated. A check in the checkbox indicates that redundancy is enabled (default disabled).
- Enable GS1-128 Set the GS1 128 subtype. A check in the checkbox indicates that the option is enabled (default enabled).
- Enable ISBT128 Set the ISBT128 subtype. A check in the checkbox indicates that the option is enabled (default enabled).
- Enable Plain Code128 Set the Plain Code128 subtype. Enables other (non-EAN or ISBT) Code 128 subtypes. A check in the checkbox indicates that the option is enabled (default enabled).
- ISBT128 Concatenation Mode Select an option for concatenating pairs of ISBT code types:
 - Concat Mode Never Do not concatenate pairs of ISBT codes encountered (default).
 - Concat Mode Always There must be two ISBT codes in order to decode and perform concatenation.
 Does not decode single ISBT symbols.
 - Concat Mode Auto Decodes and concatenates pairs of ISBT codes immediately. If only a single ISBT symbol is present, the device must decode the symbol the number of times set via DataWedge Configuration 4 11 Redundancy Code128 before transmitting its data to confirm that there is no additional ISBT symbol.
- Length1 Use to set decode lengths (default 0). See Decode Lengths for more information.
- Length2 Use to set decode lengths (default 55). See Decode Lengths for more information.
- **Redundancy** Sets the reader to read the barcode twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default disabled).
- **Security Level** The scanner offers four levels of decode security for Code 128 barcodes. Select increasing levels of security for decreasing levels of barcode quality. There is an inverse relationship between security and scanner aggressiveness, so choose only that level of security necessary for any given application.
 - **Security Level 0** This setting allows the scanner to operate in its most aggressive state, while providing sufficient security in decoding most "in-spec" barcodes.
 - Security Level 1 This setting eliminates most misdecodes (default).
 - Security Level 2 Select this option if Security level 1 fails to eliminate misdecodes.
 - Security Level 3 If Security Level 2 is selected and misdecodes still occur, select this security level. Be advised, selecting this option is an extreme measure against mis-decoding severely out of spec barcodes. Selecting this level of security significantly impairs the decoding ability of the scanner. If this level of security is needed, try to improve the quality of the barcodes.

Code39

- Code39 Reduced Quiet Zone Enables decoding of margin-less Code 39 barcodes (default disabled).
- Convert Code39 To Code32 Code 32 is a variant of Code 39 used by the Italian pharmaceutical industry.
 Scan the appropriate barcode below to enable or disable converting Code 39 to Code 32 (default disabled).
- Full ASCII- Code 39 Full ASCII is a variant of Code 39 that pairs characters to encode the full ASCII character set. To enable or disable Code 39 Full ASCII (default disabled),
- Length1 Use to set decode lengths (default 0). See Decode Lengths for more information.
- Length2 Use to set decode lengths 4 (default 55). See Decode Lengths for more information.
- **Redundancy** Sets the reader to read the barcode twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default disabled).
- Report Check Digit Transmit Code 39 data with or without the check digit. A check in the checkbox indicates to send Code 39 data with check digit (default disabled).
- Report Code32 Prefix Scan the appropriate barcode to enable or disable adding the prefix character "A" to all Code 32 barcodes (default disabled).
- Security Level Options: Security level 0, Security Level 1, Security Level 2 and Security Level 3 (default Security level 1).
 - **Security Level 0** This setting allows the scanner to operate in its most aggressive state, while providing sufficient security in decoding most "in-spec" barcodes.
 - Security Level 1 This setting eliminates most misdecodes (default).
 - Security Level 2 Select this option if Security level 1 fails to eliminate misdecodes.
 - Security Level 3 If Security Level 2 is selected and misdecodes still occur, select this security level. Be advised, selecting this option is an extreme measure against mis-decoding severely out of spec barcodes. Selecting this level of security significantly impairs the decoding ability of the scanner. If this level of security is needed, try to improve the quality of the barcodes.
- Verify Check Digit Enable this feature to check the integrity of all Code 39 symbols to verify that the data complies with a specified check digit algorithm. The digital scanner decodes only those Code 39 symbols that include a modulo 43 check digit. Enable this feature only if the Code 39 symbols contain a modulo 43 check digit (default disabled).

Code93

- Length1 Use to set decode lengths (default 0). See Decode Lengths for more information.
- Length2 Use to set decode lengths (default 55). See Decode Lengths for more information.
- **Redundancy** Sets the reader to read the barcode twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default disabled).

Composite AB

- UCC Link Mode
 - Link Flag ignored 1D component is transmitted regardless of whether a 2D component is detected.
 - Always Linked 1D and the 2D components are transmitted. If 2D is not present, the 1D component is not transmitted.
 - Auto Discriminate the digital scanner determines if there is a 2D portion, then transmits the 1D component, as well as the 2D portion if present. (default).

Discrete 2 of 5

- Length1 Use to set decode lengths (default 0). See Decode Lengths for more information.
- Length2 Use to set decode lengths (default 14). See Decode Lengths for more information.

• **Redundancy** - Sets the reader to read the barcode twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - enabled).

GS1 DataBar Limited

- GS1 Limited Security Level
 - **GS1 Security Level 1** This setting allows the scanner to operate in its most aggressive state, while providing sufficient security in decoding most "in-spec" barcodes.
 - GS1 Security Level 2 This setting eliminates most misdecodes (default).
 - GS1 Security Level 3 Select this option if Security level 2 fails to eliminate misdecodes.
 - **GS1 Security Level 4** If Security Level 3 is selected and misdecodes still occur, select this security level. Be advised, selecting this option is an extreme measure against mis-decoding severely out of spec barcodes. Selecting this level of security significantly impairs the decoding ability of the scanner. If this level of security is needed, try to improve the quality of the barcodes.

HAN XIN

- HAN XIN Inverse
 - Disable Disables decoding of HAN XIN inverse barcodes (default).
 - Enable Enables decoding of HAN XIN inverse barcodes.
 - Auto Decodes both HAN XIN regular and inverse barcodes.

Interleaved 2 of 5

- Check Digit
 - No Check Digit A check digit is not used. (default)
 - **USS Check Digit** Select to check the integrity of all Interleaved 2 of 5 symbols to verify the data complies with either the Uniform Symbology Specification (USS) check digit algorithm.
 - **OPCC Check Digit** Select to check the integrity of all Interleaved 2 of 5 symbols to verify the data complies with either the Optical Product Code Council (OPCC) check digit algorithm.
- Length1 Use to set decode lengths (default 14). See Decode Lengths for more information.
- Length2 Use to set decode lengths (default 10). See Decode Lengths for more information.
- **Redundancy** Sets the reader to read the barcode twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default enabled).
- **Report Check Digit** Transmit Interleaved 2 of 5 data with or without the check digit. A check in the checkbox indicates to send Interleaved 2 of 5 data with check digit (default disabled).
- I2of5 Security Level Options: I2of5 Security level 0, I2of5 Security Level 1, I2of5 Security Level 2 and I2of5 Security Level 3 (default I2of5 Security level 1).
- Convert ITF-14 To EAN13 Convert 14-character Interleaved 2 of 5 barcodes to EAN-13, and transmit as EAN-13. The Interleaved 2 of 5 barcode must be enabled and must have a leading zero and a valid EAN-13 check digit. A check in the checkbox indicates that the option is enabled (default disabled).
- I2of5 Reduced Quiet Zone Enables decoding of margin-less I2of5 barcodes (default disabled).

Matrix 2 of 5

- Length1 Use to set decode lengths (default 10). See Decode Lengths for more information.
- Length2 Use to set decode lengths (default 0). See Decode Lengths for more information.
- **Redundancy** Sets the reader to read the barcode twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default disabled).
- Report Check Digit Transmit Matrix 2 of 5 data with or without the check digit. A check in the checkbox indicates to send Matrix 2 of 5 data with check digit (default enabled).

• **Verify Check Digit** - Enable this feature to check the integrity of all Matrix 2 of 5 symbols to verify that the data complies with a specified check digit algorithm (default - enabled).

MSI

- Check Digit With MSI symbols, one check digit is mandatory and always verified by the reader. The second check digit is optional.
 - One Check Digit Verify one check digit (default).
 - · Two Check Digits Verify two check digits.
- Check Digit Scheme Two algorithms are possible for the verification of the second MSI check digit.
 Select the algorithm used to encode the check digit.
 - Mod-11-10 First check digit is MOD 11 and second check digit is MOD 10 (default).
 - Mod-10-10 Both check digits are MOD 10.
- Length 1 Use to set decode lengths (default 4). See Decode Lengths for more information.
- Length 2 Use to set decode lengths (default 55). See Decode Lengths for more information.
- **Redundancy** Sets the reader to read the barcode twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default enabled).
- **Report Check Digit** Transmit MSI data with or without the check digit. A check in the checkbox indicates to send MSI data with check digit (default disabled).

Trioptic 39

• **Redundancy** - Sets the reader to read the bar code twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - disabled).

UK Postal

 Report Check Digit - Transmit UK Postal data with or without the check digit. A check in the checkbox indicates to send UK Postal data with check digit (default - disabled).

UPCA

• **Preamble** - Preamble characters are part of the UPC symbol consisting of Country Code and System Character. Select the appropriate option to match the host system.

There are three options for transmitting a UPCA preamble:

- Preamble None Transmit no preamble.
- Preamble Sys Char Transmit System Character only (default).
- **Preamble Country and Sys Char** Transmit System Character and Country Code ("0" for USA). Select the appropriate option to match the host system.
- Report Check Digit The check digit is the last character of the symbol used to verify the integrity of the
 data. Enables or disables this option. A check in the checkbox indicates that the option is enabled (default enabled).

UPCE0

 Convert UPCE0 To UPCA - Enable to convert UPCE0 (zero suppressed) decoded data to UPC-A format before transmission. After conversion, the data follows UPC-A format and is affected by UPC-A programming selections. Disable to transmit UPCE0 decoded data as UPCE0 data, without conversion (default - disabled). • **Preamble** - Preamble characters are part of the UPC symbol consisting of Country Code and System Character. Select the appropriate option to match the host system.

There are three options for transmitting a UPCE0 preamble:

- Preamble None Transmit no preamble (default).
- Preamble Sys Char Transmit System Character only.
- Preamble Country and Sys Char Transmit System Character and Country Code ("0" for USA).
- Report Check Digit The check digit is the last character of the symbol used to verify the integrity of the
 data. Enables or disables this option. A check in the checkbox indicates that the option is enabled (default disabled).

UPCE1

- Convert UPCE1 To UPCA Enable this to convert UPCE1 decoded data to UPC-A format before
 transmission. After conversion, the data follows UPC-A format and is affected by UPC-A programming
 selections. Disable this to transmit UPCE1 decoded data as UPCE1 data, without conversion (default disabled).
- **Preamble** Preamble characters are part of the UPC symbol consisting of Country Code and System Character. Select the appropriate option to match the host system.

There are three options for transmitting a UPCE1 preamble:

- Preamble None Transmit no preamble (default).
- Preamble Sys Char Transmit System Character only.
- Preamble Country and Sys Char Transmit System Character and Country Code ("0" for USA).
- Report Check Digit The check digit is the last character of the symbol used to verify the integrity of the
 data. Enables or disables this option. A check in the checkbox indicates that the option is enabled (default
 disabled).

US Planet

Report Check Digit - The check digit is the last character of the symbol used to verify the integrity of the
data. Enables or disables this option. A check in the checkbox indicates that the option is enabled (default disabled).

Decode Lengths

The allowable decode lengths are specified by options Length1 and Length2 as follows:

- · Variable length: Decode symbols containing any number of characters.
 - Set both Length1 and Length2 to 0.
- Range: Decode a symbol with a specific length range (from a to b, including a and b).
 - Set Length1 to a and set Length2 to b.
- Two Discrete Lengths: Decode only symbols containing either of two selected lengths.
 - Set both Length1 or Length2 to the specific lengths. Length1 must be greater than Length2.
- One Discrete Length: Decode only symbols containing a specific length.
 - Set both Length1 and Length2 to the specific length.

UPC EAN Params

Allows the configuration of the parameters that apply to more than one UPC or EAN decoder.



NOTE: Not all parameter options are available with all scanners. See the DataWedge app on each device for the available scanners and parameter options.

- Convert DataBar To UPC EAN If this is set it converts DataBar barcodes to UPC/EAN format. For this
 setting to work UPC/EAN symbologies must be enabled. A check in the checkbox indicates that the option
 is enabled. (default disabled).
- UPC Reduced Quiet Zone Enables decoding of margin-less UPC barcodes. (default disabled)
- Bookland Enable Bookland decoding. A check in the checkbox indicates that the option is enabled. (default - disabled).
- Bookland Format If Bookland EAN is enabled, select one of the following formats for Bookland data:
 - Format ISBN-10 The decoder reports Bookland data starting with 978 in traditional 10-digit format with the special Bookland check digit for backward-compatibility. Data starting with 979 is not considered Bookland in this mode. (default)
 - Format ISBN-13 The decoder reports Bookland data (starting with either 978 or 979) as EAN-13 in 13-digit format to meet the 2007 ISBN-13 protocol.
- Coupon Enables Coupon code decoding. Note that in order to successfully decode Coupon codes, all of the correct decoders must be enabled. A check in the checkbox indicates that the option is enabled. (default - disabled).
- Coupon Report Mode Traditional coupon symbols are composed of two barcode: UPC/EAN and Code
 128. A new coupon symbol is composed of a single Data Expanded barcode. The new format offers more
 options for purchase values (up to \$999.999) and supports complex discount offers as a second purchase
 requirement. An interim coupon symbol also exists that contain both types of barcodes: UPC/EAN and
 Databar Expanded. This format accommodates both retailers that do not recognize or use the additional
 information included in the new coupon symbol, as well as those who can process new coupon symbols.
 - Old Coupon Report Mode Scanning an old coupon symbol reports both UPC and Code 128, scanning is interim coupon symbol reports UPC, and scanning a new coupon symbol reports nothing (no decode).
 - **New Coupon Report Mode** Scanning an old coupon symbol reports either UPC or Code 128, and scanning an interim coupon symbol or a new coupon symbol reports Databar Expanded.
 - Both Coupon Report Modes Scanning an old coupon symbol reports both UPC and Code 128, and scanning an interim coupon symbol or a new coupon symbol reports Databar Expanded. (default)
- Ean Zero Extend Enable this parameter to add five leading zeros to decoded EAN-8 symbols to make them compatible in format to EAN-13 symbols. Disable this to transmit EAN-8 symbols as is. Default – disabled.
- **Linear Decode** This option applies to code types containing two adjacent blocks, for example, UPC-A, EAN-8, EAN-13. Enable this parameter to transmit a bar code only when both the left and right blocks are successfully decoded within one laser scan. Enable this option when bar codes are in proximity to each other (default enabled).
- Retry Count Retry count for auto-discriminating for supplementals. Possible values are 2 to 20 inclusive. Note that this flag is only considered if Supplemental Mode UPC EAN is set to one of the following values: Supplementals Auto, Supplementals Smart, Supplementals 378-379, Supplementals 978-979, Supplementals 977 or Supplementals 414-419-434-439 (2 to 20, default 10).

- Security Level The scanner offers four levels of decode security for UPC/EAN barcodes. Select higher security levels for lower quality barcodes. There is an inverse relationship between security and decode speed, so be sure to choose only that level of security necessary for the application.
 - Level 0 This default setting allows the scanner to operate fastest, while providing sufficient security in decoding "in-spec" UPC/EAN barcodes.
 - Level 1 As barcode quality levels diminish, certain characters become prone to misdecodes before others (i.e., 1, 2, 7, 8). If the scanner is misdecoding poorly printed barcodes, and the misdecodes are limited to these characters, select this security level. (default).
 - Level 2 If the scanner is misdecoding poorly printed barcodes, and the misdecodes are not limited to characters 1, 2, 7, and 8, select this security level.
 - Level 3 If the scanner is still misdecoding, select this security level. Be advised, selecting this option is
 an extreme measure against misdecoding severely out of spec barcodes. Selecting this level of security
 can significantly impair the decoding ability of the scanner. If this level of security is necessary, try to
 improve the quality of the barcodes.
- Supplemental2 Enables or disables this option. A check in the checkbox indicates that the option is enabled.
- Supplemental5 Enables or disables this option. A check in the checkbox indicates that the option is
 enabled.
- Supplemental Mode
 - **No Supplementals** the scanner is presented with a UPC/EAN plus supplemental symbol, the scanner decodes UPC/EAN and ignores the supplemental characters (default).
 - **Supplemental Always** the scanner only decodes UPC/EAN symbols with supplemental characters, and ignores symbols without supplementals.
 - Supplements Auto the scanner decodes UPC/EAN symbols with supplemental characters immediately. If the symbol does not have a supplemental, the scanner must decode the barcode the number of times set via UPC/EAN Supplemental Redundancy before transmitting its data to confirm that there is no supplemental.
 - Supplemental Smart Enables smart supplementals. In this mode the decoder returns the decoded value of the main block right away if it does not belong to one of the following supplemental types: 378, 379, 977, 978, 979, 414, 419, 434 or 439. If the barcode starts with one of the prefixes it searches the image more aggressively for a supplemental. Tries to scan the supplemental if it is present. If the supplemental scanning failed, then the main barcode is returned.
 - Supplemental 378-379 Enables (auto-discriminate) supplemental for UPC/EAN codes starting with 378 or 379. Disables reading of supplementals for any other UPC/EAN barcode not starting with 378 or 379. Tries to scan the supplemental if it is present. If the supplemental scanning failed, then the main barcode is returned.
 - Supplemental 978-979 Enables (auto-discriminate) supplemental for UPC/EAN codes starting with 978 or 979. Disables reading of supplementals for another UPC/EAN barcode not starting with 978 or 979. Tries to scan the supplemental if it is present. If the supplemental scanning failed, then the main barcode is returned.
 - Supplemental 414-419-434-439 Enables (auto-discriminate) supplemental for UPC/EAN codes starting with 414, 419, 434 or 439. Disables reading of supplementals for another UPC/EAN barcode 4 16 not starting with 414, 419, 434 or 439. Tries to scan the supplemental if it is present. If the supplemental scanning failed, then the main barcode is returned.
 - Supplemental 977 Enables (auto-discriminate) supplemental for UPC/EAN codes starting with 977. Disables reading of supplementals for another UPC/EAN barcode not starting with 977. Tries to scan the supplemental if it is present. If the supplemental scanning failed, then the main barcode is returned.

Reader Params

Allows the configuration of parameters specific to the selected barcode reader.



NOTE: Not all parameter options are available with all scanners. See the DataWedge app on each device for the available scanners and parameter options.

- Character Set Configuration Used to support the GB2312 Chinese characters encoding.
 - Character Set Selection Allows the user to convert the barcode data if different from default encoding type.
 - Auto Character Set Selection (Best Effort) Automatic character convert option. Tries to decode
 data from the Preferred selection. The first correct decodable character set is used to convert the
 data and is sent.
 - **ISO-8859-1** Part of the ISO/IEC 8859 series of ASCII-based standard character encodings. It is generally intended for Western European languages.
 - **Shift_JIS** Shift Japanese Industrial Standards (JIS) is a character encoding for the Japanese language.
 - GB18030 Chinese coded character set that defines the required language and character support necessary for software in China.
 - **UTF-8** A character encoding capable of encoding all possible characters, or code points, defined by Unicode (default).
 - Auto Character Set Preferred Order In Auto Character Set Selection mode, the system will try to
 decode the data in a preference order of character sets. The algorithm used is a best effort one. That is,
 there could be cases where the data can be decoded from more than one character set. The first
 character set from the preferred list which can decode the data successfully will be chosen to decode
 the data and sent to the user. Any other character set that is in the list but lower in the preferred order,
 would not be considered, even if the data could be successfully decoded using such character set.

The preferred character set and its preference order is configurable to the user through the **Auto Character Set Preferred Order** menu. Users can change the order by dragging the icon for that menu item. To delete an item, long press on an item and the **Delete** option will appear. To add a new item, tap the menu icon at top right corner and options to add UTF-8 and GB2312 will appear.

- **UTF-8** A character encoding capable of encoding all possible characters, or code points, defined by Unicode (default).
- GB2312 Character set of the People's Republic of China, used for simplified Chinese characters.
- Auto Character Set Failure Option If the system cannot find a character set from the preferred list
 that can be used to successfully decode the data, the character set selected in Auto Character Set
 Failure Option is used to decode the data and send to the user. If NONE is used, Null data is returned
 as string data.
 - NONE
 - UTF-8 A character encoding capable of encoding all possible characters, or code points, defined by Unicode (default).
 - **ISO-8859-1** Part of the ISO/IEC 8859 series of ASCII-based standard character encodings. It is generally intended for Western European languages.
 - **Shift_JIS** Shift Japanese Industrial Standards (JIS) is a character encoding for the Japanese language.
 - GB18030 Chinese coded character set that defines the required language and character support necessary for software in China.
- 1D Quiet Zone Level Sets the level of aggressiveness in decoding barcodes with a reduced quiet zone
 (the area in front of and at the end of a barcode), and applies to symbologies enabled by a Reduced Quiet
 Zone parameter. Because higher levels increase the decoding time and risk of misdecodes, Zebra strongly

recommends enabling only the symbologies which require higher quiet zone levels, and leaving Reduced Quiet Zone disabled for all other symbologies.

Options are:

- **0** The scanner performs normally in terms of quiet zone.
- 1 The scanner performs more aggressively in terms of quiet zone (default).
- 2 The scanner only requires one side EB (end of barcode) for decoding.
- 3 The scanner decodes anything in terms of quiet zone or end of barcode.
- Adaptive Scanning When adaptive scanning is enabled, the scan engine toggles between wide and narrow, allowing the scan engine to decode barcodes based on the distance.
 - Disable
 - Enable (default).
- Beam Width Beam Width is applicable only with linear scanners.
 - Narrow
 - Normal (default)
 - Wide
- Aim mode Turns the scanner cross-hairs on or off.
 - On Cross-hair is on (default).
 - Off Cross-hair is off.
- **Aim Timer** Sets the maximum amount of time that aiming remains on (0 60,000 ms in increments of 100 ms). A value of 0 sets the aim to stay on indefinitely (default 500).
- · Aim Type Set the aiming usage.
 - **Trigger** A trigger event activates decode processing, which continues until the trigger event ends or a valid decode occurs (default).
 - **Timed Hold** A trigger pull and hold activates the laser for aiming, which continues until the trigger is released, a valid decode, or the decode session time-out is expired.
 - **Timed Release** A trigger pull activates the laser for aiming, which continues until a valid decode or the remaining decode session time has expired.
 - Press and Release A trigger pull and release activates the laser for aiming, which continues until a
 trigger is pressed again, a valid decode, or the decode session time-out is expired.
 - **Continuous Read** A trigger pull activates a decode session which continues until the Beam Timer expires or the trigger is released. Barcodes are continuously decoded while the session is active.
 - Press and Sustain A trigger pull activates decode processing which continues until the Beam Timer expires or a barcode is decoded.
- **Beam Timer** Sets the maximum amount of time that the reader remains on (0 60,000 ms in increments of 100 ms). A value of 0 sets the reader to stay on indefinitely (default -5000).
- Time Delay to Low Power Sets the time the decoder remains active after decoding. After a scan session, the decoder waits this amount of time before entering Low Power Mode. Options: 1 Second (default), 30 Seconds, 1 Minute or 5 Minutes.
- **Different Symbol Timeout** Controls the time the scanner is inactive between decoding different symbols. Programmable in 500 msec increments from 0 to 5 seconds. The default is 500 msec.
- Digimarc Decoding Enables/disables support for Digimarc, which encodes and invisibly integrates traditional barcode data onto product packaging. Supported with internal imager only. (default - Enabled).
- Illumination Brightness Sets the brightness of the illumination by altering LED power. The default is 10, which is maximum LED brightness. For values from 1 to 10, LED brightness varies from lowest to highest level of brightness.

- Illumination mode Turns imager illumination on and off. This option is only available when Bluetooth Scanner is selected in the Barcode input, Scanner selection option.
 - Off Illumination is off.
 - On Illumination is on (default).
- Inverse 1D Mode This parameter allows the user to select decoding on inverse 1D barcodes.
 - Disable Disables decoding of inverse 1D barcodes (default).
 - Enable Enables decoding of only inverse 1D barcodes.
 - Auto Allows decoding of both twice positive and inverse 1D barcodes.
- Keep Pairing Info After Reboot
 - **Disable** Disables the ability to keep pairing info after reboot.
 - Enable Enables the ability to keep pairing info after reboot. (default).
- LCD Mode Enables or disables LCD mode. LCD mode enhances the ability of the imager to read barcodes from LCD displays such as cellphones.
 - Disable Disables the LCD mode (default).
 - Enable Enables LCD mode.
- Linear Security Level Sets the number of times a barcode is read to confirm an accurate decode.
 - Security Short or Codabar Two times read redundancy if short barcode or Codabar (default).
 - Security All Twice Two times read redundancy for all barcodes.
 - Security Long and Short Two times read redundancy for long barcodes, three times for short barcodes.
 - Security All Thrice Three times read redundancy for all barcodes.
- **HW Engine Low Power Timeout** Time (0 1,000 ms in increments of 50 ms) of inactivity before scanner enters low-power mode from (default 250).
- **Picklist** Allows the imager to decode only the barcode that is directly under the cross-hair/reticle (+) part of the pattern. This feature is useful in applications where multiple barcodes may appear in the field of view during a decode session and only one of them is targeted for decode.
 - Disabled Disables Picklist mode. Any barcode within the field of view can be decoded (default).
 - Enabled Enables Picklist mode so that only the barcode under the projected reticle can be decoded.
- · Poor Quality Decode Effort Enable poor quality barcode decoding enhancement feature.
- Same Symbol Timeout Controls the time the scanner is inactive between decoding same symbols.
 Programmable in 500 msec increments from 0 to 5 seconds. The default is 500 msec.
- Scanning Modes Scanning options available on the device.
 - · Single Set to scan general barcodes (default).
 - UDI Set to scan healthcare specific barcodes.
 - **MultiBarcode** Set to scan multiple barcodes. When this option is selected, the **Multibarcode params** can be set to read from 2 to 10 barcodes on a single scan.

Scan Params

Allows the configuration of Code ID and decode feedback options.



NOTE: Not all parameter options are available with all scanners. See the DataWedge app on each device for the available scanners and parameter options.

- Code ID Type A Code ID character identifies the code type of a scanned barcode. This is useful when the
 reader is decoding more than one code type. Select a code ID character to insert between the prefix and
 the decoded symbol.
 - Code ID Type None No prefix (default)
 - Code ID Type AIM Insert AIM Character prefix.
 - Code ID Type Symbol Insert Symbol character prefix.
- Engine Decode LED Use to turn on scanner red LED when the scan beam is emitting either by scanner trigger or using soft scan button.
- BT Disconnect On Exit Bluetooth connection is disconnected when data capture application is closed.
- Connection Idle Time Set connection idle time. The Bluetooth connection disconnects after being idle for set time.
- **Display BT Address Barcode** Enable or disable displaying Bluetooth Address bar code if there is no Bluetooth scanner being paired when application tries to enable the Bluetooth scanner.
- **Establish Connection Time** The timeout which the device will try to enable or reconnect to the Bluetooth scanner when the Bluetooth scanner is not in the vicinity or not paired.
- Audio Feedback Mode Select good decode audio indication.
 - Local Audio Feedback Good decode audio indication on device only.
 - · Remote Audio Feedback Good decode audio indication.
 - Both Good decode audio indication on device and scanner (default).
 - Disable No good decode audio indication on either device or scanner.
- LED Feedback Mode Select good decode LED indication.
 - Local LED Feedback Good decode LED indication on device only.
 - Remote LED Feedback Good decode LED indication on scanner.
 - Both Good decode LED indication on device and scanner (default).
 - Disable No good decode LED indication on either device or scanner.
- Decode Audio Feedback Select an audio tone to sound upon a good decode (default optimized-beep).
- **Decoding LED Notification** Enable the device to light the red Data Capture LED when data capture is in progress. (default disabled).
- **Decode Feedback LED Timer** Set the amount of time (in milliseconds) that the green Data Capture LED stays lit after a good decode. (default 75 msec.)
- **Beep Volume Control** Set the good decode beep to a system or other sound. This allows for independent control of the good beep volume.



NOTE: Not all ringtones are fully supported as decode tones and those of longer length may be truncated when used as a decode tone. The recommendation is to test the selected tone for operation before deployment to a customer site.

- Ringer Uses Ringer audio stream to play the decode beep.
- Music and Media Uses Media audio stream to play the decode beep.
- Alarms Uses Alarms audio stream to play the decode beep.
- Notifications Uses Notifications audio stream to play the decode beep. (default)

UDI Params

Allows the configuration of parameters specific to healthcare barcodes.

- Enable UDI-GSI Enable UDI using GS1 standards (default enabled).
- Enable UDI-HIBCC Enable UDI using HIBCC standards (default enabled).

Enable UDI-ICCBBA - Enable UDI using ICCBBA standards (default - enabled).

Multibarcode params

Set the number of barcodes that the device can read on a single scan from 2 to 10. Must also enable **Reader Params > Scanning Modes > MultiBarcode** option.

Keep enabled on suspend

Keep Bluetooth scanner enabled after suspend (default-disabled).

SimulScan Input

Use the SimulScan Input to configure the SimulScan Input Plug-in.



NOTE: SimulScan supports devices with an SE4750 imager.

- **Enabled** Enables or disables this plug-in. A check in the checkbox indicates that the plug-in is enabled (default disabled).
- Hardware Trigger Enables or disables the hardware trigger for scanning. (Default enabled). If disabled, pressing the hardware trigger does not start SimulScan View Finder.
- **Device Selection** Configures which scanning device to use for data capture when the profile is active.
 - Camera Scanning is performed with the rear-facing camera.
 - Imager Scanning is performed using the integrated 2D Imager.
 - Default Scanning is performed with the default selected scanning device (default).
- Template Selection Select template to use.
 - **Default BankCheck.xml** Use this template to read the MICR E-13B font (length between 19 and 40 characters) on bank checks.
 - Default Barcode 1.xml Use this template to read a single supported bar code.
 - Default Barcode 10.xml Use this template to read up to 10 supported bar codes.
 - Default Barcode 2.xml Use this template to read two supported bar codes.
 - Default Barcode 4.xml Use this template to read up to supported four bar codes.
 - Default Barcode 5.xml Use this template to read up to supported five bar codes.
 - Default BookNumber.xml Use this template to read the OCR-B ISBN 10 or 13 digit book numbers.
 - Default DocCap + Optional Barcode.xml Use this template to capture a full page image and
 decode any supported bar codes that are in the form. The captured area is the largest rectangular
 region in the field of view defined by the solid border or contrast of background. Any OCR or OMR
 content will not be decoded in this mode. The captured area is further processed to correct, de-skew
 and sharpen and returned as a picture(default).
 - Default DocCap + Required Barcode.xml Use this template to capture a full page image and
 decode of any supported bar codes that are present in the form. The captured area is the largest
 rectangular region in the field of view defined by the solid border or contrast of background. Any OCR or
 OMR content will not be decoded in this mode. The captured area is further processed to correct,
 de-skew and sharpen and returned as a picture.
 - Default TravelDoc.xml Use this template to read passport and Visa travel documents with OCR-B types A and B fonts.
 - **Default Unstructured Multi-Line.xml** Use this template to read up to seven lines of text.
 - Default Unstructured Single Line.xml Use this template to read a single line of text.

- **Dynamic Template Params** Use to configure template specific parameters. Permits the configuration of parameters when using Dynamic Templates. This offers the flexibility of accepting input parameters based on varying usage scenarios without requiring a different template for each. If the selected template contains Dynamic-Template parameters, DataWedge prompts the user to configure the parameters. Currently supports Dynamic Quantity, which sets the number of barcodes (from 1-99; default=5) to be decoded on a form. Dynamic Templates are created using Template Builder.
- Region separator Use to configure a separator character for SimulScan region data. When there are
 multiple text regions the region separator will be inserted between two data strings. By default no separator
 will be set. Possible values for region separator are None, Tab, Line feed and Carriage return. Region
 separator can be used with the Keystrokes plug-in Action key character setting to dispatch SimulScan
 region data to separate text fields.
- **Log directory** Select a folder for storing log files to help debug a template. The folders are named based on the timestamp of the session and the debug data saved includes logs, templates, frame data, etc.
- Timestamp Enable to capture the time when the data was captured and processed in case of a successful SimulScan session.

Voice Input

Zebra GMS devices have a built in Google speech recognition engine. By making use of the speech engine capabilities, DataWedge has extended automated data capturing to user applications through voice. Currently, DataWedge does not capture data for Voice Input.

Voice data capturing starts after you speak the predefined start phrase and it stops after you speak the data or speak the end phrase, if one was defined.



IMPORTANT:

- Simultaneous use of Voice Input in DataWedge and Google Voice is not supported.
- Voice Input is not supported if the Enterprise Home Screen (EHS) is in restricted mode. However, enabling all of the
 privilege settings in EHS reinstates Voice Input.
- Voice Input is not supported if the device language is changed to another language, for example Chinese.

Use Voice Input to configure the Voice Input Plug-in.

- Enabled Enables or disables this plug-in. A check in the checkbox indicates that the plug-in is enabled.
- Data capture start phrase Starts data capture with the phrase entered in this field. This field is mandatory. (Default - start).
 - Providing numbers and other special characters as the data capture start phrase is not supported.
- **Data capture end phrase** Ends data capture with the phrase entered in this field or keep it blank if not required. This field is not mandatory. (Default Blank).
- **Tab command** Enables the Tab command, which sends a tab key when the user speaks the command **send tab**. The commands are supported only when the device is at the **Waiting for start phrase** state.
- Enter command Enables the Enter command, which sends an enter key when the user speaks the command send enter. The commands are supported only when the device is at the Waiting for start phrase state.
- **Data type** Allows the user to configure the data type. Set the data type to limit the data capture according to the preferences specified. Available options:
 - Any Scanning a barcode of ABC123, returns ABC123.
 - Alpha Scanning a barcode of ABC123, returns ABC only.
 - Numeric Scanning a barcode of ABC, returns 123 only.

- Start phrase waiting tone Enables or disables this option. Enables audio feedback for Waiting for start. This option notifies the user that the device is waiting to start the speech engine if you miss the toast message and the Waiting for start state changes.
- **Data capture waiting tone** Enables or disables this option. Enables audio feedback for **Waiting for data**. This option notifies the user that the device is waiting to capture data if you miss the toast message.
- Validation window Enables or disables the Validate captured data window. Enable this option to validate the result that you speak. The window displays the data spoken and the data can be edited on the same screen if any modification is needed. This is very useful when used with the offline mode, since the results receive at this moment might not be accurate.
- Offline speech recognition Enables or disables speech recognition. Enable this option to use Voice Input when you do not have access to the Internet. This option uses an offline recognition speech engine to detect the data you speak.

Keystroke Output

DataWedge supports Keystroke Output.

Use to configure the Keystroke Output Plug-in for the profile.

- **Enabled** Enables or disables this plug-in. A check in the checkbox indicates that the plug-in is enabled (default enabled).
- Action key character Enables decoding of a special character embedded within a barcode data for use in native Android applications. This feature is helpful when populating or executing a form.
 - None Action key character feature is disabled (default).
 - **Tab** Tab character code in a barcode is processed. When DataWedge detects this character code in a barcode, move the focus to the next field.
 - **Line feed** Line feed character code in a barcode is processed. When DataWedge detects this character code in a barcode, move the focus to the next field.
 - Carriage return Carriage return character code in a barcode is processed. When DataWedge detects this character code in a barcode, move the focus to the next field.
- Inter character delay Set the delay between keystrokes (in milliseconds).
- **Delay Multibyte characters only** If Inter character delay is set, enable Delay Multbyte characters only to delay only the multibyte characters.
- Key event delay Set the amount of time (in milliseconds) of the wait time for control characters. (default 0.)
- Data formatting and ordering Allows formatting and ordering of UDI and Multibarcode data.
 - **UDI specific** Allows the output order of acquired UDI data to be adjusted and the optional insertion of a tab, line feed, or carriage return character between tokens.
 - Send tokens Set to select the output format for UDI data. (default disabled)
 - **Token separator** Set to select a separator character. If no separator character is selected when Send tokens is set to Barcodes and tokens, two instances of the same data are sent. (default none)
 - Token order Set to include or exclude Tokens from the output and adjust their output order.
 - Multibarcode specific Allows the optional insertion of a tab, line feed, or carriage return between each barcode.
 - Barcode separator Set to select a separator character. If no separator character is selected, the
 data set is sent as a single string.

- Advanced data formatting is a way to customizing data before transmission. Use advanced data formatting (ADF) to edit scan data to suit requirements.
 - Enable Enables or disables ADF. A check in the checkbox indicates that ADF is enabled (default disabled).
 - Rules ADF uses rules to customize data. These rules perform detailed actions when the data meets
 certain criteria. One rule may consist of single or multiple criteria applied to single or multiple actions.
 See Generating Advanced Data Formatting Rules for more information.
- **Basic data formatting** Allows the configuration of any data formatting for the related Output Plug-in. When the plug-in is disabled, any data is passed on without modification.
 - **Enabled** Enables or disables Basic Data Formatting. A check in the checkbox indicates that it is enabled (default enabled).
 - Prefix to data Add characters to the beginning of the data when sent.
 - Suffix to data Add characters to the end of the data when sent.
 - Send data Set to transfer the captured data to the foreground application. Disabling this option prevents the actual data from being transmitted. However, the prefix and suffix strings, if present, are still transmitted even when this option is disabled (default enabled).
 - **Send as hex** Set to send the data in hexadecimal format. A check in the checkbox indicates that the plug-in is enabled (default disabled).
 - **Send TAB key** Set to append a tab character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default disabled).
 - **Send ENTER key** Set to append an Enter character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default disabled).

Intent Output

Allows configuration of the Intent Output Plug-in for the profile. The Intent Output Plug-in allows the captured data to be sent to an application in the form of an implicit Intent. Refer to the Android Developer web site for more information, developer.android.com.

- **Enabled** Enables or disables this plug-in. A check in the checkbox indicates that the plug-in is enabled (default disabled).
- Intent action Enter the Intent Action name (required).
- Intent category Enter the Intent Category name (required).
- Intent delivery Select the method by which the intent is delivered:
 - · Send via StartActivity
 - Send via startService (default)
 - · Broadcast intent
- Receiver foreground flag Set Broadcast intent flag in Intent delivery. (DS3678).
- Advanced data formatting is a way to customizing data before transmission. Use advanced data formatting (ADF) to edit scan data to suit requirements.
 - Enable Enables or disables ADF. A check in the checkbox indicates that ADF is enabled (default disabled).
 - Rules ADF uses rules to customize data. These rules perform detailed actions when the data meets certain criteria. One rule may consist of single or multiple criteria applied to single or multiple actions. See Generating Advanced Data Formatting Rules for more information.

- Basic data formatting Allows configuration of any data formatting for the related Output Plug-in. When the plug-in is disabled any data is passed on without modification.
 - **Enabled** Enables or disables Basic Data Formatting. A check in the checkbox indicates that it is enabled (default enabled).
 - **Prefix to data** Add characters to the beginning of the data when sent.
 - Suffix to data Add characters to the end of the data when sent.
 - **Send data** Set to transfer the captured data to the foreground application. Disabling this option prevents the actual data from being transmitted. However, the prefix and suffix strings, if present, are still transmitted even when this option is disabled (default enabled).
 - **Send as hex** Set to send the data in hexadecimal format. A check in the checkbox indicates that the plug-in is enabled (default disabled).
 - **Send TAB key** Set to append a tab character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default disabled).
 - **Send ENTER key** Set to append an Enter character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default disabled).

Intent Overview

The core components of an Android application (its activities, services, and broadcast receivers) are activated by intents. An intent is a bundle of information (an Intent object) describing a desired action - including the data to be acted upon, the category of component that should perform the action, and other pertinent instructions. Android locates an appropriate component to respond to the intent, launches a new instance of the component if one is needed, and passes it the Intent object.

Components advertise their capabilities, the kinds of intents they can respond to, through intent filters. Since the system must learn which intents a component can handle before it launches the component, intent filters are specified in the manifest as <intent-filter>elements. A component may have any number of filters, each one describing a different capability. For example, if the manifest contains the following:

```
<intent-filter . . . >
<action android:name="android.intent.action.DEFAULT" />
<category android:name="android.intent.category.MAIN" />
</intent-filter>

In the Intent output plug-in configuration, the Intent action would be:
android.intent.action.DEFAULT
and the Intent category would be:
android.intent.category.MAIN.
```

The **Intent delivery** option allows the method by which the intent is delivered to be specified. The delivery mechanisms are **Send via startActivity**, **Send via startService** or **Broadcast intent**.

The decode related data added to the Intent's bundle can be retrieved using the Intent.getStringExtra() and Intent.getSerializableExtra() calls, using the following String tags:

- String LABEL_TYPE_TAG = "com.symbol.emdk.datawedge.label_type";
 - String contains the label type of the barcode.

- String DATA_STRING_TAG = "com.symbol.datawedge.data_string";
 - String contains the output data as a String. In the case of concatenated barcodes, the decode data is concatenated and sent out as a single string.
- String DECODE_DATA_TAG = "com.symbol.datawedge.decode_data";
 - Decode data is returned as a list of byte arrays. In most cases there will be one byte array per decode.
 For barcode symbologies that support concatenation, for example, Codabar, Code128, MicroPDF, etc.,
 the decoded data is stored in multiple byte arrays (one byte array per barcode). Clients can get data in
 each byte array by passing an index.

Most scanning applications might want the user to be able to decode data and for that decode data to be sent to the *current* activity but not necessarily displayed. If this is the case, then the activity needs to be marked as 'singleTop' in its AndroidManifest.xml file. If your activity is not defined as singleTop, then on every decode, the system will create another copy of your Activity and send the decode data to this second copy.

Finally there will be a configuration option for each process plug-in so that the process plug-in can be configured specifically for the intent output, which in this case is the basic data formatting process plug-in.

IP Output



NOTE: IPWedge application is required on a host computer. Download the IPWedge application from the Support Central web site: www.zebra.com/support.

IP Output allows DataWedge to send captured data to a host computer via a network connection. Captured data can be sent over an IP network to a specified IP address and port using either TCP or UDP transport protocols.


- **Enabled** Enables or disables this plug-in. A check in the checkbox indicates that the plug-in is enabled (default disabled).
- **Remote Wedge** Enable or disable the Remote Wedge option (default enabled). Remote Wedge is used with the IPWedge application.
- Protocol Select the protocol used by the remote application. Options: TCP (default) or UDP.
- IP address Enter the IP address used by the remote application (default 0.0.0.0).
- Port Enter the port number used by the remote application (default 58627).
- Data formatting and ordering Allows formatting and ordering of UDI and Multibarcode data.
 - **UDI specific** Allows the output order of acquired UDI data to be adjusted and the optional insertion of a tab, line feed, or carriage return character between tokens.
 - Send tokens Set to select the output format for UDI data. (default disabled)
 - **Token separator** Set to select a separator character. If no separator character is selected when Send tokens is set to Barcodes and tokens, two instances of the same data are sent. (default none)
 - Token order Set to include or exclude Tokens from the output and adjust their output order.
- Advanced data formatting is a way of customizing data before transmission. Use advanced data formatting (ADF) to edit scan data to suit requirements.
 - Enable Enables or disables ADF. A check in the checkbox indicates that ADF is enabled (default disabled).
 - Rules ADF uses rules to customize data. These rules perform detailed actions when the data meets
 certain criteria. One rule may consist of single or multiple criteria applied to single or multiple actions.
 See Generating Advanced Data Formatting Rules for more information.

- Basic data formatting Allows configuration of any data formatting for the related Output Plug-in. When
 the plug-in is disabled any data is passed on without modification.
 - Enabled Enables or disables Basic Data Formatting. A check in the checkbox indicates that it is enabled (default - enabled).
 - Prefix to data Add characters to the beginning of the data when sent.
 - Suffix to data Add characters to the end of the data when sent.
 - **Send data** Set to transfer the captured data to the foreground application. Disabling this option prevents the actual data from being transmitted. However, the prefix and suffix strings, if present, are still transmitted even when this option is disabled (default enabled).
 - **Send as hex** Set to send the data in hexadecimal format. A check in the checkbox indicates that the plug-in is enabled (default disabled).
 - **Send TAB key** Set to append a tab character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default disabled).
 - **Send ENTER key** Set to append an Enter character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default disabled).

Usage

This section provides information on how to configure IP Output using the DataWedge configuration user interface. To use IP Output in a particular DataWedge profile (for example: **Profile0**), scroll downward on **IP Output**.

Figure 118 IP Output Screen

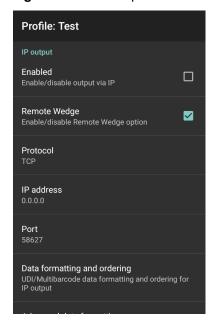

Using IP Output with IPWedge


IPWedge is a computer application that can be easily configured to retrieve data sent over network by DataWedge IP Output. Refer to the IPWedge User Manual on how to install and configure in a host computer. To enable IP Output to send captured data to a remote computer that is installed with IPWedge:

1. In IP Output, touch Enabled.

A check appears in the checkbox.


- Ensure Remote Wedge option is enabled.
- 3. Touch Protocol.
- 4. In the **Choose protocol** dialog box, touch the same protocol selected for the IPWedge computer application. (TCP is the default).

Figure 119 Protocol Selection

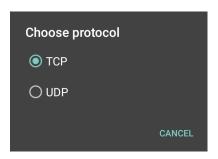


- 5. Touch IP Address.
- 6. In the Enter IP Address dialog box, enter the IP address of host computer to send data to.

Figure 120 IP Address Entry

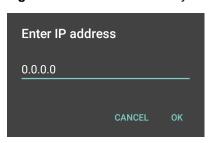

- 7. Touch Port.
- 8. In the Enter port number dialog box, enter same port number selected for IPWedge computer application.

Figure 121 Port Number Entry

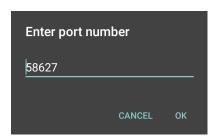

9. Configure **Advanced data formatting** and **Basic data formatting** Plug-in if any required modification to be done to captured data before sending to remote computer.

Using IP Output without IPWedge

IP Output Plug-in can be used to send captured data from DataWedge to a remote device or host computer without using IPWedge. At the data receiving end, the host computer or mobile device should have an application, that listens to TCP or UDP data coming from a configured port and IP address in the IP Output plug-in. To enable IP Output to send captured data to a remote computer:

1. In IP Output, touch Enabled.

A check appears in the checkbox.


- 2. Ensure **Remote Wedge** option is disabled.
- 3. Touch Protocol.
- 4. In the **Choose protocol** dialog box, touch the same protocol selected in the client application. (TCP is the default).

Figure 122 Protocol Selection




- 5. Touch IP Address.
- 6. In the Enter IP address dialog box, enter the IP address of host computer to send data to.

Figure 123 IP Address Entry

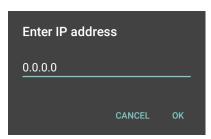

- 7. Touch Port.
- 8. In the **Enter port number** dialog box, enter the port number that the host computer application is listening on.

Figure 124 Port Number Entry

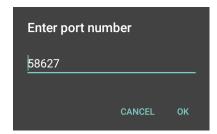

9. Configure **Advanced Data Formatting** and **Basic Data Formatting** Plug-in if any required modification to be done to captured data before sending to remote computer.

Generating Advanced Data Formatting Rules

The ADF plug-in applies rules (actions to be performed based on defined criteria) to the data received via an input plug-in before sending it to the output plug-in.


- Rules The ADF process plug-in consists of one or more rules. DataWedge formats the output data
 according to the first matching rule. A rule is a combination of criteria and a set of actions to be performed,
 upon fulfillment of the criteria set in the rule.
- Criteria Criteria can be set according to Input plug-in, symbology, matching string within the data (at the specified position) and/or data length. Received data must match the defined criteria in order for the data to be processed.
- Actions A set of procedures defined to format data. There are four types of actions which are for formatting
 cursor movement, data modification, data sending and delay specifications. An action can be defined to
 send the first number of characters to the Output plug-in, pad the output data with spaces or zeros, remove
 spaces in data, etc.

Configuring ADF Plug-in

Configuring the ADF plug-in consists of creating a rule, defining the criteria and defining the actions.

- 1. Swipe up from the bottom of the screen and touch ...
- 2. Touch a DataWedge profile.
- 3. In Keystroke Output, touch Advanced data formatting.

Figure 125 Advanced Data Formatting Screen

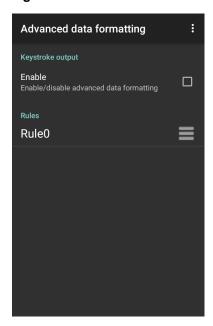

4. Touch the **Enable** checkbox to enable ADF.

Creating a Rule



NOTE: By default, Rule0, is the only rule in the Rules list.


1. Touch .

- 2. Touch New rule.
- 3. Touch the **Enter rule name** text box.
- 4. In the text box, enter a name for the new rule.
- 5. Touch **OK**.

Defining a Rule

1. Touch the newly created rule in the **Rules** list.

Figure 126 Rule List Screen

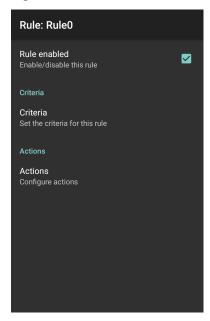


2. Touch the Rule enabled check box to enable the current rule.

Defining Criteria

1. Touch Criteria.


Figure 127 Criteria Screen

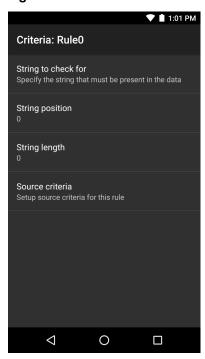

- 2. Touch String to check for option to specify the string that must be present in the data.
- 3. In the Enter the string to check for dialog box, enter the string
- 4. Touch OK.
- 5. Touch **String position** option to specify the position of the string specified in the **String to check for** option. The ADF rule is only applied if the specific string in **String to check** for is found at the specified **String position** location (zero for the start of the string).
- 6. Touch the + or to change the value.
- 7. Touch OK.
- 8. Touch **String length option** to specify a length for the received data. The ADF rule only applies to the barcode data with that specified length.
- 9. Touch the + or to change the value.
- 10. Touch OK.
- 11. Touch **Source criteria** option to associate an input device to an ADF rule. The ADF rule only applies to data received from associated input devices.
- 12. Touch Barcode input. Options vary depending upon the device configuration.

13. Touch the **Source enabled** checkbox to accept data from this source.

Figure 128 Barcode Input Screen

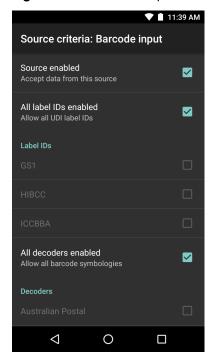

- 14. For general barcode inputs, touch the **All decoders enabled** checkbox to select all bar code symbologies. Deselect the **All decoders enabled** checkbox to individually select the symbologies.
- 15. Touch **<** until the **Rule** screen appears.
- 16. If required, repeat steps to create another rule.

Defining an Action



 $\mbox{{\bf NOTE:}}\;$ By default the $\mbox{{\bf Send}}\;\mbox{{\bf remaining}}\;\mbox{action}\;\mbox{is}\;\mbox{in}\;\mbox{the}\;\mbox{{\bf Actions}}\;\mbox{list}.$

- 1. Touch .
- 2. Touch New action.
- 3. In the **New action** menu, select an action to add to the **Actions** list. See the ADF Supported Actions table for a list of supported ADF actions.
- 4. Some Actions require additional information. Touch the Action to display additional information fields.
- 5. Repeat steps to create more actions.
- 6. Touch **◁**.
- 7. Touch **◁**.

Deleting a Rule

- 1. Touch and hold on a rule until the context menu appears.
- 2. Touch Delete rule to delete the rule from the Rules list.



NOTE: When there is no rule available for ADF plug-in or all rules are disabled, DataWedge passes decoded data to the output plug-in without processing the data.

Order Rules List



NOTE: When there are no rules defined, ADF passes the captured data through as is. In contrast, when rules are defined but all are disabled, ADF does not pass any captured data through.

Rules are processed in top-down order. The rules that are on top of the list are processed first. Use the icon next to the rule to move it to another position in the list.

Table 10 ADF Supported Actions

| Туре | Actions | Description |
|----------------------|-------------------------|---|
| Cursor Movement | Skip ahead | Moves the cursor forward by a specified number of characters. Enter the number of characters to move the cursor ahead. |
| | Skip back | Moves the cursor back by a specified number of characters. Enter the number of characters to move the cursor back. |
| | Skip to start | Moves the cursor to the beginning of the data. |
| | Move to | Moves the cursor forward until the specified string is found. Enter the string in the data field. |
| | Move past a | Moves the cursor forward past the specified string. Enter the string in the data field. |
| Data Modification | Crunch spaces | Remove spaces between words to one and remove all spaces at the beginning and end of the data. |
| | Stop space crunch | Stops space crunching. This disables the last Crunch spaces action. |
| | Remove all spaces | Remove all spaces in the data. |
| | Stop space removal | Stop removing spaces. This disables the last Remove all spaces action. |
| | Remove leading zeros | Remove all zeros at the beginning of data. |
| | Stop zero removal | Stop removing zeros at the beginning of data. This disables the previous Remove leading zeros action. |
| | Pad with zeros | Left pad data with zeros to meet the specified length. Enter the number zeros to pad. |
| | Stop pad zeros | Stop padding with zeros. This disables the previous Pad with zeros action. |
| | Pad with spaces | Left pad data with spaces to meet the specified length. Enter the number spaces to pad. |
| | Stop pad spaces | Stop padding with spaces. This disables the previous Pad with spaces action. |
| | Replace string | Replaces a specified string with a new string. Enter the string to replace and the string to replace it with. |
| | Stop all replace string | Stop all Replace string actions. |

Table 10 ADF Supported Actions (Continued)

| Type | Actions | Description |
|-----------------|----------------|---|
| Data Sending | Send next | Sends the specified number of characters from the current cursor position. Enter the number of characters to send. |
| | Send remaining | Sends all data that remains from the current cursor position. |
| | Send up to | Sends all data up to a specified string. Enter the string. |
| | Send pause | Pauses the specified number of milliseconds before continuing the next action. Enter the amount of time in milliseconds. |
| | Send string | Sends a specified string. Enter the string to send. |
| | Send char | Sends a specified ASCII/ Unicode character. Enter a character value. The maximum Unicode character value can be entered is U-10FFFF (= 1114111 in decimal). |

Deleting an Action

- 1. Touch and hold the action name.
- 2. Select Delete action from the context menu.

ADF Example

The following illustrates an example of creating Advanced Data Formatting:

When a user scans a barcode with the following criteria:


- Code 39 barcode.
- length of 12 characters.
- contains 129 at the start position.

Modify the data as follows:

- · Pad all sends with zeros to length 8.
- send all data up to character X.
- · send a space character.


To create an ADF rule for the above example:

- 1. Swipe up from the bottom of the screen and touch ...
- 2. Touch Profile0.
- 3. Under Keystroke Output, touch Advanced data formatting.
- 4. Touch Enable.
- 5. Touch Rule0.
- 6. Touch Criteria.
- 7. Touch String to check for.
- 8. In the Enter the string to check for text box, enter 129 and then touch OK.
- 9. Touch String position.

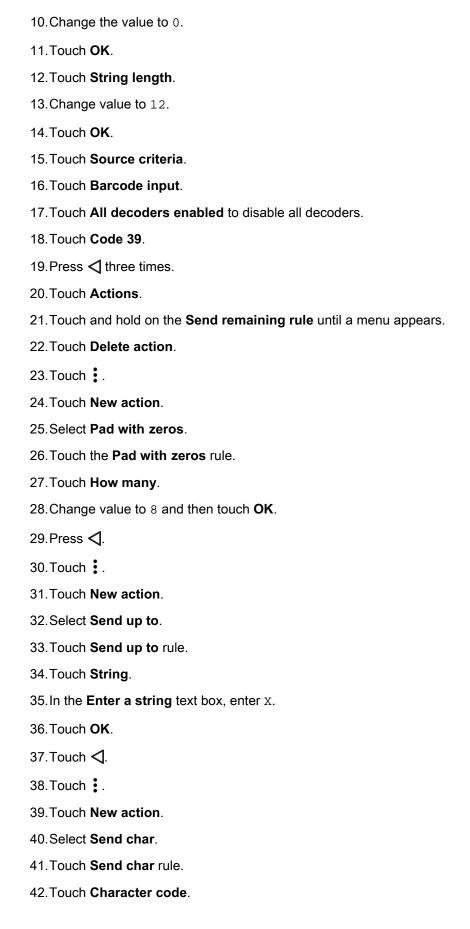

- 43. In the Enter character code text box, enter 32.
- 44. Touch OK.
- 45. Touch **<**√.

Figure 129 ADF Sample Screen

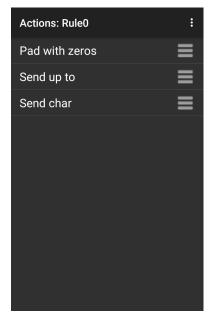

- 46. Ensure that an application is open on the device and a text field is in focus (text cursor in text field).
- 47. Aim the exit window at the barcode.

Figure 130 Sample Barcode



1299X1559828

48. Press and hold the scan button.

The red laser aiming pattern turns on to assist in aiming. Ensure that the barcode is within the area formed by the aiming pattern. The LED light red to indicate that data capture is in process.

49. The LED lights green, a beep sounds and the device vibrates, by default, to indicate the barcode was decoded successfully. The LED lights green and a beep sounds, by default, to indicate the barcode was decoded successfully. The formatted data 000129X<space>appears in the text field.

Scanning a Code 39 barcode of 1299X15598 does not transmit data (rule is ignored) because the barcode data did not meet the length criteria.


Figure 131 Formatted Data



DataWedge Settings

The DataWedge Settings screen provides access to general, non-profile related options. Touch : > Settings.

Figure 132 DataWedge Settings Window

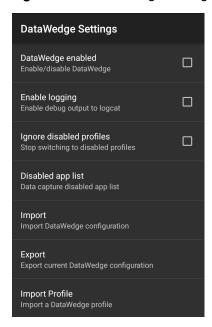

- **DataWedge enabled** Enables or disables DataWedge. To disable DataWedge uncheck this option (default enabled).
- **Enable logging** Enables or disables debug output file to logcat. To enable logging check this option (default disabled).
- **Ignore disabled profiles** Prevents DataWedge from switching to a Profile that is not enabled. In such instances, the Profile switch is ignored and the current Profile remains active Profile0 must be disabled to use this feature (default disabled).
- Disable app list Disables scanning functions for selected applications or activities.
- **Import** Allows import of a DataWedge configuration file. The imported configuration replaces the current configuration.
- Export Allows export of the current DataWedge configuration.
- Import Profile Allows import of a DataWedge profile file.
- Export Profile Allows export of a DataWedge profile.
- · Restore Return the current configuration back to factory defaults.
- Reporting Configures reporting options.

Importing a Configuration File

- Copy the configuration file to the microSD card /Android/data/com.symbol.datawedge/files folder.
- 2. Touch .
- 3. Touch Settings.
- 4. Touch Import.
- 5. Touch filename to import.

The configuration file (datawedge.db) is imported and replaces the current configuration.

Exporting a Configuration File

- 1. Touch .
- 2. Touch Settings.
- Touch Export.
- 4. In the **Export to** dialog box, select the location to save the file.
- 5. Touch Export. The configuration file (datawedge.db) is saved to the selected location.

Importing a Profile File



NOTE: Do not change the filename of the of the profile file. If the filename is changed, the file will not be imported.

- 1. Copy the profile file to the On Device Storage /Android/data/com.symbol.datawedge/files folder.
- 2. Touch .
- 3. Touch Settings.

- 4. Touch Import Profile.
- Touch the profile file to import.
- 6. Touch **Import**. The profile file (**dwprofile_x.db**, where x = the name of the profile) is imported and appears in the profile list.

Exporting a Profile

- 1. Touch .
- 2. Touch Settings.
- 3. Touch Export Profile.
- 4. Touch the profile to export.
- 5. Touch Export.

The profile file ($dwprofile_x.db$, where x = name of the profile) is saved to the root of the On-device Storage.

Restoring DataWedge

To restore DataWedge to the factory default configuration:

- 1. Touch .
- 2. Touch Settings.
- 3. Touch Restore.
- 4. Touch Yes.

Configuration and Profile File Management

The configuration or profile settings for DataWedge can be saved to a file for distribution to other devices.

After making configuration or profile changes, export the new configuration or profile to the root of the On-device Storage. The configuration file created is automatically named datawedge.db. The profile file created is automatically named dwprofile_x.db, where x is the profile name. The files can then the copied to the On-device Storage of other devices and imported into DataWedge on those devices. Importing a configuration or profile replaces the existing settings.

Enterprise Folder

Internal storage contains the Enterprise folder (/enterprise). The Enterprise folder is persistent and maintains data after an Enterprise reset. After an Enterprise Reset, DataWedge checks folder /enterprise/device/settings/datawedge/enterprisereset/ for a configuration file, datawedge.db or a profile file, dwprofile_x.db. If the file is found, it imports the file to replace any existing configuration or profile.



NOTE: A Factory Reset deletes all files in the Enterprise folder.

Auto Import

DataWedge supports remote deployment of a configuration to a device, using tools such as commercially available third-party Mobile Device Management (MDM) systems. DataWedge monitors the <code>/enterprise/device/settings/datawedge/autoimport</code> folder for the DataWedge configuration file (datawedge.db) or a profile file (dwprofile_x.db). If a configuration or profile file is found, it imports the file to replace any existing configuration or profile. Once the file has been imported it is deleted from the folder. DataWedge begins using the imported configuration immediately.



NOTE: A Factory Reset deletes all files in the **/enterprise** folder.

It is strongly recommended that the user exits DataWedge before remotely deploying any configuration or profile. It is required that the file permissions are set to 666.

The **/enterprise** folder cannot be seen with **Files** app or other user-level tools. Moving configuration files to and from the **/autoimport** or **/enterprisereset** folders must be done programmatically, or with a staging client app or MDM.

Programming Notes

The following paragraphs provide specific programming information when using DataWedge.

Overriding Trigger Key in an Application

To override the trigger key in an application, create a profile for the application that disables the Barcode input. In the application, use standard APIs, such as onKeyDown() to listen for the KEYCODE_BUTTON_L1 and KEYCODE_BUTTON_R1 presses.

Capture Data and Taking a Photo in the Same Application

To be able to capture bar code data and take a photo in the same application:

- Create a Datawedge profile pertaining to the picture taking Activity in your application that disables scanning and use standard Android SDK APIs to control the Camera.
- The default Datawedge profile takes care of the scanning in the application. You might want to create
 another DataWedge profile that caters to any specific scanning needs, associated to your Application's
 Activity pertaining to scanning.

Disable DataWedge on Device

To disable DataWedge:

- 1. Swipe up from the bottom of the Home screen and touch **DataWedge**.
- 2. Touch
- 3. Touch Settings.
- 4. Unselect the **DataWedge enabled** check box.

DataWedge APIs

DataWedge APIs operate primarily through Android intents - specific commands that can be used by other applications to control data capture without the need to directly access the DataWedge UI. For more information, see http://techdocs.zebra.com/datawedge/6-8/guide/api/

Reporting

DataWedge 6.6 (and higher) can report the results of the importation of device Profiles. These HTML reports display settings differences between the originating (source) database and the target (destination) device. This allows administrators to easily identify differences and make adjustments to compensate for disparities in hardware or software capabilities from one device to another. Reports always use the destination device as the basis against which to compare incoming settings files.

To enable Reporting:

- 1. Swipe up from the bottom of the screen and touch ...
- 2. Touch .
- 3. Touch Settings.
- 4. Touch Reporting.
- 5. Select the Reporting enabled check box.

Soft Scan Trigger

DataWedge allows a native Android application to programmatically start, stop, or toggle the scan trigger state. The application can issue an Android Broadcast Intent, to control the scanner, without requiring the scan key to be pressed. The active DataWedge profile is required to control all the parameters during a scan operation.

Parameters

The structure of the broadcast intent that resolves to the soft scan is:

ACTION [String]: "com.symbol.datawedge.api.ACTION"

EXTRA DATA [String]: "com.symbol.datawedge.api.SOFT_SCAN_TRIGGER"

<parameter>: The parameter as a string, using any of the following:

- START_SCANNING starts scanning when triggered
- STOP SCANNING stops or interrupts scanning when triggered
- TOGGLE_SCANNING toggles between START_SCANNING and STOP_SCANNING when triggered.

Function Prototype

```
Intent i = new Intent();
i.setAction("com. symbol.datawedge.api.ACTION");
i.putExtra("com. symbol.datawedge.api.SOFT_SCAN_TRIGGER", "<parameter>");
```

Scanner Input Plugin

The ScannerInputPlugin API command can be used to enable/disable the scanner plug-in being used by the currently active Profile. Disabling the scanner plug-in effectively disables scanning in that Profile, regardless of whether the Profile is associated or unassociated. Valid only when Barcode Input is enabled in the active Profile.



NOTE: Use of this API changes only the runtime status of the scanner; it does not make persistent changes to the Profile.

Function Prototype

```
Intent i = new Intent();
i.setAction("com. symbol.datawedge.api.ACTION");
i.putExtra("com. symbol.datawedge.api.SCANNER_INPUT_PLUGIN", "<parameter>");
```

Parameters

action: String "com.symbol.datawedge.api.ACTION"

extra data: String "com.symbol.datawedge.api.SCANNER INPUT PLUGIN"

<parameter>: The parameter as a string, using either of the following:

- SUSPEND_PLUGIN suspends the scanner so it is temporarily inactive when switching from the WAITING or SCANNING state. SCANNER_STATUS notification broadcasts IDLE state.
- RESUME_PLUGIN resumes the scanner when changing from the SUSPEND_PLUGIN suspended state.
 SCANNER_STATUS notification broadcasts WAITING and SCANNING states, rotating between each
 depending on whether scanning is taking place. In the WAITING state it is expecting an action from the
 user such as a trigger press. In the SCANNING state it is actively performing a scan resulting from an
 action such as a trigger press.
- "ENABLE PLUGIN" enables the plug-in the scanner becomes active.
- "DISABLE_PLUGIN" disables the plug-in the scanner becomes inactive.

Return Values

None.

Error and debug messages will be logged to the Android logging system which then can be viewed and filtered by the logcat command. You can use logcat from an ADB shell to view the log messages, for example:

```
$ adb logcat -s DWAPI
```

Error messages will be logged for invalid actions and parameters.

Example

```
// define action and data strings
String scannerInputPlugin = "com. symbol. datawedge. api. ACTION_SCANNERINPUTPLUGIN";
String extraData = "com. symbol. datawedge. api. EXTRA_PARAMETER";

public void onResume() {
    // create the intent
    Intent i = new Intent();
    // set the action to perform
    i. setAction(scannerInputPlugin);
    // add additional info
    i. putExtra(extraData, "DISABLE_PLUGIN");
    // send the intent to DataWedge
    context. sendBroadcast(i);
}
```

Comments

This intent API allows the scanner plug-in for the current Profile to be enabled or disabled. For example, activity A launches and uses the intent API to switch to ProfileA in which the scanner plug-in is enabled, then at some point it uses the Data Capture API to disable the scanner plug-in. Activity B is launched. In DataWedge, ProfileB is associated with activity B. DataWedge switches to ProfileB. When activity A comes back to the foreground, in the **onResume** method, activity A needs to use the intent API to switch back to ProfileA, then use the intent API again to disable the scanner plug-in, to return back to the state it was in.



NOTE: Use of this API changes only the runtime status of the scanner; it does not make persistent changes to the Profile. The above assumes that ProfileA is not associated with any applications/activities, therefore when focus switches back to activity A, DataWedge will not automatically switch to ProfileA therefore activity A must switch back to ProfileA in its onResume method. Because DataWedge will automatically switch Profile when an activity is paused, it is recommended that this API function be called from the onResume method of the activity.

Enumerate Scanners

Use the enumerateScanners API command to get a list of scanners available on the device.

Function Prototype

```
Intent i = new Intent();
i.setAction("com. symbol. datawedge. api. ACTION");
i.putExtra("com. symbol. datawedge. api. ENUMERATE_SCANNERS", "");
```

Parameters

ACTION [String]: "com.symbol.datawedge.api.ENUMERATE_SCANNERS"

Return Values

The enumerated list of scanners will be returned via the broadcast Intent "com.symbol.datawedge.api.ACTION_ENUMERATEDSCANNERLIST". The list of scanners is returned as a string array (see the example below).

Error and debug messages are logged to the Android logging system which then can be viewed and filtered by the logcat command. You can use logcat from an ADB shell to view the log messages. For example:

\$ adb logcat -s DWAPI

Error messages are logged for invalid actions and parameters.

Example

```
// Call before sending the enumeration query
//
public void registerReciever(){
   IntentFilter filter = new IntentFilter();
    filter.addAction("com.symbol.datawedge.api.RESULT_ACTION");//RESULT_ACTION
    filter.addCategory(Intent.CATEGORY_DEFAULT);
    registerReceiver(enumeratingBroadcastReceiver, filter);
}
//
// Send the enumeration command to DataWedge
public void enumerateScanners(){
   Intent i = new Intent();
    i.setAction("com.symbol.datawedge.api.ACTION");
    i.putExtra("com.symbol.datawedge.api.ENUMERATE_SCANNERS", "");
    this.sendBroadcast(i);
}
public void unRegisterReciever(){
    unregi sterRecei ver(enumerati ngBroadcastRecei ver);
// Create broadcast receiver to receive the enumeration result
pri vate BroadcastRecei ver enumerati ngBroadcastRecei ver = new BroadcastRecei ver() {
    @Overri de
    public void onReceive(Context context, Intent intent) {
        String action = intent.getAction();
        Log.d(TAG, "Action: " + action);
        if(action.equals("com.symbol.datawedge.api.RESULT_ACTION")){
            // enumerate scanners
            //
            if(intent.hasExtra("com.symbol.datawedge.api.RESULT_ENUMERATE_SCANNERS")) {
            ArrayList<Bundle> scannerList = (ArrayList<Bundle>)
intent.getSerializableExtra("com. symbol.datawedge.api.RESULT_ENUMERATE_SCANNERS");
            if((scannerList!= null) && (scannerList.size() > 0)) {
                for (Bundle bunb : scannerList){
                    String[] entry = new String[4];
                    entry[0] = bunb.getString("SCANNER_NAME");
                    entry[1] = bunb.getBoolean("SCANNER_CONNECTION_STATE")+"";
                    entry[2] = bunb.getInt("SCANNER_INDEX")+"";
                    entry[3] = bunb.getString("SCANNER_IDENTIFIER");
                   Log.d(TAG, "Scanner: " + entry[0] + " Connection: " + entry[1] + " Index: " + entry[2] + " ID: " + entry[3]);
            }
        }
    }
};
```

Comments

The scanner and its parameters are set based on the currently active Profile.

Set Default Profile

Use the setDefaultProfile API function to set the specified Profile as the default Profile.

Default Profile Recap

Profile0 is the generic Profile used when there are no user created Profiles associated with an application.

Profile0 can be edited but cannot be associated with an application. That is, DataWedge allows manipulation of plug-in settings for Profile0 but it does not allow assignment of a foreground application. This configuration allows DataWedge to send output data to any foreground application other than applications associated with user-defined Profiles when Profile0 is enabled.

Profile0 can be disabled to allow DataWedge to only send output data to those applications which are associated in user-defined Profiles. For example, create a Profile associating a specific application, disable Profile0 and then scan. DataWedge only sends data to the application specified in the user-created Profile. This adds additional security to DataWedge enabling the sending of data only to specified applications.

Usage Scenario

A launcher application has a list of apps that a user can launch and that none of the listed apps has an associated DataWedge Profile. Once the user has selected an app, the launcher needs to set the appropriate DataWedge Profile for the selected app. This could be done by using **setDefaultProfile** to set the default Profile to the required Profile. Then when the user launches the selected app, DataWedge auto Profile switching switches to the default Profile (which is now the required Profile for that app).

If, for some reason, the launched app has an associated DataWedge Profile then that will override the set default Profile.

When control is returned to the launcher application, **resetDefaultProfile** can be used to reset the default Profile.

Function Prototype

```
Intent i = new Intent();
i.setAction("com. symbol.datawedge.api.ACTION");
i.putExtra("com. symbol.datawedge.api.SET_DEFAULT_PROFILE", "profile name>");
```

Parameters

ACTION [String]: "com.symbol.datawedge.api.ACTION"

EXTRA DATA [String]: "com.symbol.datawedge.api.SET_DEFAULT_PROFILE"

<profile name>: The Profile name (a case-sensitive string) to set as the default Profile.

Return Values

None.

Error and debug messages are logged to the Android logging system which then can be viewed and filtered by the logcat command. You can use logcat from an ADB shell to view the log messages. For example:

```
$ adb logcat -s DWAPI
```

Error messages are logged for invalid actions, parameters and failures, for example, Profile not found or associated with an application.

Example

```
// define action and data strings
String setDefaultProfile = "com. symbol. datawedge. api. ACTION";
String extraData = "com. symbol. datawedge. api. SET_DEFAULT_PROFILE";

public void onResume() {
    // create the intent
    Intent i = new Intent();

    // set the action to perform
    i. setAction(setDefaultProfile);

    // add additional info (a name)
    i. putExtra(extraData, "myProfile");

    // send the intent to DataWedge
    this. sendBroadcast(i);
}
```

Comments

The API command has no effect if the specified Profile does not exist or if the specified Profile is already associated with an application. DataWedge automatically switches Profiles when the activity is paused, so it is recommended that this API function is called from the onResume method of the activity.

Zebra recommends that this Profile is created to cater to all applications/activities that would otherwise default to using Profile0. This ensures that these applications/activities continue to work with a consistent configuration.

Reset Default Profile

Use the resetDefaultProfile API function to reset the default Profile back to Profile0.

Function Prototype

```
Intent i = new Intent();
i.setAction("com. symbol. datawedge. api. ACTION");
i.putExtra("com. symbol. datawedge. api. RESET_DEFAULT_PROFILE", "");
```

Parameters

ACTION [String]: "com.symbol.datawedge.api.ACTION"

EXTRA_DATA [String]: "com.symbol.datawedge.api.RESET_DEFAULT_PROFILE".

Return Values

None.

Error and debug messages are logged to the Android logging system which then can be viewed and filtered by the logcat command. You can use logcat from an ADB shell to view the log messages. For example:

```
$ adb logcat -s DWAPI
```

Error messages are logged for invalid actions, parameters and failures, for example, Profile not found or associated with an application.

Example

```
// define action string
String action = "com. symbol.datawedge.api.ACTION";
String extraData = "com. symbol.datawedge.api.RESET_DEFAULT_PROFILE";

public void onResume() {
    // create the intent
    Intent i = new Intent();

    // set the action to perform
    i.setAction(action);
    i.putExtra(extraData, ""); // empty since a name is not required this.sendBroadcast;
}
```

Comments

None.

Switch To Profile

Use the SwitchToProfile API action to switch to the specified Profile.

Profiles Recap

DataWedge is based on Profiles and plug-ins. A Profile contains information on how DataWedge should behave with different applications.

Profile information consists of:

- Associated application
- · Input plug-in configurations
- · Output plug-in configurations
- Process plug-in configurations

DataWedge includes a default Profile, Profile0, that is created automatically the first time DataWedge runs.

Using Profiles, each application can have a specific DataWedge configuration. For example, each user application can have a Profile which outputs scanned data in the required format when that application comes to the foreground. DataWedge can be configured to process the same set of captured data differently based on the requirements of each application.



NOTE: Use of this API changes only the runtime status of the scanner; it does not make persistent changes to the Profile. A single Profile may be associated with one or many activities/apps, however, given an activity, only one Profile may be associated with it.

Usage Scenario

An application has two activities. Activity A only requires EAN13 bar codes to be scanned. Activity B only requires Code 128 bar codes to be scanned. Profile EAN13 is configured to only scan EAN13 bar codes and is left unassociated. Profile Code128 is configured to scan Code 128 and is left unassociated. When Activity A launches it uses SwitchToProfile to activate Profile EAN13. Similarly, when Activity B launches it uses switchToProfile to activate Profile Code128.

If another activity/app comes to the foreground, DataWedge auto Profile switching sets the DataWedge Profile accordingly either to the default Profile or to an associated Profile.

When Activity A (or Activity B) comes back to the foreground it uses switchToProfile to reset the Profile back to Profile B (or Profile M).

Function Prototype

```
Intent i = new Intent();
i.setAction("com. symbol.datawedge.api.ACTION");
i.putExtra("com. symbol.datawedge.api.SWITCH_TO_PROFILE", "profile name>");
```

Parameters

ACTION [String]: "com.symbol.datawedge.api.ACTION"

EXTRA_DATA [String]: "com.symbol.datawedge.api.SWITCH_TO_PROFILE"

<profile name>: The Profile name (a case-sensitive string) to set as the active Profile.

Return Values

None.

Error and debug messages are logged to the Android logging system which then can be viewed and filtered by the logcat command. You can use logcat from an ADB shell to view the log messages. For example:

```
$ adb logcat -s DWAPI
```

Error messages are logged for invalid actions, parameters and failures, for example, Profile not found or associated with an application.

Example

```
// define action and data strings
String switchToProfile = "com. symbol.datawedge.api.ACTION";
String extraData = "com. symbol.datawedge.api.SWITCH_TO_PROFILE";

public void onResume() {
    super.onResume();

    // create the intent
    Intent i = new Intent();

    // set the action to perform
    i.setAction(switchToProfile);

    // add additional info
    i.putExtra(extraData, "myProfile");

    // send the intent to DataWedge
    this.sendBroadcast(i);
}
```

Comments

This API function has no effect if the specified Profile does not exist or is already associated with an application.

DataWedge has a one-to-one relationship between Profiles and activities; a Profile can be associated only with a single activity. When a Profile is first created, it's not associated with any application, and is not activated until associated. This makes it possible to create multiple unassociated Profiles.

This API function activates such Profiles.

DataWedge

For example, Profile A is unassociated and Profile B is associated with activity B. If activity A is launched and uses **SwitchToProfile** function to switch to Profile A, then Profile A is active whenever activity A is in the foreground. When activity B comes to the foreground, DataWedge automatically switches to Profile B.

When activity A returns to the foreground, the app must use **SwitchToProfile** again to switch back to Profile A. This would be done in the **onResume** method of activity A.



NOTE: Use of this API changes only the runtime status of the scanner; it does not make persistent changes to the Profile.

Notes

Because DataWedge automatically switches Profile when the activity is paused, Zebra recommends that this API function is called from the onResume method of the activity.

After switching to a Profile, this unassociated Profile does not get assigned to the application/activity and is available to use in the future with a different app/activity.

For backward compatibility, DataWedge's automatic Profile switching is not affected by the above API commands. This why the commands work only with unassociated Profiles and apps.

DataWedge auto Profile switching works as follows:

Every second...

- · Sets newProfileId to the associated Profile ID of the current foreground activity.
- If no associated Profile is found, sets newProfileId to the associated Profile ID of the current foreground app.
- If no associated Profile is found, sets newProfileId to the current default Profile (which MAY NOT be Profile0).
- · Checks the newProfileId against the currentProfileId. If they are different:
 - · deactivates current Profile
 - activates new Profile (newProfileId)
 - sets currentProfileId = newProfileId

Introduction

This chapter describes features in Android including new security features, how to package applications, and procedures for deploying applications onto the device.

Security

The device implements a set of security policies that determine whether an application is allowed to run and, if allowed, with what level of trust. To develop an application, you must know the security configuration of the device, and how to sign an application with the appropriate certificate to allow the application to run (and to run with the needed level of trust).



NOTE: Ensure the date is set correctly before installing certificates or when accessing secure web sites.

Secure Certificates

If the VPN or Wi-Fi networks rely on secure certificates, obtain the certificates and store them in the device's secure credential storage, before configuring access to the VPN or Wi-Fi networks.

If downloading the certificates from a web site, set a password for the credential storage. The device supports X.509 certificates saved in PKCS#12 key store files with a .p12 extension (if key store has a .pfx or other extension, change to .p12).

The device also installs any accompanying private key or certificate authority certificates contained in the key store.

Installing a Secure Certificate

To install a secure certificate:

- 1. Copy the certificate from the host computer to the root of the microSD card or the device's internal memory. See USB Communication for information about connecting the device to a host computer and copying files.
- 2. Swipe down from the Status bar to open the Quick Access panel and then touch \$\display\$.
- 3. Touch Security & location > Advanced > Encryption & credentials.
- 4. Touch **Install from storage**.
- Navigate to the location of the certificate file.

- 6. Touch the filename of the certificate to install.
- 7. If prompted, enter the password for credential storage. If a password has not been set for the credential storage, enter a password for it twice and then touch **OK**.
- 8. If prompted, enter the certificate's password and touch **OK**.
- 9. Enter a name for the certificate and in the Credential use drop-down, select VPN and apps or Wi-Fi.

Figure 133 Name the Certificate Dialog Box



10. Touch OK.

The certificate can now be used when connecting to a secure network. For security, the certificate is deleted from the microSD card or internal memory.

Configuring Credential Storage Settings

- 1. Swipe down from the Status bar to open the Quick Access panel and then touch 🌣.
- 2. Touch Security & location > Encryption & credentials.
 - Trusted credentials Touch to display the trusted system and user credentials.
 - Install from storage Touch to install a secure certificate from the microSD card or internal storage.
 - Clear credentials Deletes all secure certificates and related credentials.

Development Tools

Android Application Development

Development Workstation

Android development tools are available at developer.android.com.

To start developing applications for the device, download Android Studio. Development can take place on a Microsoft® Windows®, Mac® OS X®, or Linux® operating system.

Applications are written in the Java language, but compiled and executed in the Dalvik virtual machine. Once the Java code is compiled cleanly, the developer tools make sure the application is packaged properly, including the AndroidManifest.xml file.

Android Studio contains a full featured IDE as well as SDK components required to develop Android applications.

Target Device

Open the **Developer options** screen to set development related settings.

By default, the Developer Options are hidden. To un-hide the developer options, swipe down from the Status bar to open the Quick Access panel and then touch ...

Touch **System > About device**. Scroll down to **Build number**. Tap **Build number** seven times until **You are now a developer appears**.

Touch **System > Developer options**. Slide the switch to the **ON** position to enable developer options.

EMDK for Android

EMDK for Android provides developers with a comprehensive set of tools to easily create powerful line-of-business applications for enterprise mobile computing devices. It's designed for Google's Android SDK and Android Studio, and includes class libraries, sample applications with source code, and all associated documentation to help your applications take full advantage of what Zebra devices have to offer.

The kit also delivers Profile Manager, a GUI-based device configuration tool providing exclusive access to the Zebra MX device management framework. This allows developers to configure Zebra devices from within their applications in less time, with fewer lines of code and with fewer errors.

For more information go to: techdocs.zebra.com.

StageNow

StageNow is Zebra's next-generation Android Staging Solution built on the MX platform. It allows quick and easy creation of device profiles, and can deploy to devices simply by scanning a bar code, reading a tag, or playing an audio file.

The StageNow Staging Solution includes the following components:

- The StageNow Workstation tool installs on the staging workstation (host computer) and lets the
 administrator easily create staging profiles for configuring device components, and perform other staging
 actions such as checking the condition of a target device to determine suitability for software upgrades or
 other activities. The StageNow Workstation stores profiles and other created content for later use.
- The StageNow Client resides on the device and provides a user interface for the staging operator to initiate staging. The operator uses one or more of the desired staging methods (print and scan a bar code, read an NFC tag or play an audio file) to deliver staging material to the device.

For more information go to: techdocs.zebra.com.

ADB USB Setup

To use the ADB, install the USB driver. This assumes that the development SDK has been installed on the host computer. Go to developer.android.com/sdk/index.html for details on setting up the development SDK.

ADB driver for Windows and Linux are available on the Zebra Support Central web site at www.zebra.com/support. Download the ADB and USB Driver Setup package. Follow the instructions with the package to install the ADB and USB drivers for Windows and Linux.

Enabling USB Debugging

By default, USB debugging is disabled. To enable USB debugging:

- Swipe down from the Status bar to open the Quick Access panel, and then touch .
- 2. Touch System > About phone.
- 3. Scroll down to Build number.
- 4. Tap Build number seven times. The message You are now a developer! appears.
- Touch ◀.
- 6. Touch **Developer options**.
- 7. Slide the **USB debugging** switch to the **ON** position.
- 8. Touch OK.
- 9. Connect the device to the host computer using the Rugged Charge/USB Cable.

The Allow USB debugging? dialog box appears on the device.

- 10. On the device, touch OK.
- 11.On the host computer, navigate to the platform-tools folder.
- 12. Type adb devices.

The following displays:

List of devices attached

XXXXXXXXXXXXXX device (where XXXXXXXXXXXXXX is the device number).



NOTE: If device number does not appear, ensure that ADB drivers are installed properly.

13. Touch O.

Application Installation

After an application is developed, install the application onto the device using one of the following methods:

- USB connection, see Installing Applications Using the USB Connection.
- Android Debug Bridge, see Installing Applications Using the Android Debug Bridge.
- microSD Card, see Installing Applications Using a microSD Card.
- Mobile device management (MDM) platforms that have application provisioning. Refer to the MDM software documentation for details.

Installing Applications Using the USB Connection




CAUTION: When connecting the device to a host computer and mounting the microSD card, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.

1. Connect the device to a host computer using the Rugged Charge/USB cable.

2. Pull down the Notification panel and touch USB for Charging.

Figure 134 Use USB Dialog Box

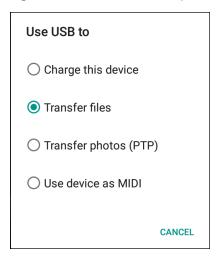

- 3. Touch Transfer files.
- 4. On the host computer, open a **Files** application.
- 5. On the host computer, copy the application .apk file from the host computer to the device.



CAUTION: Carefully follow the host computer's instructions to unmount the microSD card and disconnect USB devices correctly to avoid losing information.

- 6. Disconnect the device from the host computer.
- 7. Swipe the screen up and select 🔘 to view files on the microSD card or Internal Storage.
- 8. Locate the application .apk file.
- 9. Touch the application file.

Figure 135 Install App Permission Dialog Box

Your phone and personal data are more vulnerable to attack by unknown apps. By installing this app, you agree that you are responsible for any damage to your phone or loss of data that may result from its use.

CANCEL CONTINUE

10. Touch **Continue** to install the app or **Cancel** to stop the installation.

Figure 136 Accept Installation Screen



- 11.To confirm installation and accept what the application affects, touch Install otherwise touch Cancel.
- 12. Touch **Open** to open the application or **Done** to exit the installation process. The application appears in the App list.

Installing Applications Using the Android Debug Bridge

Use ADB commands to install application onto the device.



CAUTION: When connecting the device to a host computer and mounting its microSD card, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.

Ensure that the ADB drivers are installed on the host computer. See ADB USB Setup.

- 1. Connect the device to a host computer using USB. See USB Communication.
- 2. Swipe down from the Status bar to open the Quick Access panel and then touch 🌣.
- Touch System > Developer options.
- 4. Slide the switch to the **ON** position.
- Touch USB Debugging. A check appears in the check box. The Allow USB debugging? dialog box appears.
- 6. Touch OK.
- 7. On the host computer, open a command prompt window and use the adb command: adb install <application>
 - where: <application> = the path and filename of the apk file.
- 8. Disconnect the device from the host computer. See USB Communication.

Installing Applications Using a microSD Card



CAUTION: When connecting the device to a host computer and mounting its microSD card, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.

- 1. Connect the device to a host computer using USB. See USB Communication.
- 2. Copy the application APK file from the host computer to the microSD card.
- 3. Remove the microSD card from the host computer.
- 4. Press and hold the Power button on the device until the menu appears.
- 5. Touch Power off.
- 6. Press the two battery latches in.
- 7. Lift the battery from the device.
- 8. Lift the access door.
- 9. Insert the microSD card.
- 10. Replace the access door.
- 11. Insert the battery, bottom first, into the battery compartment in the back of the device.
- 12. Press the battery down until the battery release latches snap into place.
- 13. Replace the hand strap, if required.
- 14. Press and hold the Power button to turn on the device.
- 15. Swipe the screen up and select \bigcirc to view files on the microSD card.
- 16. Touch \equiv > **SD** card.
- 17.Locate the application .apk file.
- 18. Touch the application file.


Figure 137 Install App Permission Dialog Box

Your phone and personal data are more vulnerable to attack by unknown apps. By installing this app, you agree that you are responsible for any damage to your phone or loss of data that may result from its use.

CANCEL CONTINUE

19. Touch **Continue**. to install the app or **Cancel** to stop the installation.

Figure 138 Accept Installation Screen

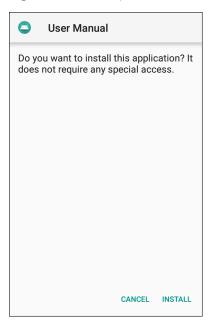

- 20. To confirm installation and accept what the application affects, touch **Install** otherwise touch **Cancel**.
- 21. Touch **Open** to open the application or **Done** to exit the installation process. The application appears in the App list.


Uninstalling an Application

To uninstall an application:

- 1. Swipe down from the Status bar to open the Quick Access panel and then touch ...
- 2. Touch Apps & notifications.
- 3. Touch **See all apps** to view all apps in the list.
- 4. Scroll through the list to the app.

5. Touch the app. The **App info** screen appears.

Figure 139 App Info Screen

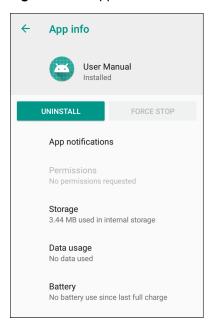

- 6. Touch Uninstall.
- 7. Touch **OK** to confirm.

Performing a System Update

System Update packages can contain either partial or complete updates for the operating system. Zebra distributes the System Update packages on the Zebra Support & Downloads web site. Perform system update using either a microSD card or using ADB.

Downloading the System Update Package

To download the system update package:

- 1. Go to the Zebra Support & Downloads web site, www.zebra.com/support.
- 2. Download the appropriate System Update package to a host computer.

Using microSD Card

- 1. Copy the System Update zip file to the root of the microSD card.
 - Copy the zip file to a microSD card using a host computer (see USB Communication for more information), and then installing the microSD card into the device (see Replacing the microSD Card for more information).
 - Connect the device with a microSD card already installed to the host computer, and copy zip file to the microSD card. See USB Communication for more information. Disconnect the device from the host computer.
- 2. Press and hold the Power button until the menu appears.

- 3. Touch Restart.
- 4. Touch **OK**. The device resets.
- 5. Press and hold the PTT button until the device vibrates. The System Recovery screen appears.
- 6. Press the Volume Up and Volume Down buttons to navigate to apply from sdcard.
- 7. Press the Power button.
- 8. Use the Volume Up and Volume Down buttons to navigate to the System Update file.
- 9. Press the Power button. The System Update installs and then the device returns to the Recovery screen.
- 10. Press the Power button to reboot the device.



NOTE: If installing GMS software on a device that had Non-GMS software or Non-GMS software on a device that had GMS software, perform a Factory or Enterprise reset (retains enterprise data).

Using ADB

To update the system using ADB:

- Connect the device to the Rugged Charge/USB cable or insert the device into the 1-Slot USB/Charge Only Cradle.
- Connect the cable or cradle to the host computer.
- 3. On the device, swipe down from the Status bar to open the Quick Access panel and then touch ...
- Touch System > Developer options.
- Slide the switch to the ON position.
- 6. Touch **USB Debugging**. A check appears in the check box. The **Allow USB debugging?** dialog box appears.
- 7. Touch OK.
- 8. On the host computer, open a command prompt window and use the adb command:

adb devices

The following displays:

List of devices attached

XXXXXXXXXXXXX device (where XXXXXXXXXXXXXX is the device number).



NOTE: If device number does not appear, ensure that ADB drivers are installed properly.

9. Type:

adb reboot recovery

- 10. Press Enter. The System Recovery screen appears.
- 11. Press the Volume Up and Volume Down buttons to navigate to apply from adb.
- 12. On the host computer command prompt window type:

adb sideload <file>

where: <file> = the path and filename of the zip file.

- 13. Press Enter. The System Update installs (progress appears as percentage in the Command Prompt window) and then the Recovery screen appears.
- 14. Press the Power button to reboot the device.



NOTE: If installing GMS software on a device that had Non-GMS software or Non-GMS software on a device that had GMS software, perform a Factory or Enterprise reset (retains enterprise data).

Verify System Update Installation

To check that the system update installed properly:

- On the device, swipe down from the Status bar to open the Quick Access panel and then touch .
- 2. Touch System > About phone.
- 3. Scroll down to Build number.
- 4. Ensure that the build number matches the new system update package file number.

Performing an Enterprise Reset

An Enterprise Reset erases all user data in the /data partition, including data in the primary storage locations (/sdcard and emulated storage).

Before performing an Enterprise Reset, provision all necessary configuration files and restore after the reset.

Perform Enterprise Reset using either a microSD card or using ADB.

Downloading the Enterprise Reset Package

To download the system update package:

- 1. Go to the Zebra Support & Downloads web site, www.zebra.com/support.
- 2. Download the Enterprise Reset file to a host computer.

Using microSD Card

- 1. Copy the Enterprise Reset zip file to the root of the microSD card.
 - Copy the zip file to a microSD card using a host computer (see USB Communication for more information) and then installing the microSD card into the device (see Replacing the microSD Card for more information).
 - Connect the device with a microSD card already installed to the host computer and copy zip file to the microSD card. See USB Communication for more information. Disconnect the device from the host computer.
- 2. Press and hold the Power button until the menu appears.
- 3. Touch Reboot.
- 4. Touch OK. The device resets.
- 5. Press and hold the PTT button until the device vibrates. The System Recovery screen appears.
- 6. Press the Volume Up and Volume Down buttons to navigate to apply from sdcard.
- 7. Press the Power button.
- 8. Use the Volume Up and Volume Down buttons to navigate to the System Update file.
- 9. Press the Power button. The Enterprise Reset occurs and then the device returns to the Recovery screen.
- 10. Press the Power button.

Using ADB

To perform an Enterprise Reset using ADB:

- 1. Connect the device to the Rugged Charge/USB cable or insert the device into the 1-Slot USB/Charge Only Cradle.
- Connect the cable or cradle to the host computer.
- 3. On the device, swipe down from the Status bar to open the Quick Access panel and then touch 🌣.
- 4. Touch **System > Developer options**.

- 5. Slide the switch to the **ON** position.
- Touch USB Debugging. A check appears in the check box. The Allow USB debugging? dialog box appears.
- 7. Touch OK.
- 8. On the host computer, open a command prompt window and type:

adb devices.

The following displays:

List of devices attached

XXXXXXXXXXXXX device (where XXXXXXXXXXXXXX is the device number).



NOTE: If device number does not appear, ensure that ADB drivers are installed properly.

9. Type:

adb reboot recovery

- 10. Press Enter. The System Recovery screen appears.
- 11. Press the Volume Up and Volume Down buttons to navigate to apply from adb.
- 12. Press the Power button.
- 13. On the host computer command prompt window type:

adb sideload <file>

where: <file> = the path and filename of the zip file.

- 14. Press Enter. The Enterprise Reset package installs and then the Recovery screen appears.
- 15. Press the Power button to reboot the device.

Performing a Factory Reset

A Factory Reset erases all data in the /data and /enterprise partitions in internal storage and clears all device settings. A Factory Reset returns the device to the last installed operating system image. To revert to a previous operating system version, re-install that operating system image. See Performing a System Update for more information.

Downloading the Factory Reset Package

To download the Factory Reset package:

- 1. Go to the Zebra Support & Downloads web site, www.zebra.com/support.
- 2. Download the appropriate Factory Reset file to a host computer.

Using microSD Card

- 1. Copy the Factory Reset zip file to the root of the microSD card.
 - Copy the zip file to a microSD card using a host computer (see USB Communication for more information) and then installing the microSD card into the device (see Replacing the microSD Card for more information).
 - Connect the device with a microSD card already installed to the host computer and copy zip file to the microSD card. See USB Communication for more information. Disconnect the device from the host computer.
- 2. Press and hold the Power button until the menu appears.
- 3. Touch Reboot.
- Touch OK. The device resets.
- 5. Press and hold the PTT button until the device vibrates. The System Recovery screen appears.
- 6. Press the Volume Up and Volume Down buttons to navigate to apply from sdcard.
- 7. Press the Power button.
- 8. Use the Volume Up and Volume Down buttons to navigate to the Factory Reset file.
- 9. Press the Power button. The Factory Reset occurs and then the device returns to the Recovery screen.
- 10. Press the Power button.

Using ADB

To perform an Factory Reset using ADB:

- 1. Connect the device to the Rugged Charge/USB cable or insert the device into the 1-Slot USB/Charge Only Cradle.
- 2. Connect the cable or cradle to the host computer.
- 3. On the device, swipe down from the Status bar to open the Quick Access panel and then touch 🌣.
- 4. Touch System > Developer options.
- 5. Slide the switch to the **ON** position.
- 6. Touch **USB Debugging**. A check appears in the check box. The **Allow USB debugging?** dialog box appears.
- 7. Touch OK.
- 8. On the host computer, open a command prompt window and use the adb command:

adb devices.

The following displays:

List of devices attached

XXXXXXXXXXXXX device (where XXXXXXXXXXXXXX is the device number).



NOTE: If device number does not appear, ensure that ADB drivers are installed properly.

9. Type:

adb reboot recovery

- 10. Press Enter. The System Recovery screen appears.
- 11. Press the Volume Up and Volume Down buttons to navigate to **apply from adb**.
- 12. Press the Power button.
- 13. On the host computer command prompt window type:

adb sideload <file>

where: <file> = the path and filename of the zip file.

- 14. Press Enter. The Factory Reset package installs and then the Recovery screen appears.
- 15. Press the Power button to reboot the device.

Storage

The device contains the following types of file storage:

- Random Access Memory (RAM)
- Internal storage
- External storage (microSD card) or
- Enterprise folder.


Random Access Memory

Executing programs use RAM to store data. Data stored in RAM is lost upon a reset. The operating system manages how applications use RAM. It only allows applications and component processes and services to use RAM when required. It may cache recently used processes in RAM, so they restart more quickly when opened again, but it will erase the cache if it needs the RAM for new activities.

1. To view the amount of free and used memory, swipe down from the Status bar to open the Quick Access panel and then touch ...

2. Touch System > Developer options > Memory.

Figure 140 Memory Screen

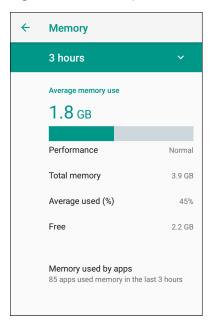

The screen displays the amount of used and free RAM.

- **Performance** Indicates memory performance.
- Total memory Indicates the total amount of RAM available.
- Average used (%) Indicates the average amount of memory (as a percentage) used during the period of time selected (default - 3 hours).
- Free Indicates the total amount of unused RAM.
- Memory used by apps Touch to view RAM usage by individual apps.


Internal Storage

The device has internal storage. The internal storage content can be viewed and files copied to and from when the device is connected to a host computer. Some applications are designed to be stored on the internal storage rather than in internal memory.

To view the used and available space on the internal storage:

- 1. Swipe down from the Status bar to open the Quick Access panel and then touch ...
- 2. Touch Storage.


Figure 141 Storage Screen

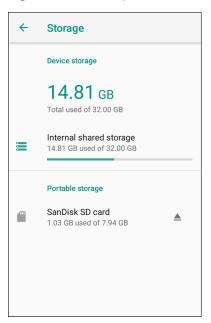

• Internal Storage - Displays the total amount of space on internal storage and amount used.

Touch **Internal shared storage** to display a the amount of storage used by apps, photos, videos, audio and other files.

Figure 142 Internal Storage Screen

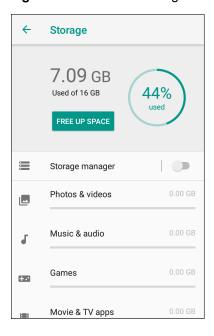


External Storage

The device can have a removable microSD card. The microSD card content can be viewed and files copied to and from when the device is connected to a host computer.

To view the used and available space on the microSD card:

- 1. Swipe down from the Status bar to open the Quick Access panel and then touch ...
- 2. Touch Storage.

Figure 143 External Storage Screen

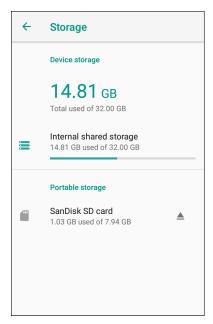

Portable storage displays the total amount of space on the installed microSD card and the amount used.

To unmount the microSD card, touch ...

Touch **SD** cardto view the contents of the card.


Formatting a microSD Card or USB Drive as Portable Storage

To format an installed microSD card or USB drive as portable storage:

1. Touch SD card.


2. Touch : > Storage settings.

Figure 144 SD Card Settings Screen

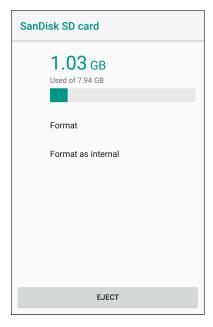

3. Touch Format.

Figure 145 Format Screen

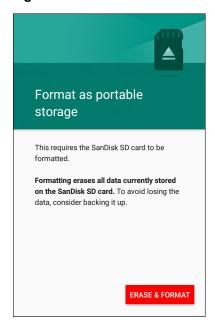


- 4. Touch ERASE & FORMAT.
- 5. Touch DONE.

Formatting a microSD Card as Internal Memory

You can format a microSD card as internal memory to increase the actual amount of the device's internal memory. Once formatted, the microSD card can only be read by this device. To format an installed microSD card as internal memory:


- 1. Touch SD card.
- 2. Touch > Storage settings.

Figure 146 SD Card Settings Screen

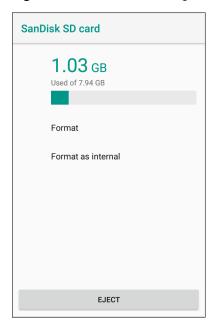

3. Touch Format as internal.

Figure 147 Format Screen

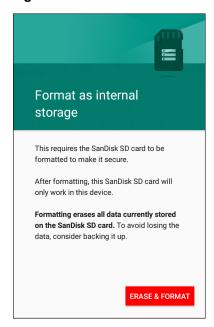

- 4. Touch ERASE & FORMAT.
- 5. Touch DONE.

Enterprise Folder


The Enterprise folder (within internal flash) is a super-persistent storage that is persistent after a reset and an Enterprise Reset. The Enterprise folder is erased during a Factory Reset. The Enterprise folder is used for deployment and device-unique data. The Enterprise folder is approximately 128 MB (formatted). Applications can persist data after an Enterprise Reset by saving data to the enterprise/user folder. The folder is ext4 formatted and is only accessible from a host computer using ADB or from an MDM.

App Management

Apps use two kinds of memory: storage memory and RAM. Apps use storage memory for themselves and any files, settings, and other data they use. They also use RAM when they are running.


- 1. Swipe down from the Status bar to open the Quick Access panel and then touch 🌣.
- 2. Touch Apps & notifications.

Figure 148 Apps & Notifications Screen

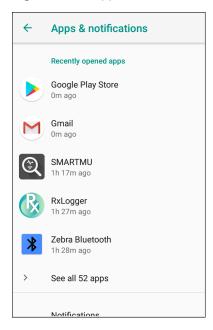

3. Touch **See all XX apps** to view all apps on the device.

Figure 149 App Info Screen

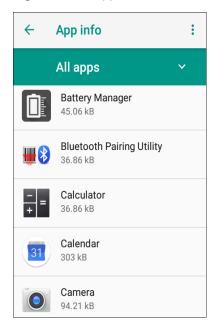

- 4. Touch > Show system to include system processes in the list.
- 5. Touch an app, process, or service in the list to open a screen to view its details. Depending on the item, you can change its settings, permissions, notifications, and force stop or uninstall the item.

Viewing App Details

Apps have different kinds of information and controls, but commonly include:

- Force stop stop an app.
- · Disable disable an app.
- **Uninstall** remove the app and all of its data and settings from the device. See Uninstalling an Application for information about uninstalling apps.
- · Storage lists how much information is stored, and includes a button for clearing it.
- Data usage provides information about data (Wi-Fi) consumed by an app.
- Permissions lists the areas on the device that the app has access to.
- Notifications set the app notification settings.
- Open by default clears If you have configured an app to launch certain file types by default, you can clear that setting here.
- Battery lists the amount of computing power used by the app.
- Memory lists the average app memory usage.
- Advanced
 - Draw over other apps allows an app to display on top of other apps.


Managing Downloads

Files and apps downloaded using the Browser or Email are stored on the microSD card or Internal storage in the Download directory. Use the Downloads app to view, open, or delete downloaded items.

Application Deployment

- 1. Swipe the screen up and touch .
- 2. Touch \equiv > **Downloads**.

Figure 150 Files - Downloads Screen

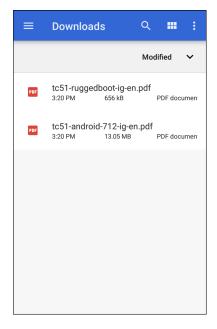

3. Touch and hold an item, select items to delete and touch 🖺 . The item is deleted from the device.

Introduction

This chapter provides technical specification for the device.

TC70x/TC75x

 Table 11
 TC70x/TC75x Technical Specifications

| Item | Description |
|--------------------------|---|
| Physical Characteristics | |
| Dimensions | Height: 161 mm (6.3 in.) |
| | Width: 84 mm (3.3 in.) |
| | Depth: 28 mm (1.1 in.) |
| Weight | 376 g (13.3 oz) |
| Display | 4.7 in. High Definition (1280 x 720); exceptionally bright image; optically bonded to touch panel with Gorilla Glass ™ protection |
| Touch Panel | Capacitive touch |
| Backlight | Light Emitting Diode (LED) backlight |
| Battery Pack | Rechargeable Lithium Ion 3.7V, 4,620 mAh battery |
| Expansion Slot | User accessible microSD up to 32 GB SDHC and up to 128 GB SDXC support |
| Connection Interface | Universal Serial Bus (USB) 2.0 High Speed (host and client) |
| Notification | Audible tone plus multi-color LEDs, vibration |
| Voice and Audio | Three microphone support with noise cancellation; vibrate alert; speaker; Bluetooth wireless headset support. High quality speaker phone with up to 108 db SPL volume; PTT headset support; Cellular circuit switch voice; HD Voice |
| Performance Characteris | stics |
| CPU | 1.8 GHz hex core 64 bit processor (Snapdragon 650/Android-M) |
| Operating System | Android 8.1 Nougat |
| Memory | 2 GB RAM/16 GB Flash |
| Output Power | USB - 5 VDC @ 500 mA max |

 Table 11
 TC70x/TC75x Technical Specifications (Continued)

| Item | Description |
|-------------------------------|---|
| User Environment | |
| Operating Temperature | -20°C to 50°C (-4°F to 122°F) |
| Storage Temperature | -40°C to 70°C (-40°F to 158°F) |
| Charging Temperature | 0° C to 40° C (32°F to 104°F) |
| Humidity | 5 to 95% non-condensing |
| Drop Specification | 8 ft./2.4 m to concrete at room temperature; 6 ft./1.8 m over the operating temperature range |
| Tumble | 2,000 3.2 ft./1.0 m tumbles; meets and exceeds IEC tumble specifications |
| Electrostatic Discharge (ESD) | +/-15kVdc air discharge, +/-8kVdc direct discharge, +/-8kVdc indirect discharge |
| Sealing | IP67 per applicable IEC sealing specifications |
| Vibration | 4 g's PK Sine (5 Hz to 2 kHz); 0.04g2/Hz Random (20 Hz to 2 kHz); 60 minute duration per axis, 3 axis |
| Thermal Shock | -40° C to 70° C (-40° F to 158° F) rapid transition |
| Interactive Sensor Techno | logy (IST) |
| Motion Sensor | 3-axis accelerometer provides motion-sensing for dynamic screen orientation and power management |
| Light Sensor | Ambient light sensor to auto adjust display backlight brightness |
| Wireless WAN Data and Vo | pice Communications (TC75x only) |
| Frequency band | Worldwide: LTE: 700,800/850/900/1800/2100/2600 (FDD 28,20,5,8,3,1,7); UMTS/HSPA/HSPA+: 850/900/1900/2100; GSM/GPRS/EDGE: 850/900/1800/1900 Americas: |
| | LTE: 700/850/1900/AWS/2100, (FDD 13,12,17,5,26,2,25,4,1); UMTS/HSPA/HSPA+: 850, 900, AWS, 1900, 2100 GSM/GPRS/EDGE: 850/900/1800/1900; CDMA: 850,1900 (BC0, BC10, BC1) |
| GPS | Integrated, Autonomous, Assisted GPS (A-GPS), Navstar, GLONASS, Beidou, Galileo |
| Wireless LAN Data and Vo | ice Communications |
| Radio | 2x2 MIMO; IEEE [®] 802.11a/b/g/n/ac/d/h/i/r |
| Data Rates Supported | 5GHz: 802.11a/n/c - up to 866.7 Mbps |
| 0 " 0 : | 2.4GHz: 802.11b/g/n - up to 144 Mbps |
| Operating Channels | Channel Rendwidth: 20, 40, 80 MHz |
| | Channel Bandwidth: 20, 40, 80 MHz Actual operating channels/frequencies depend on regulatory rules and certification agency |
| Security | WEP (40 or 104 bit); WPA/WPA2 Personal (TKIP, and AES); WPA/WPA2 Enterprise (TKIP and AES) — EAP-TTLS (PAP, MSCHAP, MSCHAPv2), EAP-TLS, PEAPv0-MSCHAPv2, PEAPv1-EAP-GTC, EAP Fast3 and LEAP |

 Table 11
 TC70x/TC75x Technical Specifications (Continued)

| Item | Description | | |
|---|---|--|--|
| Voice Communications | Wi-Fi Multimedia (WMM), Soft AP, MIMO with 2 Spatial Streams, 256 QAM Modulation on 5G GHz radio; Maximum Ratio Combining (MRC), Tx/Rx Low-Density Parity Check (LDPC), Transmit Beamforming (TxBF) and Beamformee (BFee) capability, Full IEEE 802.11 a/b/g/n legacy compatibility | | |
| Wireless PAN Data and Void | ce Communications | | |
| Bluetooth | Bluetooth v4.1 Low Energy | | |
| Data Capture Specifications | 3 | | |
| 2D Imager | SE4750-SR – 1D and 2D bar codes. | | |
| Camera | Rear: 13 Mega pixel auto focus with flash | | |
| | Front: 1.3 Mega pixel fixed focus | | |
| Near Field Communications (NFC) | ISO 14443 Type A ad B, FeliCa, and ISO 15963 cards. P2P mode and Card Emulation via UICC and Host. | | |
| Communication and Messa | ging | | |
| Workforce Connect PTT Express (included) provides instant push-to-talk (PTT) small group communications across Wi-Fi networks. Workforce Connect PTT Pro (supported) provides a scalable network agnostic push-to-talk solution which also includes messaging, location services and two-way radio integration. Workforce Connect Voice client (supported) enables the device to function as a full featured mobile telephone with multi-line capability across Wi-Fi networks. | | | |
| 2D Imager Engine (SE4750- | 2D Imager Engine (SE4750-SR) Specifications | | |
| Field of View | Horizontal - 48.0° | | |
| | Vertical - 36.7° | | |
| Image Resolution | 1280 horizontal X 960 vertical pixels | | |
| Roll | 360° | | |
| Pitch Angle | +/- 60° from normal | | |
| Skew Tolerance | +/- 60° from normal | | |
| Ambient Light | Sunlight: 10,000 ft. candles (107,639 lux) | | |
| Focal Distance | From front of engine: 17.7 cm (7.0 in.) | | |
| Laser Aiming Element | Visible Laser Diode (VLD): 655 nm +/- 10 nm | | |
| | Central Dot Optical Power: 0.6 mW (typical) | | |
| | Pattern Angle: 48.0° horizontal, 38.0° vertical | | |
| Illumination System | LEDs: Warm white LED | | |
| | Pattern Angle: 80° at 505 intensity | | |

 Table 12
 Data Capture Supported Symbologies

| Item | Description |
|--------------|---|
| 1D Bar Codes | Code 128, EAN-8, EAN-13, GS1 DataBar Expanded, GS1 128, GS1 DataBar Coupon, UPCA, Interleaved 2 of 5, UPC Coupon Code |
| 2D Bar Codes | PDF-417, QR Code |

SE4750-SR Decode Distances

The table below lists the typical distances for selected bar code densities. The minimum element width (or "symbol density") is the width in mils of the narrowest element (bar or space) in the symbol.

 Table 13
 SE4750-SR Decode Distances

| Symbol Dansity/ Bar Code Type | Typical Working Ranges | |
|-------------------------------------|--|-----------------------|
| Symbol Density/ Bar Code Type | Near | Far |
| 3 mil Code 39 | 4.1 in. | 4.9 in. |
| | 10.41 cm | 12.45 cm |
| 5.0 mil Code 128 | 3.5 in. | 6.8 in. |
| | 8.89 cm | 17.27 cm |
| 5 mil PDF417 | 4.4 in. | 6.3 in. |
| | 11.18 cm | 16.00 cm |
| 6.67 mil PDF417 | 3.2 in. | 8.1 in. |
| | 8.13 cm | 20.57 cm |
| 10 mil Data Matrix | 3.3 in. | 8.5 in. |
| | 8.38 cm | 21.59 cm |
| 100% UPCA | 2.0 in. | 18.0 in. |
| | 5.08 cm | 45.72 cm |
| 15 mil Code 128 | 2.6 in. | 19.8 in. |
| | 6.06 cm | 50.29 cm |
| 20 mil Code 39 | 1.8 in. | 27.0 in. |
| | 4.57 cm | 68.58 cm |
| Note: Photographic quality bar code | e at 18° tilt pitch angle under 30 fcd | ambient illumination. |

I/O Connector Pin-Outs

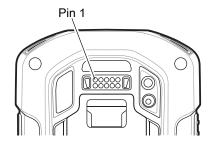


Figure 151 I/O Connector

 Table 14
 I/O Connector Pin-Outs

| Pin | Signal | Description |
|-----|--------------|--------------------------------|
| 1 | GND | Power/signal ground. |
| 2 | RXD_MIC | UART RXD + Headset microphone. |
| 3 | PWR_IN_CON | External 5.4 VDC power input. |
| 4 | TRIG_PTT | Trigger or PTT input. |
| 5 | GND | Power/signal ground. |
| 6 | USB-OTG_ID | USB OTG ID pin. |
| 7 | TXD_EAR | UART TXD, Headset ear. |
| 8 | USB_OTG_VBUS | USB VBUS |
| 9 | USB_OTG_DP | USB DP |
| 10 | USB_OTG_DM | USB DM |

2-Slot Charge Only Cradle Technical Specifications

 Table 15
 2-Slot Charge Only Cradle Technical Specifications

| Item | Description |
|-------------------------|---|
| Dimensions | Height: 10.6 cm (4.17 in.) |
| | Width: 19.56 cm (7.70 in.) |
| | Depth: 13.25 cm (5.22 in.) |
| Weight | 748 g (26.4 oz.) |
| Input Voltage | 12 VDC |
| Power Consumption | 30 watts |
| Operating Temperature | 0 °C to 50 °C (32 °F to 122 °F) |
| Storage Temperature | -40 °C to 70 °C (-40 °F to 158 °F) |
| Charging Temperature | 0 °C to 40 °C (32 °F to 104 °F) |
| Humidity | 5% to 95% non-condensing |
| Drop | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature. |
| Electrostatic Discharge | +/- 20kV air |
| (ESD) | +/- 10 kV contact |
| | +/- 10 kV indirect discharge |

2-Slot USB/Ethernet Cradle Technical Specifications

 Table 16
 2-Slot USB/Ethernet Cradle Technical Specifications

| Item | Description |
|-------------------------|---|
| Dimensions | Height: 20 cm (7.87 in.) |
| | Width: 19.56 cm (7.70 in.) |
| | Depth: 13.25 cm (5.22 in.) |
| Weight | 870 g (30.7 oz.) |
| Input Voltage | 12 VDC |
| Power Consumption | 30 watts |
| Operating Temperature | 0 °C to 50 °C (32 °F to 122 °F) |
| Storage Temperature | -40 °C to 70 °C (-40 °F to 158 °F) |
| Charging Temperature | 0 °C to 40 °C (32 °F to 104 °F) |
| Humidity | 5% to 95% non-condensing |
| Drop | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature. |
| Electrostatic Discharge | +/- 20kV air |
| (ESD) | +/- 10kV contact |
| | +/- 10kV indirect discharge |

5-Slot Charge Only Cradle Technical Specifications

 Table 17
 5-Slot Charge Only Cradle Technical Specifications

| Item | Description |
|-------------------------|---|
| Dimensions | Height: 90.1 mm (3.5 in.) |
| | Width: 449.6 mm (17.7 in.) |
| | Depth: 120.3 mm (4.7 in.) |
| Weight | 1.31 kg (2.89 lbs.) |
| Input Voltage | 12 VDC |
| Power Consumption | 65 watts |
| | 90 watts with 4–Slot Battery Charger installed. |
| Operating Temperature | 0 °C to 50 °C (32 °F to 122 °F) |
| Storage Temperature | -40 °C to 70 °C (-40 °F to 158 °F) |
| Charging Temperature | 0 °C to 40 °C (32 °F to 104 °F) |
| Humidity | 0% to 95% non-condensing |
| Drop | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature. |
| Electrostatic Discharge | +/- 20kV air |
| (ESD) | +/- 10kV contact |
| | +/- 10kV indirect discharge |

5-Slot Ethernet Cradle Technical Specifications

 Table 18
 5-Slot Ethernet Cradle Technical Specifications

| Item | Description |
|-------------------------|---|
| Dimensions | Height: 21.7 cm (8.54 in.) |
| | Width: 48.9 cm (19.25 in.) |
| | Depth: 13.2 cm (5.20 in.) |
| Weight | 2.25 kg (4.96 lbs) |
| Input Voltage | 12 VDC |
| Power Consumption | 65 watts |
| | 90 watts with 4-Slot Battery Charger installed. |
| Operating Temperature | 0 °C to 50 °C (32 °F to 122 °F) |
| Storage Temperature | -40 °C to 70 °C (-40 °F to 158 °F) |
| Charging Temperature | 0 °C to 40 °C (32 °F to 104 °F) |
| Humidity | 5% to 95% non-condensing |
| Drop | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature. |
| Electrostatic Discharge | +/- 20kV air |
| (ESD) | +/- 10kV contact |
| | +/- 10kV indirect discharge |

4-Slot Battery Charger Technical Specifications

 Table 19
 4–Slot Battery Charger Technical Specifications

| Item | Description |
|-------------------------|---|
| Dimensions | Height: 4.32 cm (1.7 in.) |
| | Width: 20.96 cm (8.5 in.) |
| | Depth: 15.24 cm (6.0 in.) |
| Weight | 386 g (13.6 oz.) |
| Input Voltage | 12 VDC |
| Power Consumption | 40 watts |
| Operating Temperature | 0 °C to 40 °C (32 °F to 104 °F) |
| Storage Temperature | -40 °C to 70 °C (-40 °F to 158 °F) |
| Charging Temperature | 0 °C to 40 °C (32 °F to 104 °F) |
| Humidity | 5% to 95% non-condensing |
| Drop | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature. |
| Electrostatic Discharge | +/- 20kV air |
| (ESD) | +/- 10kV contact |
| | +/- 10kV indirect discharge |

Charge Only Vehicle Cradle Technical Specifications

 Table 20
 Charge Only Vehicle Cradle Technical Specifications

| Item | Description |
|-------------------------|---|
| Dimensions | Height: 12.3 cm (4.84 in.) |
| | Width: 11.0 cm (4.33 in.) |
| | Depth: 8.85 cm (3.48 in.) |
| Weight | 320 g (11.3 oz.) |
| Input Voltage | 12/24 VDC |
| Power Consumption | 40 watts |
| Operating Temperature | -40 °C to 85 °C (-40 °F to 185 °F) |
| Storage Temperature | -40 °C to 85 °C (-40 °F to 185 °F) |
| Charging Temperature | 0 °C to 40 °C (32 °F to 104 °F) |
| Humidity | 5% to 95% non-condensing |
| Drop | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature. |
| Electrostatic Discharge | +/- 20kV air |
| (ESD) | +/- 10kV contact |

Trigger Handle Technical Specifications

 Table 21
 Trigger Handle Technical Specifications

| Item | Description | |
|-------------------------|--|--|
| Dimensions | Height: 11.2 cm (4.41 in.) | |
| | Width: 6.03 cm (2.37 in.) | |
| | Depth: 13.4 cm (5.28 in.) | |
| Weight | 110 g (3.8 oz.) | |
| Operating Temperature | -20 °C to 50 °C (-4 °F to 122 °F) | |
| Storage Temperature | -40 °C to 70 °C (-40 °F to 158 °F) | |
| Humidity | 10% to 95% non-condensing | |
| Drop | 1.8 m (6 feet) drops to concrete over temperature range. | |
| Electrostatic Discharge | +/- 20kV air | |
| (ESD) | +/- 10kV contact | |

Charging Cable Cup Technical Specifications

 Table 22
 Charging Cable Cup Technical Specifications

| Item | Description | |
|-------------------------|------------------------------------|--|
| Length | 25.4 cm (10.0 in.) | |
| Input Voltage | 5.4 VDC | |
| Operating Temperature | -20 °C to 50 °C (-4 °F to 122 °F) | |
| Storage Temperature | -40 °C to 70 °C (-40 °F to 158 °F) | |
| Humidity | 10% to 95% non-condensing | |
| Electrostatic Discharge | +/- 20kV air | |
| (ESD) | +/- 10kV contact | |

Snap-On USB Cable Technical Specifications

 Table 23
 Snap-On USB Cable Technical Specifications

| Item | Description | |
|-------------------------|------------------------------------|--|
| Length | 1.5 cm (60.0 in.) | |
| Input Voltage | 5.4 VDC (external power supply) | |
| Operating Temperature | -20 °C to 50 °C (-4 °F to 122 °F) | |
| Storage Temperature | -40 °C to 70 °C (-40 °F to 158 °F) | |
| Humidity | 10% to 95% non-condensing | |
| Electrostatic Discharge | +/- 20kV air | |
| (ESD) | +/- 10kV contact | |

Snap-On Serial Cable Technical Specifications

 Table 24
 Snap-On USB Cable Technical Specifications

| Item | Description | |
|-------------------------|------------------------------------|--|
| Length | 1 m (39.0 in.) | |
| Input Voltage | 5.4 VDC | |
| Operating Temperature | -20 °C to 50 °C (-4 °F to 122 °F) | |
| Storage Temperature | -40 °C to 70 °C (-40 °F to 158 °F) | |
| Humidity | 10% to 95% non-condensing | |
| Electrostatic Discharge | +/- 20kV air | |
| (ESD) | +/- 10kV contact | |

DEX Cable Technical Specifications

 Table 25
 DEX Cable Technical Specifications

| Item | Description | |
|-------------------------|------------------------------------|--|
| Length | 1.5 cm (60.0 in.) | |
| Operating Temperature | -20 °C to 50 °C (-4 °F to 122 °F) | |
| Storage Temperature | -40 °C to 70 °C (-40 °F to 158 °F) | |
| Humidity | 10% to 95% non-condensing | |
| Electrostatic Discharge | +/- 20kV air | |
| (ESD) | +/- 10kV contact | |

Introduction

This chapter includes instructions on cleaning and storing the device, and provides troubleshooting solutions for potential problems during operation.

Maintaining the Device

For trouble-free service, observe the following tips when using the device:

- To avoid scratching the screen, use the supplied stylus or plastic-tipped pens intended for use with a touch-sensitive screen. Never use an actual pen or pencil or other sharp object on the surface of the device screen.
- The touch-sensitive screen of the device is glass. Do not drop the device or subject it to strong impact.
- Protect the device from temperature extremes. Do not leave it on the dashboard of a car on a hot day, and keep it away from heat sources.
- Do not store the device in any location that is dusty, damp, or wet.
- Use a soft lens cloth to clean the device. If the surface of the device screen becomes soiled, clean it with a soft cloth moistened with an approved cleanser. For a list of approved cleansers, see Approved Cleanser Active Ingredients.
- Periodically replace the rechargeable battery to ensure maximum battery life and product performance. Battery life depends on individual usage patterns.

Battery Safety Guidelines

- The area in which the units are charged should be clear of debris and combustible materials or chemicals. Particular care should be taken where the device is charged in a non commercial environment.
- Follow battery usage, storage, and charging guidelines found in this guide.
- Improper battery use may result in a fire, explosion, or other hazard.
- To charge the mobile device battery, the ambient battery and charger temperatures must be between +32°F and +104°F (0°C and +40°C).
- Do not use incompatible batteries and chargers, including non-Zebra batteries and chargers. Use of an incompatible battery or charger may present a risk of fire, explosion, leakage, or other hazard. If you have any questions about the compatibility of a battery or a charger, contact the Global Customer Support Center.
- For devices that utilize a USB port as a charging source, the device shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not disassemble or open, crush, bend or deform, puncture, or shred the battery.

- Severe impact from dropping any battery-operated device on a hard surface could cause the battery to overheat.
- Do not short circuit a battery or allow metallic or conductive objects to contact the battery terminals.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, or expose to fire, explosion, or other hazard.
- Do not leave or store the equipment in or near areas that might get very hot, such as in a parked vehicle or near a radiator or other heat source. Do not place battery into a microwave oven or dryer.
- · Battery usage by children should be supervised.
- · Please follow local regulations to properly dispose of used re-chargeable batteries.
- · Do not dispose of batteries in fire.
- In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with water for 15 minutes, and seek medical advice.
- If you suspect damage to your equipment or battery, contact Customer Support to arrange for inspection.

Cleaning Instructions



CAUTION: Always wear eye protection.

Read warning label on alcohol product before using.

If you have to use any other solution for medical reasons please contact the Global Customer Support Center for more information.



WARNING: Avoid exposing this product to contact with hot oil or other flammable liquids. If such exposure occurs, unplug the device and clean the product immediately in accordance with these guidelines.

Approved Cleanser Active Ingredients

100% of the active ingredients in any cleaner must consist of one or some combination of the following: isopropyl alcohol, bleach/sodium hypochlorite¹ (see important note below), hydrogen peroxide, ammonium chloride, or mild dish soap.



IMPORTANT: Use pre-moistened wipes and do not allow liquid cleaner to pool.

¹When using sodium hypochlorite (bleach) based products, always follow the manufacturer's recommended instructions: use gloves during application and remove the residue afterwards with a damp alcohol cloth or a cotton swab to avoid prolonged skin contact while handling the device.

Due to the powerful oxidizing nature of sodium hypochlorite, the metal surfaces on the device are prone to oxidation (corrosion) when exposed to this chemical in the liquid form (including wipes). In the event that these type of disinfectants come in contact with metal on the device, prompt removal with an alcohol-dampened cloth or cotton swab after the cleaning step is critical.

Harmful Ingredients

The following chemicals are known to damage the plastics on the device and should not come in contact with the device: acetone; ketones; ethers; aromatic and chlorinated hydrocarbons; aqueous or alcoholic alkaline solutions; ethanolamine; toluene; trichloroethylene; benzene; carbolic acid and TB-lysoform.

Many vinyl gloves contain phthalate additives, which are often not recommended for medical use and are known to be harmful to the housing of the device.

Device Cleaning Instructions

Do not apply liquid directly to the device. Dampen a soft cloth or use pre-moistened wipes. Do not wrap the device in the cloth or wipe, instead gently wipe the unit. Be careful not to let liquid pool around the display window or other places. Before use, allow the unit to air dry.



NOTE: For thorough cleaning, it is recommended to first remove all accessory attachments, such as hand straps or cradle cups, from the mobile device and to clean them separately.

Special Cleaning Notes

The device should not be handled while wearing vinyl gloves containing phthalates, or before hands are washed to remove contaminant residue after gloves are removed.

If products containing any of the harmful ingredients listed above are used prior to handling the device, such as hand sanitizer that contain ethanolamine, hands must be completely dry before handling the device to prevent damage to the device.



IMPORTANT: If the battery connectors are exposed to cleaning agents, thoroughly wipe off as much of the chemical as possible and clean with an alcohol wipe. It is also recommended to install the battery in the terminal prior to cleaning and disinfecting the device to help minimize buildup on the connectors.

When using cleaning/disinfectant agents on the device, it is important to follow the directions prescribed by the cleaning/disinfectant agent manufacturer.

Cleaning Materials Required

- Alcohol wipes
- · Lens tissue
- Cotton-tipped applicators
- Isopropyl alcohol
- Can of compressed air with a tube.

Cleaning Frequency

The cleaning frequency is at the customer's discretion due to the varied environments in which the mobile devices are used and may be cleaned as frequently as required. When dirt is visible, it is recommended to clean the mobile device to avoid build up of particles which make the device more difficult to clean later on.

For consistency and optimum image capture, it is recommended to clean the camera window periodically especially when used in environments prone to dirt or dust.

Cleaning the Device

Housing

Thoroughly wipe the housing, including all buttons and triggers, using an approved alcohol wipe.

Display

The display can be wiped down with an approved alcohol wipe, but care should be taken not to allow any pooling of liquid around the edges of the display. Immediately dry the display with a soft, non-abrasive cloth to prevent streaking.

Camera and Exit Window

Wipe the camera and exit window periodically with a lens tissue or other material suitable for cleaning optical material such as eyeglasses.

Cleaning Battery Connectors

To clean the battery connectors:

- 1. Remove the main battery from the mobile computer.
- 2. Dip the cotton portion of the cotton-tipped applicator in isopropyl alcohol.
- 3. To remove any grease or dirt, rub the cotton portion of the cotton-tipped applicator back-and-forth across the connectors on the battery and terminal sides. Do not leave any cotton residue on the connectors.
- 4. Repeat at least three times.
- Use a dry cotton-tipped applicator and repeat steps 3 and 4. Do not leave any cotton residue on the connectors.
- 6. Inspect the area for any grease or dirt and repeat the cleaning process if necessary.



CAUTION: After cleaning the battery connectors with bleach-based chemicals, follow the Battery Connector Cleaning instructions to remove bleach from the connectors.

Cleaning Cradle Connectors

To clean the connectors on a cradle:

- 1. Remove the DC power cable from the cradle.
- 2. Dip the cotton portion of the cotton-tipped applicator in isopropyl alcohol.
- Rub the cotton portion of the cotton-tipped applicator along the pins of the connector. Slowly move the applicator back-and-forth from one side of the connector to the other. Do not leave any cotton residue on the connector.
- 4. All sides of the connector should also be rubbed with the cotton-tipped applicator.
- 5. Remove any lint left by the cotton-tipped applicator.
- 6. If grease and other dirt can be found on other areas of the cradle, use a lint-free cloth and alcohol to remove.
- 7. Allow at least 10 to 30 minutes (depending on ambient temperature and humidity) for the alcohol to air dry before applying power to cradle.
 - If the temperature is low and humidity is high, longer drying time is required. Warm temperature and low humidity requires less drying time.



CAUTION: After cleaning the cradle connectors with bleach-based chemicals, follow the Cleaning Cradle Connectors in-

structions to remove bleach from the connectors.

Troubleshooting

TC70x/TC75x

The following tables provides typical problems that might arise and the solution for correcting the problem.

 Table 26
 Troubleshooting the TC70x/TC75x

| Problem | Cause | Solution |
|--|---|---|
| When pressing the power button the device does not turn on. | Battery not charged. | Charge or replace the battery in the device. |
| | Battery not installed properly. | Install the battery properly. |
| OII. | System crash. | Perform a reset. |
| When pressing the power button the device does not turn on but two LEDs blink. | Battery charge is at a level where data is maintained but battery should be re-charged. | Charge or replace the battery in the device. |
| Battery did not charge. | Battery failed. | Replace battery. If the device still does not operate, perform a reset. |
| | Device removed from cradle while battery was charging. | Insert device in cradle. The 4,620 mAh battery fully charges in less than five hours at room temperature. |
| | Extreme battery temperature. | Battery does not charge if ambient temperature is below 0°C (32°F) or above 40°C (104°F). |
| Cannot see characters on display. | Device not powered on. | Press the Power button. |
| During data communication with a host computer, no data transmitted, or transmitted data was incomplete. | Device removed from cradle or disconnected from host computer during communication. | Replace the device in the cradle, or reattach the communication cable and re-transmit. |
| | Incorrect cable configuration. | See the system administrator. |
| | Communication software was incorrectly installed or configured. | Perform setup. |
| During data | Wi-Fi radio is not on. | Turn on the Wi-Fi radio. |
| communication over Wi-Fi, no data transmitted, or transmitted data was incomplete. | You moved out of range of an access point. | Move closer to an access point. |

 Table 26
 Troubleshooting the TC70x/TC75x (Continued)

| Problem | Cause | Solution |
|--|---|--|
| During data communication over WAN, no data transmitted, or transmitted data was | You are in an area of poor cellular service. | Move into an area that has better service. |
| | APN is not set up correctly. | See system administrator for APN setup information. |
| incomplete. | SIM card not installed properly. | Remove and re-install the SIM card. |
| | Data plan not activated. | Contact your service provider and ensure that your data plan is enable. |
| During data communication over | Bluetooth radio is not on. | Turn on the Bluetooth radio. |
| Bluetooth, no data transmitted, or transmitted data was incomplete. | You moved out of range of another Bluetooth device. | Move within 10 meters (32.8 feet) of the other device. |
| No sound. | Volume setting is low or turned off. | Adjust the volume. |
| Device shuts off. | Device is inactive. | The display turns off after a period of inactivity. Set this period to 15 seconds, 30 seconds, 1, 2, 5, 10 or 30 minutes. |
| | Battery is depleted. | Replace the battery. |
| Tapping the window buttons or icons does not activate the corresponding feature. | The device is not responding. | Reset the device. |
| A message appears stating that the device memory is full. | Too many files stored on the device. | Delete unused memos and records. If necessary, save these records on the host computer (or use an SD card for additional memory). |
| | Too many applications installed on the device. | Remove user-installed applications on the device to recover memory. Select * > Storage > FREE UP SPACE > REVIEW RECENT ITEMS. Select the unused program(s) and tap FREE UP. |

 Table 26
 Troubleshooting the TC70x/TC75x (Continued)

| Problem | Cause | Solution |
|---|---|--|
| The device does not decode with reading bar code. | Scanning application is not loaded. | Load a scanning application on the device or enable DataWedge. See the system administrator. |
| | Unreadable bar code. | Ensure the symbol is not defaced. |
| | Distance between exit window and bar code is incorrect. | Place the device within proper scanning range. |
| | Device is not programmed for the bar code. | Program the device to accept the type of bar code being scanned. Refer to the EMDK or DataWedge application. |
| | Device is not programmed to generate a beep. | If the device does not beep on a good decode, set the application to generate a beep on good decode. |
| | Battery is low. | If the scanner stops emitting a laser beam upon a trigger press, check the battery level. When the battery is low, the scanner shuts off before the device low battery condition notification. Note: If the scanner is still not reading symbols, contact the distributor or the Global Customer Support Center. |
| Device cannot find any Bluetooth devices nearby. | Too far from other Bluetooth devices. | Move closer to the other Bluetooth device(s), within a range of 10 meters (32.8 feet). |
| | The Bluetooth device(s) nearby are not turned on. | Turn on the Bluetooth device(s) to find. |
| | The Bluetooth device(s) are not in discoverable mode. | Set the Bluetooth device(s) to discoverable mode. If needed, refer to the device's user documentation for help. |
| Cannot unlock device. | User enters incorrect password. | If the user enters an incorrect password eight times, the user is requested to enter a code before trying again. |
| | | If the user forgot the password, contact system administrator. |

2-Slot Charge Only Cradle

 Table 27
 Troubleshooting the 2-Slot Charge only Cradle

| Symptom | Possible Cause | Action |
|---|---|--|
| LEDs do not light when device or spare battery is inserted. | Cradle is not receiving power. | Ensure the power cable is connected securely to both the cradle and to AC power. |
| | Device is not seated firmly in the cradle. | Remove and re-insert the device into the cradle, ensuring it is firmly seated. |
| | Spare battery is not seated firmly in the cradle. | Remove and re-insert the spare battery into the charging slot, ensuring it is firmly seated. |

 Table 27
 Troubleshooting the 2-Slot Charge only Cradle (Continued)

| Symptom | Possible Cause | Action |
|---------------------------------|--|---|
| Device battery is not charging. | Device was removed from cradle or cradle was unplugged from AC power too soon. | Ensure cradle is receiving power. Ensure device is seated correctly. Confirm main battery is charging. The 4,620 mAh battery fully charges in less than five hours. |
| | Battery is faulty. | Verify that other batteries charge properly. If so, replace the faulty battery. |
| | The device is not fully seated in the cradle. | Remove and re-insert the device into the cradle, ensuring it is firmly seated. |
| | Extreme battery temperature. | Battery does not charge if ambient temperature is below 0 °C (32 °F) or above 40 °C (104 °F). |
| Spare battery is not charging. | Battery not fully seated in charging slot. | Remove and re-insert the spare battery in the cradle, ensuring it is firmly seated. The 4,620 mAh battery fully charges in less than five hours. |
| | Battery inserted incorrectly. | Re-insert the battery so the charging contacts on the battery align with the contacts on the cradle. |
| | Battery is faulty. | Verify that other batteries charge properly. If so, replace the faulty battery. |

2-Slot USB/Ethernet Cradle

 Table 28
 Troubleshooting the 2-Slot USB/Ethernet Cradle

| Symptom | Possible Cause | Action |
|---|--|--|
| During communication, no data transmits, or | Device removed from cradle during communications. | Replace device in cradle and retransmit. |
| transmitted data was incomplete. | Incorrect cable configuration. | Ensure that the correct cable configuration. |
| | Device has no active connection. | An icon is visible in the status bar if a connection is currently active. |
| | USB/Ethernet module switch in not in the correct position. | For Ethernet communication, slide the switch to the position. For USB communication, slide the switch to the position. |
| LEDs do not light when device or spare battery is inserted. | Cradle is not receiving power. | Ensure the power cable is connected securely to both the cradle and to AC power. |
| | Device is not seated firmly in the cradle. | Remove and re-insert the device into the cradle, ensuring it is firmly seated. |
| | Spare battery is not seated firmly in the cradle. | Remove and re-insert the spare battery into the charging slot, ensuring it is firmly seated. |

 Table 28
 Troubleshooting the 2-Slot USB/Ethernet Cradle (Continued)

| Symptom | Possible Cause | Action |
|---------------------------------|--|---|
| Device battery is not charging. | Device was removed from cradle or cradle was unplugged from AC power too soon. | Ensure cradle is receiving power. Ensure device is seated correctly. Confirm main battery is charging. The 4,620 mAh battery fully charges in less than five hours. |
| | Battery is faulty. | Verify that other batteries charge properly. If so, replace the faulty battery. |
| | The device is not fully seated in the cradle. | Remove and re-insert the device into the cradle, ensuring it is firmly seated. |
| | Extreme battery temperature. | Battery does not charge if ambient temperature is below 0 °C (32 °F) or above 40 °C (104 °F). |
| Spare battery is not charging. | Battery not fully seated in charging slot. | Remove and re-insert the spare battery in the cradle, ensuring it is firmly seated. The 4,620 mAh battery fully charges in less than five hours. |
| | Battery inserted incorrectly. | Re-insert the battery so the charging contacts on the battery align with the contacts on the cradle. |
| | Battery is faulty. | Verify that other batteries charge properly. If so, replace the faulty battery. |

5-Slot Charge Only Cradle Troubleshooting

 Table 29
 Troubleshooting the 5-Slot Charge Only Cradle

| Problem | Cause | Solution |
|--------------------------|---|--|
| Battery is not charging. | Device removed from the cradle too soon. | Replace the device in the cradle. The battery fully charges in approximately five hours. |
| | Battery is faulty. | Verify that other batteries charge properly. If so, replace the faulty battery. |
| | Device is not inserted correctly in the cradle. | Remove the device and reinsert it correctly. Verify charging is active. Touch 🌣 > System > About phone > Battery Information to view battery status. |
| | Ambient temperature of the cradle is too warm. | Move the cradle to an area where the ambient temperature is between -10 °C (+14 °F) and +60 °C (+140 °F). |

5-Slot Ethernet Cradle Troubleshooting

 Table 30
 Troubleshooting the 5-Slot Ethernet Cradle

| Problem | Cause | Solution |
|--|--|--|
| During communication, no data transmits, or transmitted data was incomplete. | Device removed from cradle during communication s. | Replace device in cradle and retransmit. |
| | Incorrect cable configuration. | Ensure that the correct cable configuration. |
| | Device has no active connection. | An icon is visible in the status bar if a connection is currently active. |
| Battery is not charging. | Device removed from the cradle too soon. | Replace the device in the cradle. The battery fully charges in approximately five hours. |
| | Battery is faulty. | Verify that other batteries charge properly. If so, replace the faulty battery. |
| | Device is not inserted correctly in the cradle. | Remove the device and reinsert it correctly. Verify charging is active. Touch 🌣 > System > About phone > Battery Information to view battery status. |
| | Ambient temperature of the cradle is too warm. | Move the cradle to an area where the ambient temperature is between -10 °C (+14 °F) and +60 °C (+140 °F). |

4-Slot Battery Charger Troubleshooting

 Table 31
 Troubleshooting the 4-Slot Battery Charger

| Problem | Cause | Solution |
|---|--|---|
| Spare Battery Charging LED does not light when spare battery is inserted. | Spare battery is not correctly seated. | Remove and re-insert the spare battery into the charging slot, ensuring it is correctly seated. |

 Table 31
 Troubleshooting the 4-Slot Battery Charger (Continued)

| Problem | Cause | Solution |
|-----------------------------|---|--|
| Spare Battery not charging. | Charger is not receiving power. | Ensure the power cable is connected securely to both the charger and to AC power. |
| | Spare battery is not correctly seated. | Remove and re-insert the battery into the battery adapter, ensuring it is correctly seated. |
| | Battery adapter is not seated properly. | Remove and re-insert the battery adapter into the charger, ensuring it is correctly seated. |
| | Battery was removed from the charger or charger was unplugged from AC power too soon. | Ensure charger is receiving power. Ensure the spare battery is seated correctly. If a battery is fully depleted, it can take up to five hours to fully recharge a Standard Battery and it can take up to eight hours to fully recharge an Extended Life Battery. |
| | Battery is faulty. | Verify that other batteries charge properly. If so, replace the faulty battery. |

Index

| A | configuration and profile file management | |
|---|---|-----|
| advanced data formatting rules | configuring ADF plug-in | |
| approved cleanser | creating a new profile | |
| approved cleanser active ingredients | data capture plus | |
| • | decoders | |
| apps | disabling | |
| RxLogger | enterprise folder | |
| RxLogger Utility | exporting a configuration file | |
| | importing a configuration file | 145 |
| В | input plugins | 104 |
| | intent output | 130 |
| barcode input | intent overview | |
| enabled | introduction | |
| battery safety guidelines192 | IP output | |
| , , , , | keep enabled on suspend | |
| | keystroke output | |
| C | multibarcode params | |
| cleaning | options menu | |
| battery connectors | | |
| camera and exit window | output plug-ins | |
| cradle connectors | plug-ins | |
| | process plug-ins | |
| display | profile configuration | |
| frequency | profile context menu | |
| housing | profile0 | |
| instructions193 | profiles | |
| materials | profiles screen | 105 |
| cleaning instructions194 | programming notes | 147 |
| cradle | reader params | 123 |
| connector cleaning195 | reporting | 148 |
| | scan params | |
| D | scanner selection | |
| U | settings | |
| data capture options13 | simulscan input | |
| data capture plus | UDI params | |
| datawedge | UPC EAN params | |
| advanced data formatting rules | voice input | |
| APIs148 | decoder params | 120 |
| | Codabar | 115 |
| associating applications | | |
| auto import | Code 11 | |
| auto switch to default on event | Code 128 | |
| barcode input111 | Code 39 | |
| basic scanning102 | Code 93 | 117 |

Index

| Composite AB | N | |
|---|------------------------------|------|
| decode lengths | notational conventions | 1.4 |
| Discrete 2 of 5 | notational conventions | |
| GS1 DataBar Limited | | |
| HAN XIN | 0 | |
| Interleaved 2 of 5 | operating system | 13 |
| Matrix 2 of 5 | operating system | 13 |
| MSI | | |
| Trioptic 39 | Р | |
| UK Postal | photo transfer | 101 |
| UPCE0119 | photo transfer | 10 1 |
| UPCE1120 | _ | |
| US Planet | R | |
| decoders | radios | 13 |
| disconnect host computer | RAM | |
| display | reader params | |
| display13 | reset device | |
| | hard reset | |
| F | soft reset | |
| file transfer | RxLogger | |
| Flash | configuration | |
| 1 18311 | configuration file | |
| | disable logging | |
| H | enable logging | |
| hard reset28 | extract log files | |
| harmful ingredients | RxLogger Utility | |
| 1 | S | |
| I | 3 | |
| imager | scan params | 125 |
| ŭ | sensors | 183 |
| N.A. | settings | |
| M | datawedge | |
| maintenance | simulscan input | |
| approved cleanser active ingredients193 | soft reset | |
| battery safety guidelines192 | software version | |
| clean battery connectors | software versions | |
| clean camera and exit window195 | symbologies | 184 |
| clean cradle connectors195 | | |
| clean display | Т | |
| clean housing194 | • | |
| cleaning frequency194 | transferring files using USB | |
| cleaning instructions | troubleshooting | |
| cleaning materials required | TC75x | 196 |
| device cleaning instructions194 | | |
| harmful ingredients193 | U | |
| maintaining the device192 | _ | |
| special cleaning notes | UDI params | |
| memory | UPC EAN params | |
| multibarcode params | USB | 100 |
| | | |

Index

| pice input | |
|----------------|--|
| V | |
| /i-Fi direct | |
| /PS pin entery | |
| PS push button | |

