

**User Manual - TRANSLATION****POLARIS REMOTE****POLARIS Remote KVM Digital****Typ 17-71V2-....****ATEX / IECEx****Zone 1 and Zone 21**

Document no. 11-71V2-7D0014 / 356538

Revision B / Status: May 2019

Reservation: Technical data subject to change without notice. Changes, errors and misprints may not be used as a basis for any claim for damages.

Content	Pages
English	1 - 52

**BARTEC** GmbHMax-Eyth-Straße 16  
97980 Bad Mergentheim  
GERMANYPhone: +49 7931 597-0  
Fax: +49 7931 597-119Support: [support-polaris@bartec.de](mailto:support-polaris@bartec.de)  
Download: <http://automation.bartec.de>  
Internet: [www.bartec.de](http://www.bartec.de)







<b>1.</b>	<b>Basic safety instructions .....</b>	<b>1</b>
1.1	Notes on this manual .....	1
1.1.1	Languages .....	2
1.1.2	Changes in the document.....	2
1.2	Handling the product.....	2
1.3	Intended use .....	2
1.3.1	Exclusive purpose .....	2
1.3.2	Unintended use .....	3
1.4	Duties of the operator.....	3
1.5	Safety information .....	3
1.5.1	General .....	3
1.6	General safety information for operation.....	3
1.6.1	Maintenance .....	3
1.6.2	Servicing.....	4
1.6.3	Inspection .....	4
1.6.4	Repairs .....	4
1.6.5	Commissioning .....	4
1.7	Labelling, test certificate and standards.....	4
1.8	Warranty.....	4
<b>2.</b>	<b>Product description.....</b>	<b>6</b>
2.1	Definition .....	6
2.2	Schematic design.....	7
2.2.1	Standard – Point to Point.....	7
2.2.2	Standard - Point-to-Point with Hand-Held Scanner .....	7
2.2.3	Special Application - Cascade Connection.....	8
<b>3.</b>	<b>Explosion protection and approvals .....</b>	<b>9</b>
<b>4.</b>	<b>Technical data.....</b>	<b>11</b>
4.1	General technical Data.....	11
4.1.1	Characteristics POLARIS Remote KVM Digital 15".....	12
4.1.2	Characteristics POLARIS Remote KVM Digital 15" Sunlight.....	12
4.1.3	Characteristics POLARIS Remote KVM Digital 19.1".....	13
4.1.4	Characteristics POLARIS Remote KVM Digital 17.3".....	13
4.1.5	Characteristics POLARIS Remote KVM Digital 24".....	14
4.2	Keyboard.....	15
4.2.1	Explosion Protection .....	15
4.2.2	General data .....	15
4.2.3	Characteristics of enclosure for mouse and keyboard.....	16
4.3	Finger mouse, Trackball, Touchpad and Joystick.....	16
4.3.1	Explosion protection .....	16
4.3.2	General Data .....	17
4.3.3	Variants .....	17
4.4	Product Labelling .....	18
<b>5.</b>	<b>Transport, Storage, Scope and Assembly .....</b>	<b>19</b>
5.1	Transport.....	19
5.2	Intermediate Storage.....	19
5.3	Scope of delivery.....	19
5.3.1	Accessories optional.....	19
5.4	Assembly.....	20
5.4.1	Installation options .....	20
<b>6.</b>	<b>Installation.....</b>	<b>21</b>
6.1	Requirements.....	21
6.2	Mechanical Installation.....	22
6.2.1	Installation in 2G-/2D-enclosure .....	22
6.2.2	Installation as a System Solution in the Stainless Steel Enclosure "Exclusive II" .....	24
6.2.3	Floor mounting (Stainless steel enclosure "Exklusive II" .....	25
6.2.4	Wall mounting (Stainless steel enclosure "Exklusive II" .....	25
6.2.5	Table mounting swivel/tilt (Stainless steel enclosure "Exclusive II").....	26

6.3	Electrical Installation .....	27
6.3.1	Installation guidelines .....	27
6.4	Terminal compartments .....	28
6.5	PE conductor connection .....	29
6.6	Ex e terminal compartments .....	30
6.6.1	Cable entries .....	30
6.6.2	Supply voltage terminal assignment).....	31
6.6.3	Terminal Assignment for USB .....	31
6.6.4	Terminal assignment LSA-Plus Terminal (X17-1 to X17-8).....	32
6.7	Ex i terminal compartment .....	33
6.7.1	Connection of Ex i keyboard to the POLARIS (optional) .....	33
6.8	Scanner Connection.....	34
6.9	Local Unit .....	35
6.9.1	Technical Data for Local Unit .....	35
6.9.2	STP Cable Connection .....	35
6.9.3	Local Unit Connections.....	35
6.10	Fibre Version.....	36
6.10.1	Connector POLARIS .....	36
6.10.2	Technical Data for Local Unit .....	37
6.10.3	Local Unit Connector .....	37
6.11	EMC (Electromagnetic Compatibility) .....	38
6.11.1	Voltage Supply (AC- and DC-Variants) .....	38
6.11.2	Back-up fuse.....	39
6.11.3	Interference suppression .....	39
6.11.4	Shielding .....	40
6.11.5	Connection of shielding .....	40
6.11.6	Examples of Shielding Connections .....	40
<b>7.</b>	<b>Commissioning.....</b>	<b>42</b>
7.1	Final Inspection .....	42
<b>8.</b>	<b>Operation.....</b>	<b>43</b>
8.1	Commissioning.....	43
8.2	Display Settings .....	43
8.3	Touch Screen.....	43
<b>9.</b>	<b>Faults and troubleshooting .....</b>	<b>44</b>
<b>10.</b>	<b>Maintenance, inspection, repair.....</b>	<b>45</b>
10.1	Maintenance intervals .....	45
10.2	Inspection.....	45
10.3	Maintenance and repair work.....	45
10.3.1	Instructions for Repairs.....	46
<b>11.</b>	<b>Disposal.....</b>	<b>46</b>
<b>12.</b>	<b>Dispatch and packaging instructions.....</b>	<b>46</b>
<b>13.</b>	<b>Accessories, spare parts .....</b>	<b>47</b>
<b>14.</b>	<b>Order numbers.....</b>	<b>48</b>
<b>15.</b>	<b>Additional information .....</b>	<b>49</b>
15.1	Resistance list.....	49
15.2	User Notes .....	50
<b>16.</b>	<b>Declaration of conformity .....</b>	<b>51</b>







# 1. Basic safety instructions

## 1.1 Notes on this manual



### Read carefully before putting the devices into operation.

The user manual is a fixed part of the product. It must be kept in the direct vicinity of the device and the installation, operating and service staff must have access to it at all times.

The user manual contains important information, safety instructions and test certificates which are necessary for the perfect function of the device in operation.

The user manual is directed at all individuals concerned with the commissioning, handling and servicing of the product. The applicable guidelines and standards for areas with gas and dust atmosphere (2014/34/EU, EN/IEC 60079-17 and EN/IEC 60079-19) must be observed when conducting this work.

Knowledge of the safety and warning information in this user manual and the strict compliance with it is essential for safe installation and commissioning. Accidents, injuries and material damage can be avoided by circumspect handling and systematically following the instructions.

The examples, tables, and figures provided in this user manual are for illustration purposes. Due to the different requirements of the respective application, the BARTEC company cannot assume responsibility or liability for actual use based on the examples and figures.

The BARTEC company reserves the right to carry out technical changes at any time.

In no event will BARTEC company be responsible or liable for indirect or consequential damages resulting from the use or application of this user manual.

Safety instructions and warnings are specially highlighted in these operating instructions and marked by symbols.

### **DANGER**

**DANGER** describes a directly imminent danger. If not avoided, death or severe injury will be the consequence.

### **WARNING**

**WARNING** describes a possibly imminent danger. If not avoided, death or severe injury may be the consequence.

### **CAUTION**

**CAUTION** describes a possibly imminent danger. If not avoided, mild or slight injury may be the consequence.

#### ATTENTION

**ATTENTION** describes a possibly damaging situation. If not avoided, the plant or objects in its vicinity may be damaged.

Important information on effective, economical & environmentally compliant handling.



### 1.1.1 Languages

The original user manual with safety information is written in English. All other available languages are translations of the original user manual.

The user manual is available in German and English. If further languages are required, these must be requested from BARTEC or stated on placing an order.

### 1.1.2 Changes in the document

BARTEC reserves the right to change the content of this document without notification. No warranty is assumed for the correctness of the information. In cases of doubt, the German safety instructions apply because it is not possible to rule out errors of translation or printing. In the case of legal disputes, the "General Terms and Conditions of Business" of the BARTEC GmbH also apply.

The current versions of the datasheets, operating instructions, certificates and EU declarations of conformity can be downloaded from [www.bartec.de](http://www.bartec.de) or may be requested directly from BARTEC GmbH.

## 1.2 Handling the product

The product described in these operating instructions has been tested and left the factory in perfect condition as regards meeting safety requirements. To maintain this condition and ensure that this product operates perfectly and safely, it may be used only in the manner described by the manufacturer. Appropriate transportation, suitable storage and careful operation are also essential for the perfect and safe operation of this product. The POLARIS must be installed properly and securely if it is to work perfectly and correctly.

The safe and perfect mounting of the POLARIS is a precondition for faultless and correct operation.

## 1.3 Intended use

### 1.3.1 Exclusive purpose

It is used exclusively in combination with operating devices which satisfy the requirements for Overvoltage Category I.

The POLARIS REMOTE series have been designed specially for use in hazardous (potentially explosive) areas in Zone 1 or Zones 21.

It is essential to observe the permissible operational data for the device being used.

### 1.3.2 Unintended use

Any other use is not in accordance with the intended purpose and can cause damage and accidents. The manufacturer will not be liable for any use beyond that of its exclusive intended purpose.

## 1.4 Duties of the operator

The owner/managing operator undertakes to restrict permission to work with the POLARIS to people who:

- are familiar with the basic regulations on safety and accident prevention and have been instructed in the use of the POLARIS;
- have read and understood the documentation, the chapter on safety and the warnings.

The owner/managing operator must check that the safety regulations and accident prevention rules valid for the respective application are being observed.

## 1.5 Safety information

### 1.5.1 General

- Take the device out of the hazardous area before wiping it with a dry cloth or cleaning it!
- Do not open devices in a hazardous area.
- The general statutory regulations or directives relating to safety at work, accident prevention and environmental protection legislation must be observed, e.g. the German industrial health and safety ordinance (BetrSichV) or the applicable national ordinances.
- In view of the risk of dangerous electrostatic charging, wear appropriate clothing and footwear.
- Avoid the influence of heat that is higher or lower than the specified temperature range.
- Protect the device from external influences! Do not expose the device to any caustic/aggressive liquids, vapours or mist! In the event of malfunctioning or damage to the enclosure, take the device out of the potentially explosive area immediately and bring it to a safe place.

## 1.6 General safety information for operation

### 1.6.1 Maintenance

The pertinent erection and operating provisions for electrical systems must be observed! (e.g. Directive RL 2014/34/EU, BetrSichV and nationally applicable ordinances EN 60079-14, IEC 60079-14 and the series DIN VDE 0100)!

Observe the national waste disposal regulations when disposing of materials.

#### 1.6.2 Servicing

No constant servicing will be necessary if operated correctly under consideration of the assembly instructions and environmental conditions. See Chapter "Service, inspection, repair" in this respect.

#### 1.6.3 Inspection

According to EN/IEC 60079-17 and EN/IEC 60079-19, the operator of electrical systems in potentially explosive atmospheres is obliged to have these inspected by an electrician to ensure correct condition.

#### 1.6.4 Repairs

Repairs to explosion-proof equipment may only be performed by persons authorized by BARTEC, who must employ the latest technological practices, observe the manufacturer's instructions and use only original spare parts. The applicable regulations are to be observed here.

#### 1.6.5 Commissioning

It must be checked that all components and documents are available before commissioning.

### 1.7 Labelling, test certificate and standards

The device features an explosion protection label, as well as a test certificate. For an explanation of the symbols and information used, see chapter 4 "Technical data".

The POLARIS REMOTE series complies with Directive 2014/34/EU on equipment and protective systems intended for use in potentially explosive atmospheres (ATEX Directive). For information on standards that must be observed, see chapter 3 "Explosion protection and approvals".

### 1.8 Warranty



#### **WARNING**

**Explosion protection cannot be guaranteed if non-specified components are used.**

- ▶ Do not make any changes or perform any reconstruction work on the device.
- ▶ Use only original spare parts.



The manufacturer provides a full warranty exclusively for the spare parts it supplies. When using parts from third parties, there is no guarantee that they have been designed or manufactured to handle the requisite stress or offer the requisite degree of safety.

As a fundamental rule, our "General Conditions of Sale and Delivery" apply. These are made available to the owner/managing operator at the latest on formation of a contract. Guarantee and liability claims for personal injury and damage to property are excluded if they are due to one or more of the following reasons

- Use of the POLARIS for a purpose other than that for which it is intended.
- Incorrect installation, commissioning, operation and maintenance.
- Non-compliance with the instructions in the manual with respect to transport, storage, assembly, commissioning, operation and maintenance.
- Structural modifications without our prior authorisation.
- Inadequate monitoring of components that are subject to wear
- Repairs done incorrectly.
- Disasters due to the effects of foreign matter or Act of God (events outside human control).

BARTEC grants a warranty period of one year on the POLARIS series, starting from the BARTEC delivery date. The warranty period for accessories is 1 year from the date of delivery. This warranty covers all parts of the delivery and is limited to the free-of-charge replacement of or repair of the defective parts by BARTEC. The packaging supplied should ideally be retained for this purpose (return shipping). If necessary and following written consultation, the products should be sent to us with an RMA form. No claims may be submitted for repair work to be performed at the installation location.

## 2. Product description

### 2.1 Definition

The **POLARIS Remote KVM Digital** System consists of a remote unit and a local unit. The remote unit is installed internally and the local unit is contained in the scope of delivery. The data are transferred in real time.



It is connected to the server or PC easily and directly by means of the local unit already included in the scope of supply.

The POLARIS Remote KVM Digital has been optimized for signals such as HDMI/DVI and USB. A local monitor can be connected via "Monitor Out". The local keyboard and mouse are connected to the PC directly.

The POLARIS Remote input devices are connected by only one USB cable. If the POLARIS Remote KVM Digital is equipped with a touch screen, the driver (which is included in the scope of supply) is installed on the local PC.

An STP cable with a transmission distance of up to 100 metres is used for transfer. The Local Unit is powered by an external power pack which is included in the scope of supply.



The front-panel mounting design makes installation easy. On request, the devices are also available as a ready-made system solution in a stainless steel enclosure for wall, floor or table mounting.

Intrinsically safe keyboards in various national languages, and mouse, trackball, joystick and touchpad as front-panel installation are available. A resistive (intrinsically safe) touch screen and the connection of a BARTEC hand-held scanner are optional possibilities. The intrinsically safe input devices are supplied through barriers which are also integrated in the POLARIS Remote.

For particularly harsh areas of use with temperatures as low as down to -40 °C, we equip the POLARIS series with electrical heating. On request, we produce customised solutions with more command and signalling devices.

## 2.2 Schematic design



There is firmware on both the unit remote and local unit which must have the same firmware status for smooth transmission.

### 2.2.1 Standard – Point to Point



Local operation and the remote station are peers in the system

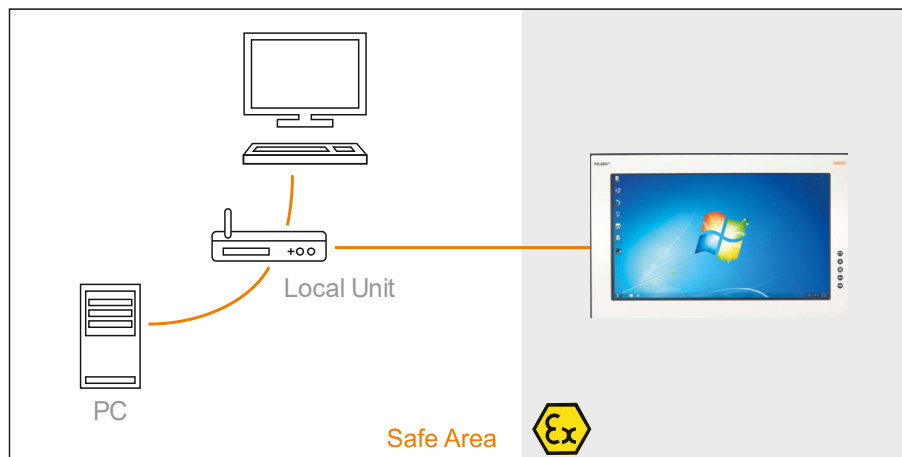


Illustration 1: System design with STP cable up to 100 m

### 2.2.2 Standard - Point-to-Point with Hand-Held Scanner



The local operation and the remote station are peers in the system.



The hand-held scanner is connected as a USB input device from the Local Unit.


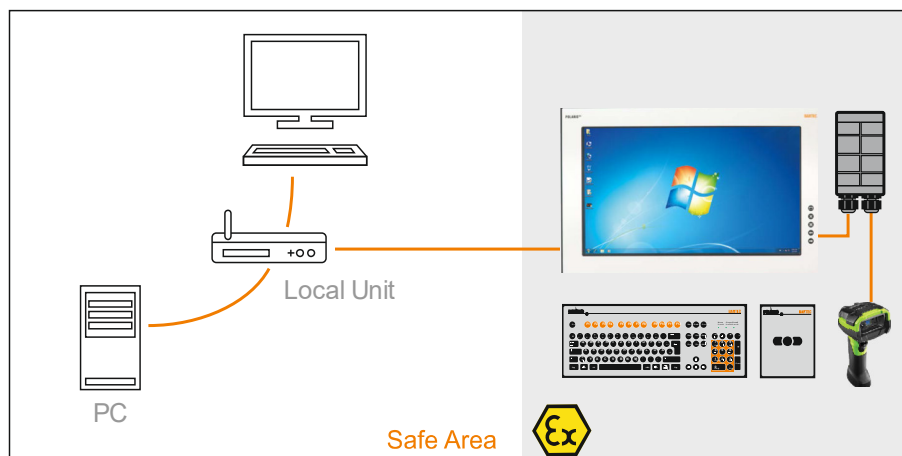


Illustration 2: System design with STP cable up to 100m and hand-held scanner

### 2.2.3 Special Application - Cascade Connection



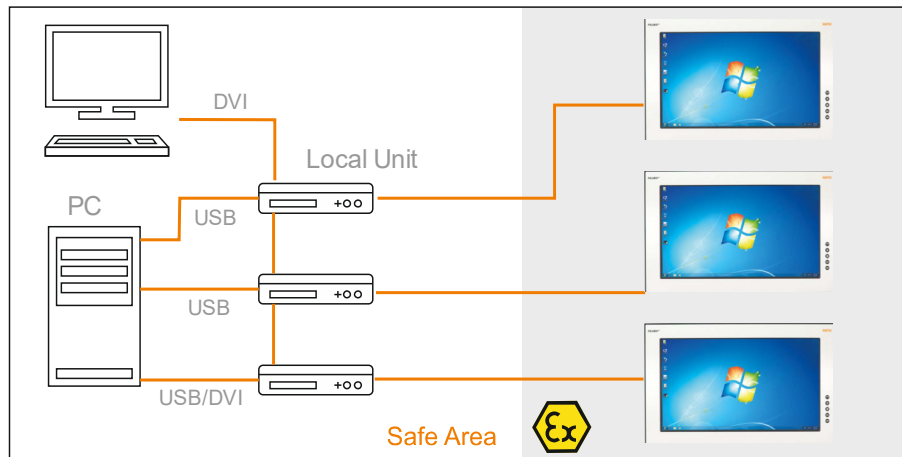


When several POLARIS Remote devices are cascaded, the POLARIS Remote devices are peers in the system. The use of the touch function must be checked in each individual case.



*Illustration 3: System design with STP cable up to 100 m and cascading of several POLARIS Remote devices*



### 3. Explosion protection and approvals

POLARIS REMOTE KVM Digital Type 17-71V2-....		
ATEX		
Ex protection type	<div><div></div><div>II 2G Ex db eb mb q [ib op pr] IIC T4 Gb</div></div> <div><div></div><div>II 2D Ex mb tb IIIC T120°C Db</div></div> <div>-20 °C ≤ Ta ≤ 60 °C</div>	
Certification	IBExU 05 ATEX 1117 X	
Standards in accordance with EMC Directive 2014/34/EU	EN 60079-0:2012+A11:2013 EN 60079-1:2014 EN 60079-5:2015 EN 60079-7:2015 EN 60079-11:2012 EN 60079-18:2015 EN 60079-28:2015 EN 60079-31:2014	
IECEx		
Ex protection type	Ex db eb q [ib op pr] IIC T4 Gb Ex tb IIIC T120 °C Db	
Certification	IECEx IBE 11.0007X	
Standards in accordance with EMC Directive 2014/34/EU	<div><div>IEC 60079-0:2011</div><div>Edition: 6</div></div> <div><div>IEC 60079-1:2014-06</div><div>Edition: 6</div></div> <div><div>IEC 60079-5:2015</div><div>Edition: 4</div></div> <div><div>IEC 60079-7:2015</div><div>Edition: 5</div></div> <div><div>IEC 60079-11:2011</div><div>Edition: 6</div></div> <div><div>IEC 60079-18:2015</div><div>Edition: 4</div></div> <div><div>IEC 60079-28:2015</div><div>Edition: 2</div></div> <div><div>IEC 60079-31:2013</div><div>Edition: 2</div></div>	
<div> <b>Special conditions</b></div>	<p>The intrinsically safe circuits and the enclosure are galvanically connected. The equipotential bonding must be guaranteed at the installation of the intrinsically safe circuits.</p> <p>High charging mechanisms at the operation surface of the Visual units respectively accessories (for example pneumatic particle transport) must be excluded at the application. The degree of protection (IP code) must be ensured by the installation of the units in enclosures (IP code).</p>	



Die POLARIS HMI are marked exclusively according to ATEX und IECEx.  
 Further markings must be requested separately.


Depending of the variant, optional additional test certificates and labeling on request	
<b>INMETRO</b>	11/UL-BRHZ-0131X
<b>Customs Union Russia (EAC)</b>	TC RU C-DE.GB06.B.00334
<b>Korea</b>	KTL 14-KB4BO-0258X
<b>India</b>	CCEs P261984
<b>China</b>	NEPSI GYJ18.1382X
<b>America</b>	CSA 70010166
<b>More test certificates</b>	<a href="http://www.bartec.de">www.bartec.de</a>
EU-conformity	
<b>RoHS-Directive</b>	2011/65/EU
<b>Standards in accordance with EMC Directive 2014/30/EU</b>	EN/IEC 61000-6-2:2005 EN 61000-6-4:2007 + A1:2011 IEC 61000-6-4:2006 + A1:2010 EN 60529:1991 + A1 2000 + A2 :2013 IEC 60529:1989 + A1 1999 + A2 :2013
<b>Electrical safety</b>	EN/IEC 61010-1:2010
<b>Product labelling</b>	<b>CE</b> 0044

## 4. Technical data


### 4.1 General technical Data

<b>Construction</b>	Front panel fitting; Optional turn-key system solutions in a stainless steel enclosure as wall, floor or table mounting versions.
<b>Connection to the PC</b>	with local unit (plug & play) through STP/S copper cable connections 1 x HDMI/DVI in 1 x HDMI/DVI out (local monitor) 1 x USB for keyboard/mouse/touch screen/ hand-held scanner
<b>Conductor length</b>	up to 130 m with STP/S copper cable 4x2x23AWG (CAT 7)
<b>POLARIS Remote Connection</b>	1 x Ex e for STP/S (CAT 7) 1 x Ex e power supply 2 x Ex i for PS/2 for intrinsically safe keyboard and mouse
<b>Optional interface modules</b>	1 x Ex i Supply module for hand-held scanner
<b>Display</b>	Antireflection coating glass pane Optional touch screen
<b>Power supply</b>	AC 90 V to 253 V $\pm$ 10 %, 50 Hz to 60 Hz DC 24 V $\pm$ 10 %
<b>Max. power consumption</b>	$P_{\max} < 100$ W depending on the version
<b>Relative air humidity</b>	5 to 95 % non-condensing
<b>Vibration</b>	0.7 G/1 mm; 5 Hz-500 Hz pulse in all 3 axes
<b>Shock</b>	15 G, 11 ms pulse in all 3 axes
<b>Material</b>	Front Polyester foil on anodized aluminium plate (conditionally UV-resistant) Rear sheet steel bichromated
<b>Protection class</b>	Front IP66 Rear IP54
<b>Optional approved accessories</b>	Keyboard Mouse variants Hand-held scanner


#### 4.1.1 Characteristics POLARIS Remote KVM Digital 15"

<b>Display</b> 	15" graphics-capable TFT display XGA resolution 1024 x 768 pixels 16.7 million colours Brightness 350 cd/m2 Visible surface approx. 304 x 228 mm Contrast 400:1
<b>Backlighting</b>	LED technology, Service life approx. 50,000 hours (at +25 °C)
<b>Permissible ambient temperature</b> Storage/Transport Operation	-20 °C to +50 °C 0 °C to +50 °C
<b>Dimensions</b> (width x height x depth)	411 mm x 332 mm x approx. 135 mm
<b>Wall cut-out</b> (width x height)	394.5 mm x 315.5 mm + 0.5 mm
<b>Weight</b>	approx. 23 kg


#### 4.1.2 Characteristics POLARIS Remote KVM Digital 15" Sunlight
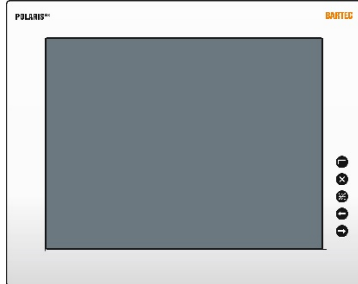
<b>Display</b> 	15" graphics-capable TFT display XGA resolution, 1024 x 768 pixels 16.7 million colours Brightness 1000 cd/m² Visible surface approx. 304 x 228 mm Contrast 700:1
<b>Backlighting</b>	LED technology, Service life approx. 50,000 hours (at +25 °C)
<b>Permissible ambient temperature</b> Storage/Transport Operation	-20 °C to +60 °C -20 °C to +60 °C
<b>Dimensions</b> (width x height x depth)	411 mm x 332 mm x approx. 135 mm
<b>Wall cut-out</b> (width x height)	394.5 mm x 315.5 mm + 0.5 mm
<b>Weight</b>	approx. 23 kg


#### 4.1.3 Characteristics POLARIS Remote KVM Digital 19.1"

<b>Display</b> 	19.1" graphics-capable TFT display SXGA resolution, 1280 x 1024 pixels 16.7 million colours Brightness 300 cd/m <sup>2</sup> Visible surface approx. 380 x 305 mm Contrast 1300:1
<b>Backlighting</b>	CFL technology, Service life approx. 40,000 hours (at +25 °C)
<b>Permissible ambient temperature</b> Storage/Transport Operation	-20 °C to +50 °C 0 °C to +50 °C
<b>Dimensions</b> (width x height x depth)	498 mm x 400.5 mm x approx. 135 mm
<b>Wall cut-out</b> (width x height)	484 mm x 386.5 mm + 0.5 mm
<b>Weight</b>	approx. 33 kg

#### 4.1.4 Characteristics POLARIS Remote KVM Digital 17.3"

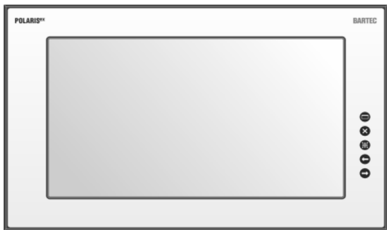

<b>Display</b> 	17.3" graphics-capable TFT display Full HD resolution 1920 x 1080 pixels 16.7 million colours Brightness 400 cd/m <sup>2</sup> Visible surface approx. 302 x 215 mm Contrast 600:1
<b>Backlighting</b>	LED technology, Service life approx. 50,000 hours (at +25 °C)
<b>Permissible ambient temperature</b> Storage/Transport Operation	-20 °C to +50 °C 0 °C to +50 °C
<b>Dimensions</b> (width x height x depth)	503 mm x 314 mm x ca. 135 mm
<b>Wall cut-out</b> (width x height)	489 mm x 300 mm + 0,5 mm
<b>Weight</b>	approx. 33 kg

#### 4.1.5 Characteristics POLARIS Remote KVM Digital 24"

<p><b>Display</b></p> 	<p>24" graphics-capable TFT display WSXGA resolution, 1920 x 1080 pixels 16.7 million colours Brightness 300 cd/m<sup>2</sup> Visible surface approx. 521 x 299 mm Contrast 3000:1</p>
<p><b>Backlighting</b></p>	<p>LED technology, Service life approx. 40,000 hours (at +25 °C)</p>
<p><b>Permissible ambient temperature</b> Storage/Transport Operation</p>	<p>-20 °C to +50 °C 0 °C to +50 °C</p>
<p><b>Dimensions</b> (width x height x depth)</p>	<p>644 mm x 406 mm x approx. 135 mm</p>
<p><b>Wall cut-out</b> (width x height)</p>	<p>630 mm x 392 mm + 0.5 mm</p>
<p><b>Weight</b></p>	<p>approx. 38 kg</p>

## 4.2 Keyboard

### 4.2.1 Explosion Protection


Type	17-71VZ-40..
Ex protection type ATEX	 II 2G Ex ib IIC T4 Gb  II 2D Ex ib IIIC T120°C Db $-20\text{ °C} \leq T_a \leq +60\text{ °C (50°C)}$
Certification	IBExU 05 ATEX 1117 X
Ex protection type IECEx	Ex ib IIC T4 Gb Ex ib IIIC T120 °C Db
Certification	IECEX IBE 11.0007X
More certificates	<a href="http://www.bartec.de">www.bartec.de</a>

### 4.2.2 General data



Construction	Front panel fitting
Material	Polyester foil on aluminum sheet (conditionally UV-resistant)
Protection class (front)	IP65
Dimensions (width x height)	420 mm x 170 mm
Wall cut-out (width x height)	391 mm x 140 mm
Installation depth	18 mm
Weight	approx. 700 g
Other features	Keyboard available in various languages

Dimensions and wall cut-out for keyboard (mm)

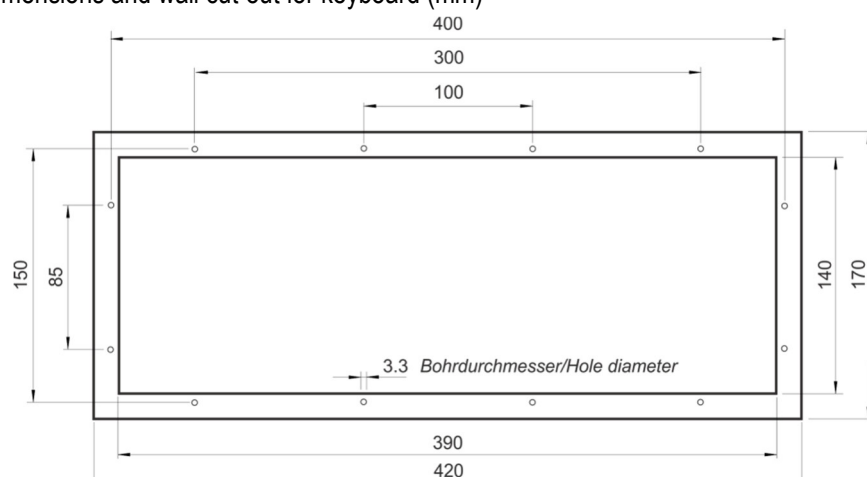

#### 4.2.3 Characteristics of enclosure for mouse and keyboard



<b>Order no.</b>	05-0041-0277
<b>Material</b>	Stainless steel 1.4301; AISI 304
<b>Dimensions</b> (width x height x depth)	600 mm x 85 mm x 220 mm
<b>Protection class</b>	IP65
<p>Dimensions (mm)</p>	

### 4.3 Finger mouse, Trackball, Touchpad and Joystick

#### 4.3.1 Explosion protection


<b>Ex protection type ATEX</b>	II 2G Ex ib IIC T4 Gb II 2D Ex ib IIIC T120°C Db -20 °C ≤ Ta ≤ +60 °C (50°C)
<b>Certification</b>	IBExU 05 ATEX 1117 X
<b>Ex protection type IECEx</b>	Ex ib IIC T4 Gb Ex ib IIIC T120 °C Db
<b>Certification</b>	IECEX IBE 11.0007X
<b>More test certificates</b>	<a href="http://www.bartec.de">www.bartec.de</a>



#### 4.3.2 General Data


Construction	Front panel fitting		
Material	Polyester foil on aluminium sheet (conditionally UV-resistant)		
Protection class			
Fingermouse/Joystick/Touchpad	IP65	front site	
Trackball	Static	IP65	front site
	Dynamic	IP51	front site
Dimensions (width x height)	130 mm x 170 mm		
Wall cut out (width x height)	100 mm x 140 mm		

Dimensions and wall cut-out (mm)

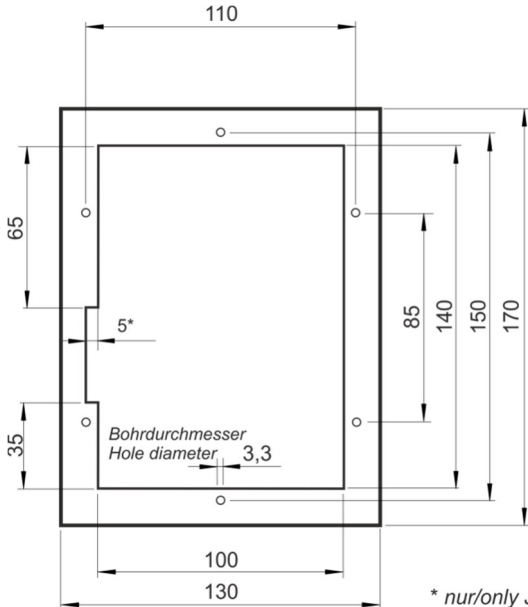


\* nur/only Joystick

#### 4.3.3 Variants

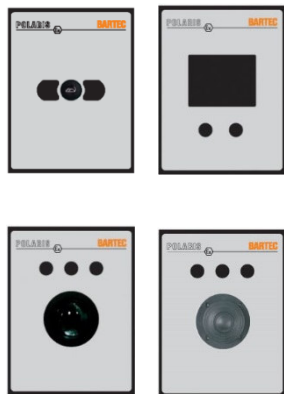


<b>Finger mouse</b>	Type 17-71VZ-1000
Installation depth	15 mm
Weight	approx. 270 g
<b>Touchpad</b>	Type 17-71VZ-2000
Installation depth	15 mm
Gewicht	approx. 250 g
<b>Trackball</b>	Type 17-71VZ-3000
Installation depth	43 mm
Weight	approx. 500 g
<b>Joystick with button</b>	Type 17-71VZ-9000
Installation depth	43 mm
Weight	approx. 500 g

## 4.4 Product Labelling

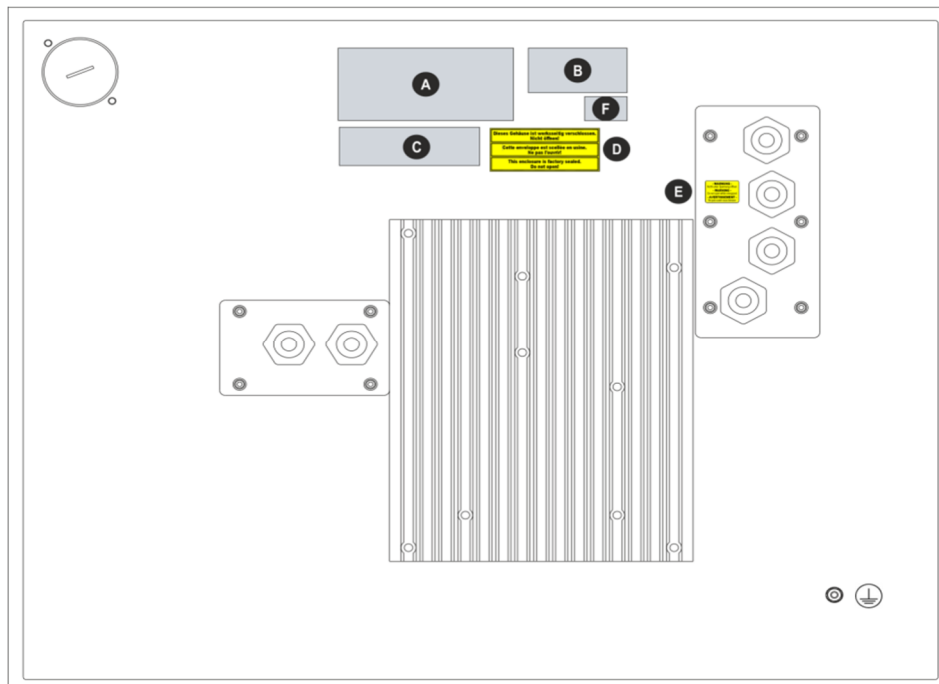

**A**  
Example:  
Type label with label  
ATEX and IECEx

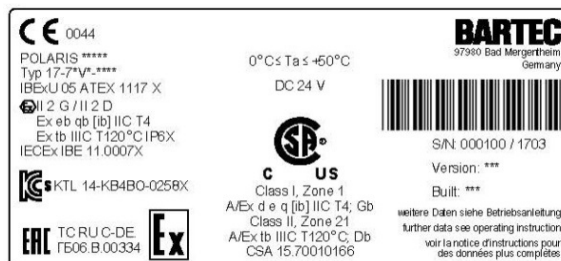


**B**  
INMETRO type label



**C**  
Label for Local Unit



**D**  
Warnings on the device

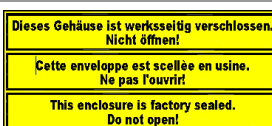

**E**  
Warning on terminal  
compartment!



**F**  
Test sticker



## 5. Transport, Storage, Scope and Assembly

### 5.1 Transport



A written report of any transport damage or missing items must be given to the appointed forwarder and to BARTEC GmbH immediately on receipt of the delivery.

Damage caused by incorrect storage and transport shall not fall within the warranty provisions of BARTEC GmbH.

#### **CAUTION**

**This device is heavy (23-38 kg).**

**There is a risk of injury if it is lifted or moved incorrectly.**

► You will need help from others when transporting it.

### 5.2 Intermediate Storage

#### **ATTENTION**

**Damage to property through incorrect storage!**

- Comply with the correct storage temperatures.
- Keep the POLARIS free of moisture.

### 5.3 Scope of delivery

- 1 x POLARIS Remote KVM Digital
- 1 x local unit with power pack, 1x DVI HDMI cable, 1 x USB cable
- 1 x RJ45 network box, 1 x RJ45 patch cable, 3 m
- 1 x Reinforcement frame, 1 x Set of mounting clamps
- 1 x User manual POLARIS Remote KVM digital
- 1 x Operation instructions KVM

**Not enclosed:**

- Assembly Material,
- Cable for voltage supply and data line
- Connection cable for BARTEC hand scanner

#### 5.3.1 Accessories optional

- Keyboard, finger mouse, touchpad, trackball, joystick
- Enclosure and supporting system for wall, floor and table mounting
- BARTEC hand scanner
- Connection cable for BARTEC hand scanner

## 5.4 Assembly

Before assembling the device, make sure you have all the components and documents.

### Required Tools:

POLARIS (mounting clamps)	1 x hex key 3 mm 1 x slotted screwdriver
POLARIS terminal compartments	1 x 1 x hex key 2,5 mm 1 x slotted screwdriver
POLARIS PE-connection	1 x ring spanner 7 mm
POLARIS accessories	1 x socket wrench 5.5mm
System solution in an "Exklusive II" enclosure	1 x hex key 5.5 mm (to fix the supporting system in place)
LSA-Plus terminal	Insertion tool for LSA-Plus

### 5.4.1 Installation options

The POLARIS can be installed directly in:

- Enclosures
- Switch cabinet doors
- Operating consoles

The POLARIS series are mounted by fitting them into front panels, which can be done with very little effort. On request, we supply the operating devices as ready-to-use system solutions in stainless steel enclosures for mounting onto walls, floors or tables.

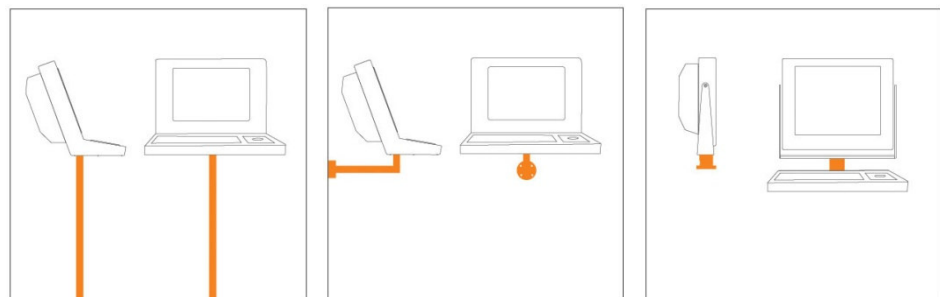


Illustration 4: Examples of floor, wall and table mounting in an "Exklusive II" enclosure

## 6. Installation



We recommend setting up and testing the entire system before its ultimate installation in the ex-area. If a long connection cable is not available, please use a patch cable to test the basic functions.

### DANGER

**Electrostatic charging through a stream of particles.**

**There is a risk of fatal injury in an explosive atmosphere!**

- ▶ Make sure there are no highly energetic charging mechanisms at the user interface on the display unit or its accessories.
- ▶ Do not install the device in the stream of particles.

### DANGER

**No PE connection. Risk of fatal injury in an explosive atmosphere!**

- ▶ The POLARIS must be integrated in the equipotential bonding.



The POLARIS Series is approved for an ambient temperature of from 0 °C to +50 °C or from -20 °C to +60 °C and a relative air humidity of from 5 to 95 % without condensation.

### 6.1 Requirements

- The place where the POLARIS is installed must have sufficient mechanical stability/fastening.
- The enclosure intended for accommodating the POLARIS must be designed to bear the device's weight.
- If a supporting system is used, the surface underneath and the means of fastening the supporting system must be designed to bear the weight of the POLARIS

#### Selecting the location

### CAUTION

**Pay attention to wall and ground condition!**

**A sufficiently stable wall (e.g. concrete or limestone) or floor (e.g. concrete) must be selected for securing the load-bearing system.**

- ▶ The structural stability of the wall or floor must be able to bear 4 times the weight of the POLARIS as system solution.
- ▶ The support arm system must be assembled using suitable mounting materials (M12) (e.g. dowels or stud bolts).

- Choose the optimum height for operating the POLARIS.
- Ensure good lighting conditions for a perfectly legible display (no direct exposure to the sun's rays).

- Do not mount in direct proximity to switching or current changing devices.
- The POLARIS must be heated when at temperatures below 0°C. We furthermore recommend protecting the display from the cold, e.g. with a door on the front of the enclosure.

### Outdoor Installation

#### **ATTENTION**

##### **Damage from condensation or overheating!**

- ▶ Avoid direct sunlight!  
Remedy: e.g. shelter with sufficient air circulation.
- ▶ Remove condensation on the POLARIS immediately.
- ▶ A POLARIS built into an enclosure must be heated and not removed from the mains.
- ▶ Equip the protective housing with breather.

## 6.2 Mechanical Installation

### **CAUTION**

**This device is heavy (23-38 kg).**

**There is a risk of injury if it is lifted or moved incorrectly.**

- ▶ You will need help from others when transporting it.



Only qualified personnel, i.e. trained skilled specialists will have the necessary specialised know-how to be able to perform all the mechanical work. Familiarity with and the technically perfect implementation of the safety instructions described in this manual are preconditions for safe installation and commissioning.

### 6.2.1 Installation in 2G-/2D-enclosure

In order to guarantee the IP degree of enclosure protection = IP54 for installation in 2G enclosures of Ex e type of protection (e.g. control equipment), and = IP6X for installation in 2D enclosures in areas where combustible dusts exist - with "protection through the enclosure" type of protection - the reinforcement frame should be used for fastening on the front side.

A reinforcement frame is inserted between the retaining brackets and the enclosure material for good transmission of the clamping force. This ensures even transmission of force.



#### **For POLARIS built into the enclosure door**

The open door must be supported and secured during the installation and servicing phase. Otherwise the wall thickness specified may lead to the door sagging slightly when open.





Always tighten the mounting clamps crosswise.

## 6.2.2 Installation as a System Solution in the Stainless Steel Enclosure "Exclusive II"

The POLARIS is available as a ready-made system solution in a stainless steel enclosure e.g. "Exclusive II" for floor, wall or table mounting.



### CSA approval

The CSA approval for the POLARIS series includes an POLARIS system solution in stainless steel enclosure "Exclusive II" for wall and floor mounting.

Other system solutions and mounting systems (e.g. table mounting) have **not** been tested and approved in accordance with CSA.



### For POLARIS built into the enclosure door

The open door must be supported and secured during the installation and servicing phase. Otherwise the wall thickness specified may lead to the door sagging slightly when open.

### Selecting the location



### **CAUTION**

#### **Pay attention to wall and ground condition!**

- ▶ A sufficiently stable wall (e.g. concrete or limestone) or floor (e.g. concrete) must be selected for securing the load-bearing system.
- ▶ The structural stability of the wall or floor must be able to bear 4 times the weight of the POLARIS as system solution.
- ▶ The support arm system must be assembled using suitable mounting materials (M12) (e.g. dowels or stud bolts).

### Work steps (Stainless steel enclosure "Exclusive II")

- (1) Prepare supply and data line(s).
- (2) Prepare installation on the basis of the drilling template (see illustration 6 - 8).
- (3) Install supply and data line(s) in the base.
- (4) Fasten the supporting system.
- (5) Pull supply and data line(s) through the cable glands provided into the enclosure. Ensure there is sufficient length.
- (6) Mount the enclosure on the supporting system.
- (7) Open the terminal compartments on the POLARIS and feed the supply and data line(s) through the cable glands and wire them. Block unused terminal compartments with a blanking plug.
- (8) Close the door of the "Exclusive II" enclosure.



### 6.2.3 Floor mounting (Stainless steel enclosure "Exklusive II")

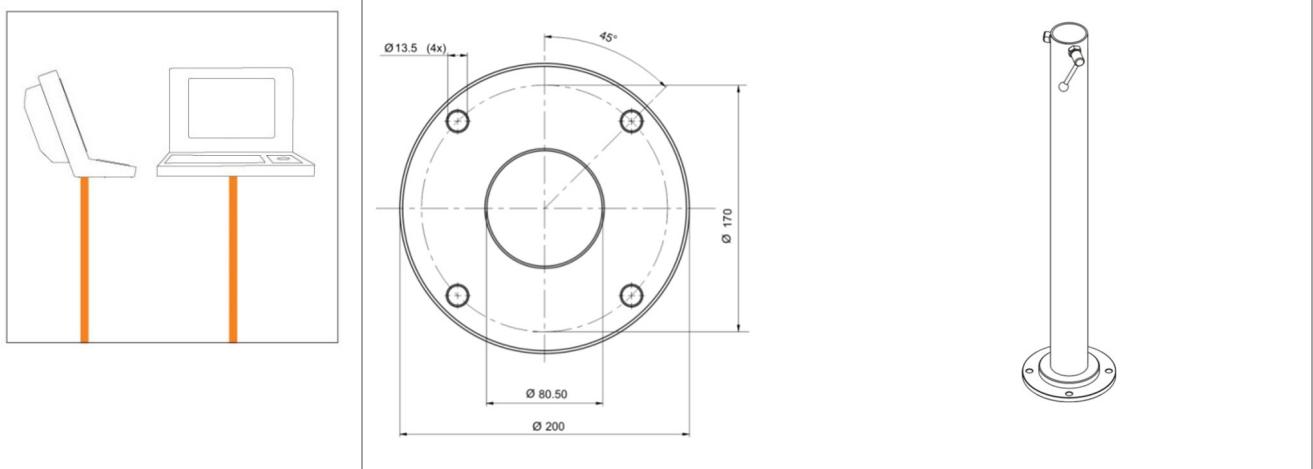


Illustration 6: Drilling pattern - supporting system for floor mounting

### 6.2.4 Wall mounting (Stainless steel enclosure "Exklusive II")

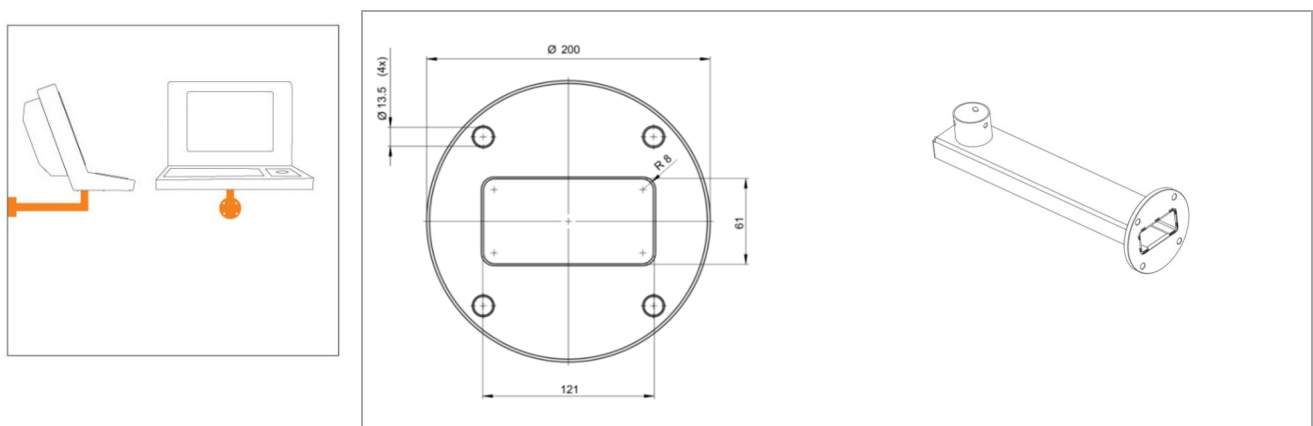


Illustration 7: Drilling pattern - supporting system for wall mounting

### 6.2.5 Table mounting swivel/tilt (Stainless steel enclosure "Exclusive II")

#### **CAUTION**

**Movable enclosure parts on the swivel-mounted enclosure.**

**There is a risk of injury by hands being crushed.**

- ▶ 3 people are needed for assembly/disassembly.
- ▶ When lifting the POLARIS, always pick up the swivel-mounted adapter and enclosure together.
- ▶ Hold up the POLARIS on both sides (two people), so that the third person can lay the supply and data line(s) in the supporting system. Make sure that your fingers do not get caught between the swivel adapter and the enclosure as you set up the POLARIS.



#### **CSA approval**

The system solutions table mounting have **not** been tested and approved in accordance with CSA. Must be checked separately in each individual case.

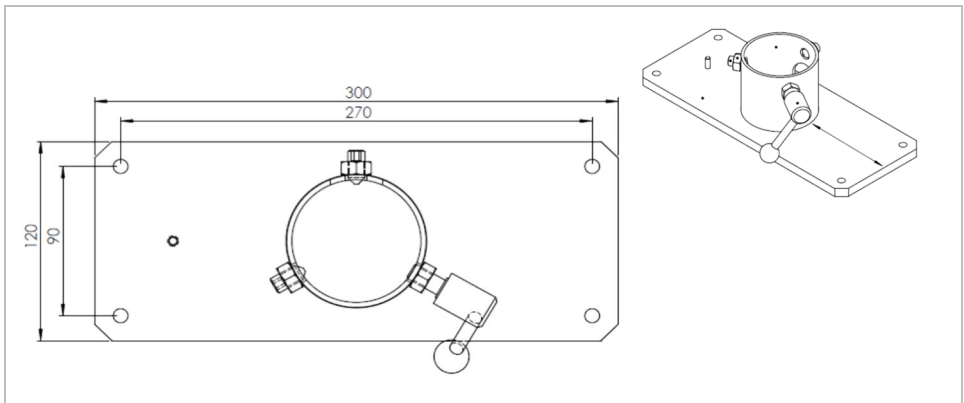
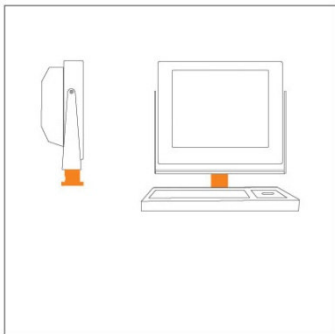


Illustration 8: Drilling pattern - supporting system for table mounting

#### **Rotating**

The POLARIS is fixed using two side T screws.


The angle of rotation can be changed once the screws have been loosened

#### **Inclining**

The POLARIS is fixed on the carrier system using two hexagon socket screws M10 and a T screw.

The angle of rotation can be changed once the screws have been loosened.

Tools: hex key 5 mm

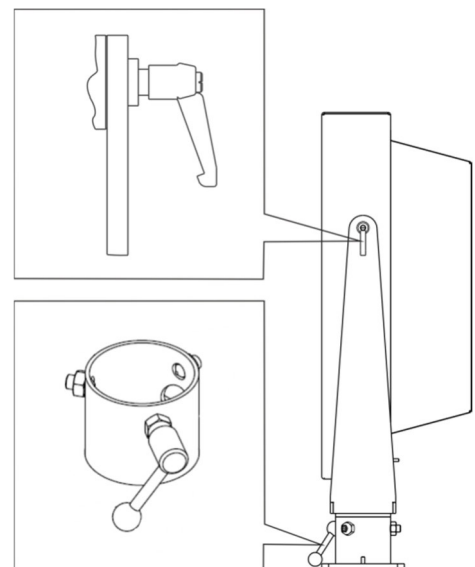

## 6.3 Electrical Installation

### 6.3.1 Installation guidelines



Only qualified personnel, i.e. trained electricians will have the required specialised knowledge to be able to do all the electrical work.

Familiarity with and the technically perfect implementation of the safety instructions described in this manual are preconditions for safe installation and commissioning.

- The user may do only the wiring at the terminals that are accessible to him/her (Ex i and Ex e terminal compartment).
- Any unused cable glands on the Ex e terminal compartment should be closed using an approved blanking plug.
- More extensive dismantling work on the device may be done only by the manufacturer or by persons authorized by the manufacturer for this purpose. The device is factory-sealed. Never open it!
- The equipotential bonding connection point must be connected to the equipotential bonding conductor in the hazardous area. Since the intrinsically safe circuits are galvanically connected to earth, equipotential bonding is required throughout the entire installation of the intrinsically safe circuits.
- The safety and accident prevention regulations applicable to the respective individual case must be observed.
- Devices must be properly installed first before they may be operated.
- It must be possible at all times to disconnect the devices from the voltage supply (in fixed installations by means of an all-pole mains isolating switch or fuse).
- It must be ensured that the supply voltage agrees with the specifications in this user manual and the tolerances must be observed. Use smoothed direct current.
- Malfunctioning cannot be ruled out if levels exceed or drop below the specified tolerances.
- If there is a power failure or if the power supply is interrupted, make sure the system has not been put into a dangerous, undefined condition.
- EMERGENCY STOP mechanisms must remain effective throughout all modes and states of operation.
- Connection cables (particularly data transmission cables) must be selected and laid in a way that ensures that capacitive and inductive interference will not have any adverse effect on the equipment. Appropriate measures must be taken to handle line interruptions to prevent any undefined states occurring.
- Wherever malfunctioning can cause material damage or personal injuries, additional external safety circuits must be provided (e.g. limit switch, mechanical interlocking devices etc.).

## 6.4 Terminal compartments

### **⚠ DANGER**

**Sealed locking screw! The device is closed in the factory.**

**The explosion protection is lost if opened, and danger to life exists in an explosive atmosphere!**

- ▶ Do not open the locking screw!

### **⚠ DANGER**

**Non-certified cable glands and non-sealed cable entries endanger the IP protection and accordingly the protection against explosions.**

**There is a risk of fatal injury in an explosive atmosphere!**

- ▶ Use Ex-certified cable glands.
- ▶ Close non-sealed cable entries.

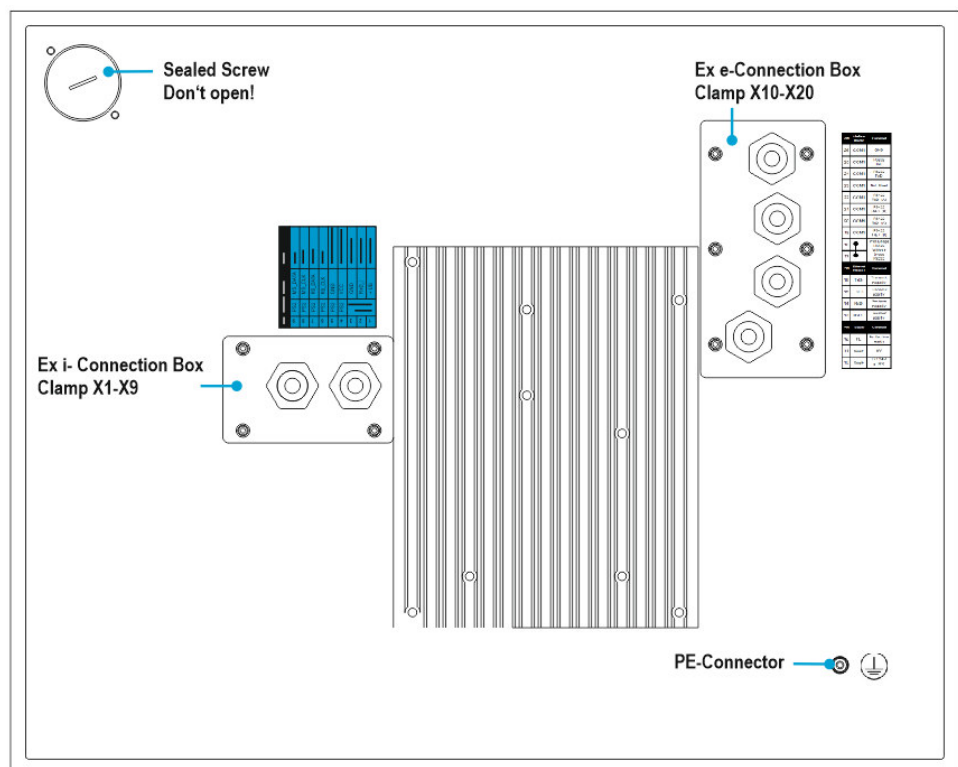


Illustration 9: Pin assignment POLARIS



All connection screws and terminals in the terminal compartment must be tightened with a torque spanner under consideration of the recommended torque of 0.4 Nm up to a max. 0.5 Nm.

## 6.5 PE conductor connection

### **⚠ DANGER**

**Death or danger of injury as a result of no PE conductor connection.**

**There is no explosion protection.**

- ▶ Equipotential bonding with a core cross-section of at least 4 mm<sup>2</sup> is to be set up for the POLARIS (see Figure).
- ▶ Secure PE conductor connections against self-loosening.

#### **Stainless steel enclosure Exklusiv II**

- ▶ Attach equipotential bonding to the enclosure.
- ▶ All moving parts must be earthed.
- ▶ Secure PE conductor connections against self-loosening.

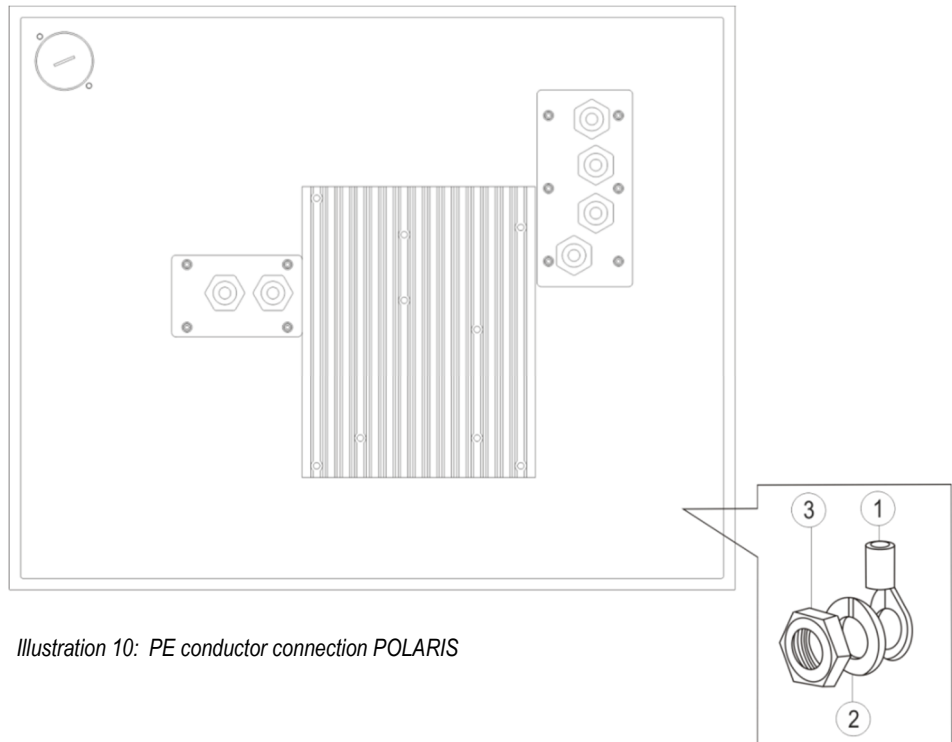


Illustration 10: PE conductor connection POLARIS

### **Work steps**


- (1) Washer on to earthing stud.
- (2) Push non-sheathed cable with PE cable lug (1) on to earthing stud.
- (3) Washer than Position spring washer (2) on threaded bolt and secure with hexagonal nut (3), max. torque: 2.9 Nm.
- (4) Lay cable close to enclosure so that it cannot become loose.

### **ATTENTION**

**Device can be damaged by differences in potential!**

- ▶ Avoid differences in potential (see Chapter 6.9.5)

## 6.6 Ex e terminal compartments

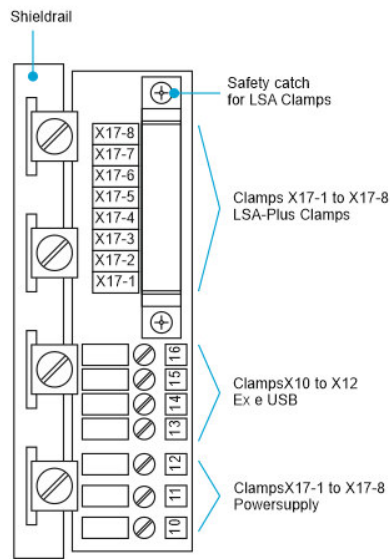

### 6.6.1 Cable entries

When connecting cables and leads to supplies / communications equipment in increased safety protected areas, Ex certified cable entries must be used which are suitable for each type of cable and lead. You must maintain the protection concept "e" and include a suitable sealing element so that an IP rating of at least IP 54 is maintained.



The terminal area of the M20 cable glands is printed on the cable glands.

A different terminal area may only be substituted with a cable gland that complies with the current version of the approval.

The assembly instructions and installation conditions for the cable glands must be observed.

#### Tightening torque of the cable glands

Torque	Connecting thread	Nut
non-armoured cables	2.3 Nm	1.5 Nm
armoured cables	8 Nm	5 Nm

#### **⚠ DANGER**

**Do not connect cables and leads when the power supply is active.**

**Danger to life exists in an explosive atmosphere!**

- ▶ Disconnect the device before starting work.
- ▶ Only use certified cable glands that have been approved for the cable diameter of the connection cable.
- ▶ Unused cable glands must be sealed using an approved blanking plug.

### 6.6.2 Supply voltage terminal assignment)

Mains Connection Variant AC			
Terminal	Interface	Signal	Remarks
X10	Supply	L	AC 110 - 230 V $\pm$ 10 %
X11	Supply	N	Neutral
X12	Supply	PE	Protective earth


Mains Connection Variant DC 24 V			
Terminal	Interface	Signal	Remarks
X10	Supply	L	DC 24 V $\pm$ 10 %
X11	Supply	N	Neutral
X12	Supply	PE	Protective earth

### 6.6.3 Terminal Assignment for USB








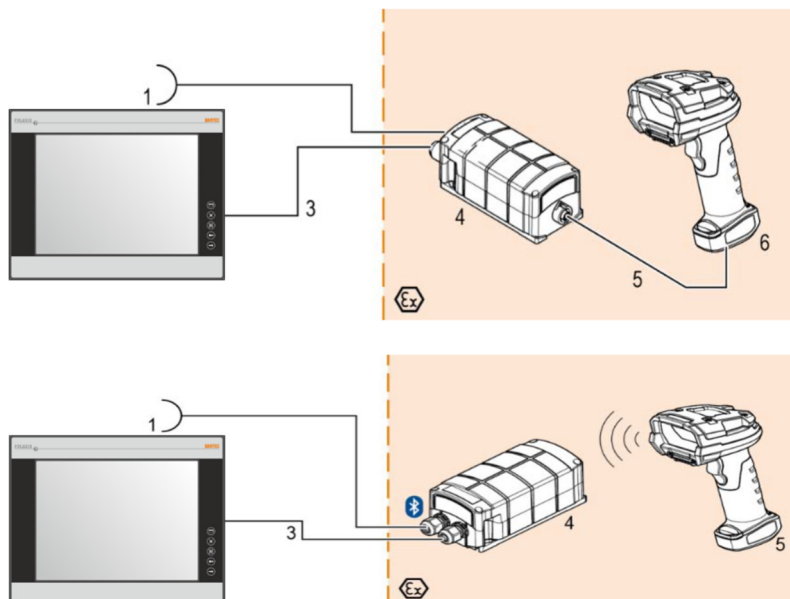



Only for external keyboard and mouse or BCS 3600.

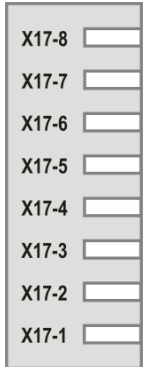
USB			
Terminal	Interface	Signal	Comments
X13	Ex e USB	VCC (+5V)	
X14	Ex e USB	- Data	
X15	Ex e USB	+ Data	
X16	Ex e USB	GND	



More information: <http://automation.bartec.de/scannerE.htm>

**6.6.4 Terminal assignment LSA-Plus Terminal (X17-1 to X17-8)**

POLARIS Remote		STP-cable		RJ45-RJ 45 jack	
	Terminal	Colour (T568B colour sequence)		Signal	PIN
	X17-8	BN		R4	8
	X17-7	BN/WH		T4	7
	X17-6	BU		R3	4
	X17-5	BU/WH		T3	5
	X17-4	GN		R2	6
	X17-3	GN/WH		T2	3
	X17-2	OG		R1	2
	X17-1	OG/WH		T1	1

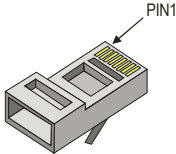
**Work steps:**

- (1) At the LSA-Plus® terminal loosen the two screws in the retainer clip and remove the retainer clip.
- (2) Use the insertion tool for the LSA-Plus to wire the cores in conformance with the terminal connection diagram.
- (3) Put the shielding onto the shield bus.
- (4) Put the retainer clip on and tighten the screws with a torque of 1.2 Nm.



## 6.7 Ex i terminal compartment



Do not connect the keyboard, mouse, trackball, touchpad, joystick or the hand scanner while the power supply is active.



### **DANGER**

**Accessories which have not been approved jeopardise the explosion protection. Danger to life exists in an explosive atmosphere!**

► Only use POLARIS accessories!



The cover for the Ex i terminal compartment need not be used when deploying a protective enclosure with protection class of at least IP20.

### 6.7.1 Connection of Ex i keyboard to the POLARIS (optional)

PS/2 for input devices				
Terminal	Interface	Colour	Signal	Remarks
X4	PS/2	WH/BR	VCC	Supply voltage
X5	PS/2	GN/YE	GND	Mass connected to protective earth
X6	PS/2	PK	KB_CLK	Keyboard clock signal
X7	PS/2	GR	KB_DATA	Keyboard data signal
X8	PS/2	BL	MS_CLK	Mouse clock signal
X9	PS/2	RD	MS_DATA	Mouse data signal

- Make the connection between the POLARIS Remote and the Ex i keyboard.
  - Connection by means of a 1.80-metre-long connection cable
  - Keyboard and mouse Type 05-0068-0163
  - Keyboard and trackball/joystick Type 05-0068-0172
  - Keyboard and touchpad Type 05-0068-0183
- (Optional: 3-metre-long connection cable)

## 6.8 Scanner Connection



Do not connect the hand scanner when there is an active power supply.

The BCS can be connected to the USB Ex e Interface of the POLARIS by using the USV. At the PC the USM will be recognized at virtual Com-Port as which it need to be handled.



The connection between BCS 36xx<sup>ex</sup> hand scanner series and the USM can be read inside the Manual of the Scanner



The data transmission between local unit and PC is realized via the USB cable (see example in Chapter 2 "System Design").

## 6.9 Local Unit



### ATTENTION

In the POLARIS Remote KVM Digital System the internal firmware of the local unit is coordinated with the remote unit.

- ▶ The same firmware release must be used.
- ▶ The firmware status is printed on the POLARIS Remote KVM Digital and on the local unit or can be read out during operation (see KVM operating instructions).
- ▶ If several systems are in use, the local units may not be swapped.
- ▶ The firmware release must be stated when ordering spare parts.

### 6.9.1 Technical Data for Local Unit

Max. ambient temperature	0 °C to +40 °C
Dimensions	98 x 41 x 106 mm
Weight	540 g (set)
Power consumption	5 watts per device
Enclosure	Aluminium anodized
Power supply	12 V / 1 A through external AC/DC adapter

### 6.9.2 STP Cable Connection

The POLARIS Remote KVM Digital and the local unit are connected by a CAT 7 cable.




#### Requirements for CAT 7 cable

The cables must be twisted in pairs and shielded in conformance to the EIA/TIA-568 B standard (standard types)!

Recommended cable: LAN STP cable CAT.7 4 x 2 x 23 AWG, see Accessories

### 6.9.3 Local Unit Connections

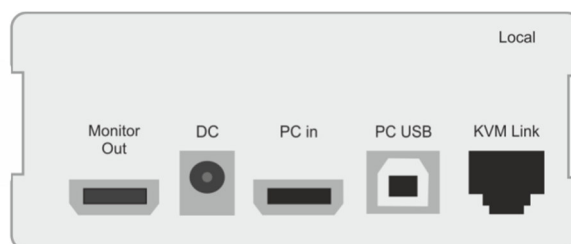

## 6.10 Fibre Version

### ATTENTION

In the POLARIS Remote KVM Digital System the internal firmware of the local unit is coordinated with the remote unit.

- ▶ The same firmware release must be used.
- ▶ The firmware status is printed on the POLARIS Remote KVM Digital and on the local unit or can be read out during operation (see KVM operating instructions).
- ▶ If several systems are in use, the local units may not be swapped.
- ▶ The firmware release must be stated when ordering spare parts.

#### 6.10.1 Connector POLARIS

The POLARIS fibre-optic connection is approved for op pr. The following must be observed when installing.

### DANGER

**There is a risk of fatal injury in an explosive atmosphere!**


- ▶ Protect the ST sockets from impact effects.
- ▶ Make sure the plug on the fibre-optic cable is connected or closed before you put the POLARIS into operation.
- ▶ The fibre optic cable must laid with protection. (e.g. robust cabling, protective tubes or cable channel)



### 6.10.2 Technical Data for Local Unit

Connector Local Unit	LC - Type
Max. ambient temperature	0 °C to +40 °C
Dimensions	98 x 41 x 106 mm
Weight	540 g (set)
Power consumption	12 watts per device
Enclosure	Aluminum anodized
Power supply	12 V 1 A through external AC/DC adapter
Multi-mode	up to 2 km 62.5/125 µm or 50/125 µm
Single-mode	up to 15 km 9/125 µm

### 6.10.3 Local Unit Connector

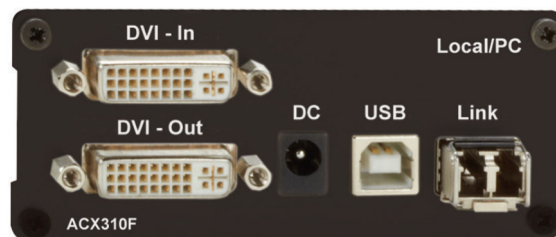

More details see Manuel ACX 310 F

## 6.11 EMC (Electromagnetic Compatibility)



This is a class A unit and can cause radio interference in residential areas; if it does, the owner/managing operator may be required to implement suitable measures and pay for loss or damage.



Only shielded conductors may be used as connecting conductors. This applies both to the data line and to all other conductors too.

The data lines must be stranded in pairs.

Example 2 x 2 x 0.75 mm<sup>2</sup> LIYCY TP.

As far as possible, separate conductors should be used for power supply and data

### 6.11.1 Voltage Supply (AC- and DC-Variants)

To supply voltage to the DC variant, it is necessary to use a regulated power supply unit with a power level of at least 5 A. The voltage supply at the place of installation may neither exceed nor drop below DC 24 V ± 10 %. Observe the voltage drop on the supply cable and correct if necessary.

The voltage drop in the DC variant of the supply line is calculated with the following formula:

$\Delta U$	Voltage drop on the supply line at power supply voltage of DC 24 V	Max. 2.4 V
$\Delta U$	Voltage drop on the supply line with maximum permissible mains adapter overvoltage DC 24 V +10 % (26.4 V)	Max. 4.8 V (until 10 % undervoltage is achieved)
$I$	Electricity for a POLARIS	At least 4 A
$A$	Cable cross-section of the supply line	
$\kappa$	Specific conductance of copper	$56 \frac{m}{\Omega \cdot mm^2}$
$l$	Length of the supply line (consider both the outgoing and return line)	

$$R = \frac{l}{\kappa \cdot A} \quad R = \frac{\Delta U}{I} \quad \Delta U = \frac{l}{\kappa \cdot A} \cdot I$$

If the voltage drop can't be balanced out or the calculation produces excessive cable cross-sections, a separate mains adapter must be installed near the installation site.

Example: pressure-tight encapsulation or ex-free area on the outside of the building.



As a result of the connection of the power supply to the POLARIS, the earth for the power supply is connected to the PE. It is essential to ensure that the earth for the power supply on the POLARIS, if this is not electrically isolated, indicates no potential difference to the PE/PA.

### 6.11.2 Back-up fuse

In the DC variant The POLARIS REMOTE series is protected internally by a 4-A time-lag fuse and in the AC variant it is protected by a 1.6 A or 2.5 A time-lag fuse. The fuse may be triggered in the case of voltage dips or undervoltage.

Internal fuse		I <sup>2</sup> value	External fuse	
Little fuse 1.6 A T	1500A@250VAC	6.83 A <sup>2</sup> s	Siba 1.6 A F	1500A@250VAC
			Siba 2.0 A F	1500A@250VAC
			Siba 2.5 A F	1500A@250VAC
Little fuse 2.5 A T	1500A@250VAC	22.29	Eska 1.6 A M	1000A@250VAC
			Eska 2 A M	1000A@250VAC



We recommend protecting the POLARIS with an upstream fuse to prevent blowing the fuse inside the device. Only BARTEC can change the internal fuse.

Back-up fuse AC: 1.6 A slow-blowing (since June 2015: 2.5 A)  
 DC: 4 A quick-acting.

The I<sup>2</sup> value is to be observed for other versions of the fuses.

### 6.11.3 Interference suppression

Certain basic measures must be taken to ensure freedom from interference when the POLARIS are installed:

- The interference voltages coupled into the device via power, data and signal line and the electrostatic voltage caused by contact are to be dissipated through the equipotential bonding.
- The installation point should be as far as possible away from fields of electromagnetic interference. This is especially important if there are frequency converters in the vicinity. Under certain circumstances will it be advisable to set up partitions to isolate the graphic display from interference.

- If inductive devices are fitted in the vicinity (e.g. contactor, relay or solenoid coils), especially if they are powered from the same source, protective circuits (e.g. RC elements) must be installed.
- Power supply and data cables must be laid so as to avoid interference. This can be achieved, for example, by avoiding laying such cables in close proximity to high-current carrying cables.

#### 6.11.4 Shielding

- Only cables with braided shielding should be used (recommended cover density > 80%).
- Sheet shielding should not be used.
- Generally, connection of the shielding at both ends results in optimum damping of all interference frequencies.
- Connection of the shielding at one side only may be more advisable if a difference in potential exists and no equipotential bonding cable can be laid.

#### 6.11.5 Connection of shielding

A low impedance connection to the circuit protective conductor is important to ensure a low current fault path. When sub-D connectors are used, the shielding should always be connected to the metal casing of the sub-D plug.

The plug casing of some controllers is not always well connected to earth. In such cases it may prove advantageous to insulate the shielding from the sub-D plug of the controller and connect it directly to the protective earth conductor by means of a cable that should be kept as short as possible (0.75 mm<sup>2</sup> ... 1.5 mm<sup>2</sup>).

#### 6.11.6 Examples of Shielding Connections


##### **ATTENTION**

**Device can be damaged by differences in potential!**

- Avoid differences in potential.




**Double-sided shield connection on the connecting cables:**

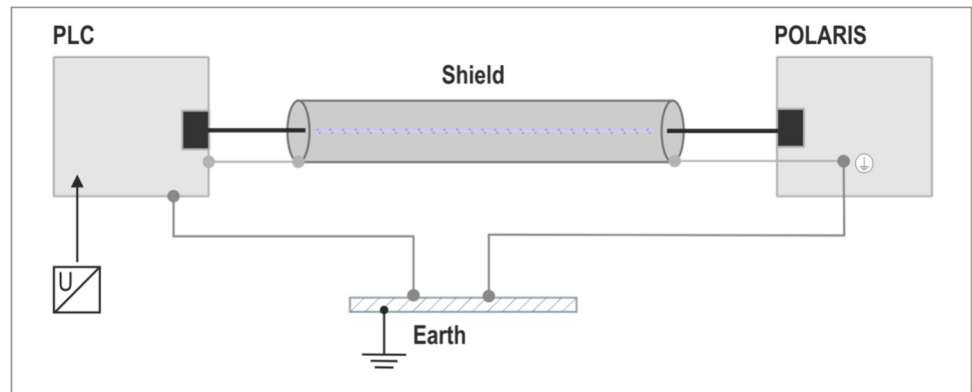

*Illustration 11: Example of double-sided shield connection*

Generally, connection of the shielding at both ends results in optimum damping of all interference frequencies. This method is to be recommended when there is good equipotential bonding between the individual units. In such cases it is possible to make use of the controller's voltage supply cable even if this is not electrically isolated.

**Single-sided shield connection on the connecting cables:**

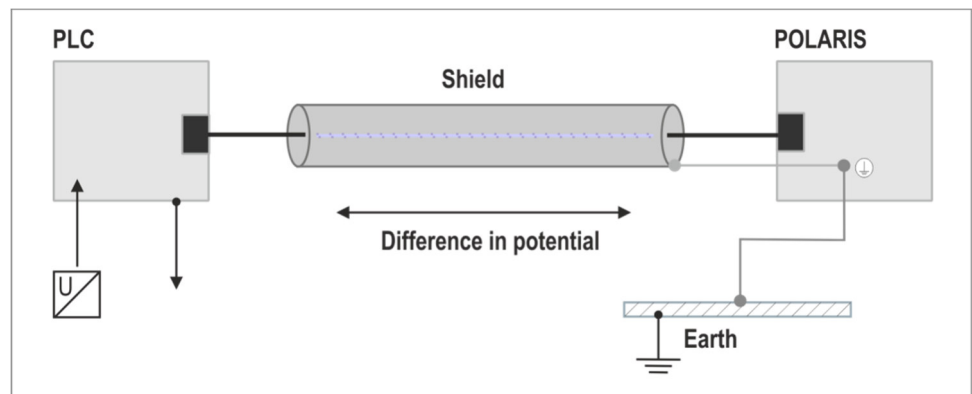

*Illustration 12: Example of single-sided shield connection*

Connection of the shielding at one end only is recommended when there is inadequate equipotential bonding, or none at all. In such cases an electrically isolated power supply unit must be used. Before the equipment goes into service the directions from the controller manufacturer regarding proper assembly and operation must be read carefully. They should then be applied taking full account of the recommendations we make here.

## 7. Commissioning

For electrical systems the relevant installation and operating specifications (e.g. Directives 2014/34/EU, BetrSichV and the applicable national ordinances, IEC 60 079-14 and the DIN VDE 0100 series) must be observed.

The operator of an electrical system in a hazardous environment must keep the operating equipment in an orderly condition, operate it correctly, monitor it and do the required maintenance and repairs.

Before commissioning the devices, check that all components and documents are there.

### 7.1 Final Inspection

**Check the following requirements before commissioning the device:**

Only open the external terminal compartment with terminals for the supply and data line(s) once it has been ensured that no potentially explosive atmosphere is present and that the power supply has been turned off.

**POLARIS Remote**

- Has the reinforcement frame between the bracket and enclosure been inserted?
- Is there no damage to seals, cable connections or glass panel?
- Are the supply and data line(s) correctly wired?
- Is the PE connection correctly earthed?
- Have the supply and data line(s) been tightened in the screw terminals?
- Are all terminal compartments closed?
- Have all cable glands been tightened and all open cable entries closed with blanking plugs?

**Local Unit**

- Is the network box connected to the local unit via patch cable?
- Are the data lines for USB, DVI and the power pack connected?

Only start the POLARIS (if a potentially explosive atmosphere is present) once the final inspection has been carried out.

## 8. Operation

The device can be put into operation after the final check has been made.



The POLARIS series does not have any ON/OFF switch.

### 8.1 Commissioning

Switch on the POLARIS and the local unit.

The system conducts a fully automatic cable synchronization, which takes about 5 seconds. The "Power/Status" LED on the front of the local unit flashes in red then. If the "Power/Status" LED switches to green, all signals are transmitted.




#### Compatibility

The system was tested with different devices. Nevertheless, it is impossible to guarantee that it will function correctly with every keyboard/mouse/ monitor and motherboard.

### 8.2 Display Settings

Settings can be done with the front-panel keyboard via OSD menu of the graphics card. Follow the instructions in the OSD menu.

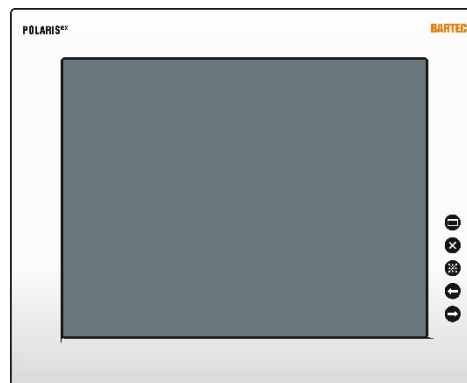

OSD menu

### 8.3 Touch Screen

In the POLARIS Remote devices the touch driver is on the CD included in the scope of supply. The touch driver for the respective operating system must be installed on the local server or PC.

There is also the option of downloading the touch screen software from <http://automation.bartec.de>. After installation, the touch screen must be calibrated.



The transmission is realized via USB cable for the keyboard and mouse.

## 9. Faults and troubleshooting

Fault	Possible Cause	Remedy
No display	No signal	Check the "Power/Status" LED on the local unit
	LED on the local unit is red i.e. no communication with the POLARIS Remote device	Check the power supply connection. / (remote station and local unit)  Check the data line and wiring
	LED on the local unit is orange (red and green), i.e. no monitor input signal on the local unit	No monitor connection signal No output signal on local PC
	LED on the local unit is green	Data transmission between local unit and remote station is OK. Check display resolution.
	Backlighting is defective.	Return to manufacturer
	Device is defective	Return to manufacturer
Voltage supply or current consumption too low or absent	Power supply is too low	Check diameter and length of the conductor. See Chapter 6.8
	Blown external line fuse	Check fuse.
	Blown internal fuse	Return to manufacturer.
	Device is defective.	Return to manufacturer.
There are always stripes on the display.	Display is defective.	Return to manufacturer.
Dark background	The backlighting is coming to the end of its service life.	Return to manufacturer Replace backlighting.
	Power save activated at the local PC.	Press any key.
Touch screen not working	Driver is deactivated Driver is not installed	Check driver installation / install driver
	USB cable for touch screen is not connected	Use the USB cable to connect PC to the local unit.
Mouse cursor and point of contact on the screen do not agree.	Touch screen has been calibrated incorrectly	Calibrate the touch screen

## 10. Maintenance, inspection, repair

Only trained and qualified personnel may commission and do maintenance work on the POLARIS! Trained qualified personnel are people who are familiar with the installation, assembly, commissioning and operation of the POLARIS, have been instructed about the risks and have the appropriate qualifications by virtue of the work they do.

### 10.1 Maintenance intervals

The mechanical status of the devices should be checked at regular intervals. The length of the maintenance intervals depends on the ambient conditions. We recommend checking at least once a year. Regular maintenance is not necessary if operated appropriately in conformance with the installation instructions and with due consideration to the ambient conditions.

#### **DANGER**

**Prevent electrostatic charging in hazardous (potentially explosive) areas.**

**There is a risk of a fatal injury in an explosive atmosphere!**

- Take devices out of hazardous areas before wiping them dry or cleaning them!

#### **ATTENTION**

**There is a risk of condensation forming when installed outside. Damage to property may occur if this is not checked!**

- Regularly check the POLARIS for the formation of condensation.

### 10.2 Inspection

Under EN/IEC 60079-17 and EN/IEC 60079-19 the owner/ managing operator of electrical installations in hazardous areas is obliged to have these installations checked by a qualified electrician to ensure that they are in a proper condition.

### 10.3 Maintenance and repair work

Adhere to the applicable regulations under EN/IEC 60079-17 and EN/IEC 60079-19 when servicing, doing maintenance work on and testing associated operating equipment!

Assembly/disassembly, operating and maintenance work may be done only by trained specialists. The statutory rules and other binding directives on workplace safety, accident prevention and environmental protection must be observed.

### 10.3.1 Instructions for Repairs

If you wish to send in a defective device for repair, please read the RMA procedure guidance first. Then fill in and sign the RMA (Return Merchandise Authorisation) form and send it to our "Retouren Center".

E-Mail: [services@bartec.de](mailto:services@bartec.de)

Fax: +49 7931 597-119

We cannot guarantee any contractually agreed processing times for devices that are sent in without an RMA number.

The RMA guide and the RMA form are available on our homepage for downloading.

<http://www.bartec.de>

Have you any questions? Write us an e-mail or call us.

E-Mail: [services@bartec.de](mailto:services@bartec.de)

Phone: +49 7931 597-444



In the case of returns, send back the complete system, POLARIS Remote KVM Digital including the local unit.

## 11. Disposal

The component of the POLARIS contains metal, plastic parts and electronic components.



Our devices are intended as professional electric devices for business use only, referred to as B2B devices under the WEEE-Directive. The WEEE directive sets the framework for waste electric and electronic equipment handling procedures which are to apply throughout the EU. This means that you are not permitted to dispose of this equipment in normal household refuse. It should not be given to the collection sites set up by the public waste management authorities either but instead it should be disposed of in a separate collection in an environmentally sound manner.

Any product we supply can be returned by our customers to us when the time has come to dispose of it. We will ensure that it is disposed of in accordance with the respective applicable statutory regulations.

The sender pays the costs of the dispatch/packageing.

## 12. Dispatch and packaging instructions

### ATTENTION

#### Sensitive Devices! Damage to property due to incorrect packaging!

- ▶ Take the device's maximum weight into account when selecting the packaging and mode of transport.
- ▶ Use the original packaging for transportation.

## 13. Accessories, spare parts

Included in the scope of the delivery:

Name	Order no.
Mounting clamps	
Reinforcement frame POLARIS 15"	05-0205-0009
POLARIS 19.1"	05-0205-0010
POLARIS 24"	05-0205-0012
Local unit	
RJ45 Network box	
RJ45 Patch cable	

Accessories/spare parts for POLARIS Remote KVM Digital:

Name	Order no.
Keyboard in respective national language	17-71VZ-40.0
Input devices Mouse	17-71VZ-1000
Trackball	17-71VZ-2000
Touchpad	17-71VZ-3000
Joystick with button	17-71VZ-9000
Connection cable for keyboard and mouse 1.8 m	05-0068-0163
3.0 m	03-0068-0204
for keyboard and trackball/joystick 1.8 m	03-0068-0172
3.0 m	05-0068-0205
for keyboard and touchpad 1.8 m	03-0068-0183
3.0 m	03-0068-0206
Enclosure "Exclusive" POLARIS 15"	03-8900-0224
POLARIS 19.1"	03-8900-0225
POLARIS 24"	on request
Support system Stand for floor mounting	05-0005-0050
Support arm for wall mounting	05-0005-0058
Stand for table mounting	05-0005-0070
Enclosure for keyboard and mouse	05-00410277
Mounting clamps 4 pieces	05-0091-0111
6 pieces	05-0091-0112
LAN STP cable CAT.7 4x2x23 AWG, outer diameter: 7.9 mm	02-4082-0002
CAT.7 4x2x22 AWG, outer diameter: 18 mm; armoured	02-4082-0004
BCS 160 <sup>ex</sup>	17-21BA-M3.S.-.....
Original packing POLARIS 15"	04-9035-0007
POLARIS 19,1"	04-9035-0008
POLARIS 24"	on request
Local unit including power pack (state firmware status when ordering)	on request

## 14. Order numbers

### POLARIS Remote KVM Digital 15", 19" and 24"

Selection chart			
Version	Code no.	Interfaces	Code no.
Remote KVM Digital 15" without touchscreen	<b>4</b>	for STP/S copper cable (up to max. 130 m)	<b>17</b>
Remote KVM Digital 15" with touchscreen	<b>6</b>		
Remote KVM Digital 19.1" without touchscreen	<b>5</b>		
Remote KVM Digital 19.1" with touchscreen	<b>7</b>	for STP/S copper cable (up to max. 130 m) supply modul for hand-held scanner	<b>18</b>
Remote KVM Digital 24" without touchscreen	<b>C</b>		
Remote KVM Digital 24" with touchscreen	<b>D</b>		

➔ Complete order no. 17-71V2-   

### POLARIS Remote KVM Digital 15" Sunlight

Selection chart			
Version	Code no.	Interfaces	Code no.
Remote KVM Digital 15" Sunlight with touchscreen	<b>6</b>	for STP/S copper cable (up to max. 130 m) supply modul for hand-held scanner	<b>18</b>

➔ Complete order no. 17-71V2-   



## 15. Additional information

### 15.1 Resistance list

#### Resistance list – polyester front foil **POLARIS series**

**BARTEC**

Page 1 of 1

The polyester front foil material used for the POLARIS series in accordance with DIN 42115, section 2, is resistant against the testing material specified as follows:

##### Alcohols

Ethyl alcohol  
 Cyclohexanone  
 Glycol  
 Glycerol  
 Isopropanol  
 Methanol

##### Hydrocarbons

Aliphatic hydrocarbons  
 General  
 Benzine  
 Benzene  
 Toluene  
 Xylene

##### Chlorinated hydrocarbons

Chlorofluorocarbon  
 Perchloroethylene  
 III-trichloroethane  
 Trichloroethylene

##### Ester

Ethyl acetate

##### Other organic solvents

Aether  
 Dimethyl formamide  
 Dioxane

##### Acids

Formic acid < 50 %  
 Acetic acid  
 Phosphoric acid < 30 %  
 Hydrochloric acid ≤ 10 %  
 Nitric acid ≤ 10 %

##### Aldehydes

Acetaldehyde  
 Formaldehyde

##### Caustic solutions

Ammonia < 2 %  
 Caustic soda < 2 %

##### Saline solutions

Alkalicarbonate  
 Bichromate  
 Prussiate of potash

##### Different substances

Molecular chlorine  
 Liquid cresolphene soaps  
 Oxygen  
 Tricresyl phosphate  
 Water < 100 °C  
 Hydrogen peroxide < 25 %

##### Detergents, scavengers and cleaning agents

Potassium soap  
 Detergent solutions (tenside)  
 Fabric softeners

##### Technical oils and fats

Cutting emulsion  
 Diesel oil  
 Varnish  
 Heating oil  
 Paraffin oil  
 Ricinus oil  
 Silicone oil  
 Turpentine oil and turpentine oil substitute

(Where not stated otherwise: concentration = 100%)

**Polyester membranes have a limited resistance to UV light and should therefore not be exposed to direct sunlight for extended periods of time.**

D\_BMS791.doc • Resistance list Polyester front foil • Revision 1 / Status: July, 18<sup>th</sup> 2006 • Technical data subject to change

[illegible]

## 16. Declaration of conformity

EU Konformitätserklärung  
 EU Declaration of Conformity  
 Déclaration UE de conformité

**BARTEC**  
 BARTEC GmbH  
 Max-Eyth-Straße 16  
 97980 Bad Mergentheim  
 Germany

Nº 11-71V0-7C0001\_D




Wir	We	Nous
<b>BARTEC GmbH,</b>		
erklären in alleiniger Verantwortung, dass das Produkt	declare under our sole responsibility that the product	attestons sous notre seule responsabilité que le produit
<b>POLARIS Serie</b>	<b>POLARIS serie</b>	<b>POLARIS sèrie</b>
Typ 17-71V0-****/**** Typ 17-71V1-****/**** Typ 17-71V2-****/**** Typ 17-71V3-****/**** Typ 17-71V6-****/**** Typ 17-71VZ-****/****		
auf das sich diese Erklärung bezieht den Anforderungen der folgenden <b>Richtlinien (RL)</b> entspricht	to which this declaration relates is in accordance with the provision of the following <b>directives (D)</b>	se référant à cette attestation correspond aux dispositions des <b>directives (D)</b> suivantes
<b>ATEX-Richtlinie 2014/34/EU</b>	<b>ATEX-Directive 2014/34/EU</b>	<b>Directive-ATEX 2014/34/UE</b>
<b>EMV-Richtlinie 2014/30/EU</b>	<b>EMC-Directive 2014/30/EU</b>	<b>Directive-CEM 2014/30/UE</b>
<b>RoHS-Richtlinie 2011/65/EU</b>	<b>RoHS-Directive 2011/65/EU</b>	<b>Directive-RoHS 2011/65/UE</b>
<b>RED-Richtlinie 2014/53/EU</b>	<b>RED-Directive 2014/53/EU</b>	<b>Directive RED 2014/53/UE</b>
und mit folgenden Normen oder normativen Dokumenten übereinstimmt	and is in conformity with the following standards or other normative documents	et est conforme aux normes ou documents normatifs ci-dessous
EN 60079-0:2012+A11 :2013 EN 60079-1:2014 EN 60079-5:2015 EN 60079-7:2015 EN 60079-11:2012 EN 60079-18:2015 EN 60079-28:2015 EN 60079-31:2014 EN 61000-6-2:2005 EN 61000-6-4:2007 +A1 :2011 EN 60529 :1991 +A1 :2000 +A2 :2013 EN61010-1 :2010	EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 + AC:2011 + A2:2013 EN 62479 :2010 EN 62311 :2008 EN 300 328 V 2.1.1 (2016-11) EN 55022 :2010 / AC :2011 EN 55024 :2010 / A1 :2015 EN 55032 :2012 / AC : 2013 EN 55032 :2015 / AC : 2016 EN 61000-3-2 :2014 EN 61000-3-3 :2013 EN 301 489-1 V2.1.1. (2017-02) EN 301 489 -17 V3.1.1 (2017-02)	

EU Konformitätserklärung  
 EU Declaration of Conformity  
 Déclaration UE de conformité

**BARTEC**

 BARTEC GmbH  
 Max-Eyth-Straße 16  
 97980 Bad Mergentheim  
 Germany

N° 11-71V0-7C0001\_D

Kennzeichnung	Marking	Marquage
	<b>Visualisierungseinheit</b> Ex db eb mb q [ib op pr] IIC T4 Gb Ex mb tb IIIC T120° C Db	
	<b>Zubehör</b> Ex ib IIC T4 Gb Ex ib IIIC T120° C Db	
	<b>USB Smart Device</b> Ex mb IIC T4 Gb Ex mb IIIC T120° C Db	
The marking is variable on type and components used		
Verfahren der EU-Baumusterprüfung / Benannte Stelle	Procedure of EU-Type Examination / Notified Body	Procédure d'examen UE de type / Organisme Notifié
IBExU 05 ATEX 1117 X 0637 IBExU, Fuchsmühlenweg 7, 09599 Freiberg, D		
		
Bad Mergentheim, den 07.12.2017		
 i.V. Nader Halmuschi Head of BU	 i.V. Gitta Kugler Director Global Test, Certification & IP Management	

 All certificates see [www.bartec.de](http://www.bartec.de)







